



MINING DEALER BEST PRACTICE

Install Protector GP-Edge 994K

**Maintenance and
Repair**

Application

**Component Life
Management**

**Component
Renewal (CRC)**

**MARC
Management**

Install Protector GP-Edge 994K	1
1.0 Introduction	2
2.0 Best Practice Description.....	2
3.0 Implementation Steps	3
4.0 Benefits	4
5.0 Resources Required	4
6.0 Supporting Attachments / References	4
7.0 Related Best Practices.....	4
8.0 Acknowledgements	4

DISCLAIMER: The information and potential benefits included in this document are based upon information provided by one or more Cat® dealers, and such dealer(s) opinion of “Best Practices.” Caterpillar makes no representation or warranty about the information contained in this document or the products referenced herein. Caterpillar welcomes additional “Best Practice” recommendations from our dealer network.

December 2021
1.10-211202-1

1.0 Introduction


Site has experienced some instances of missing 994K bucket shrouds CapSure system returning to the “unlock” position.

To prevent these occurrences the Technical Team is using a section of Seal-O-Ring (PN 6G-1546) in the CapSure slot. This prevents material from accumulating in the CapSure slot ensuring the locking system is fully actuated and remains in the “locked” position thereby preventing shroud loss.

Additionally, by preventing the accumulation and packing of material in the CapSure slot, downtime associated with shroud changes is reduced.

2.0 Best Practice Description

Site has experienced some instances of missing 994K bucket shrouds CapSure system returning to the “unlock” position, see the example below showing the CapSure system near the unlock position.

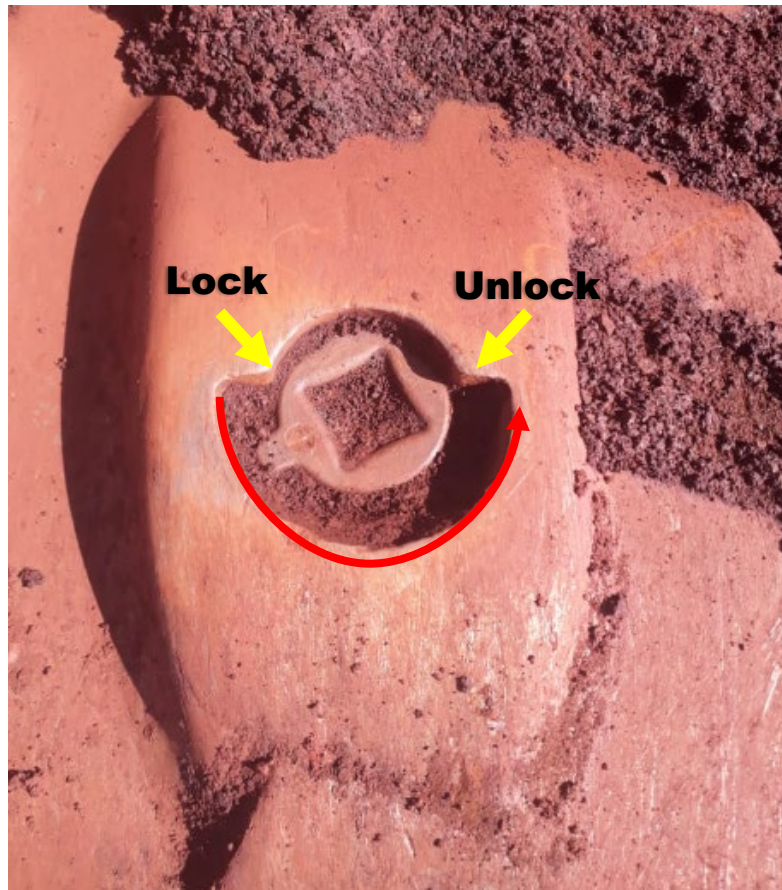

To prevent these occurrences the Technical Team is using a section of Seal-O-Ring (PN 6G-1546) in the CapSure slot. This prevents material from accumulating in the CapSure slot ensuring the locking system is fully actuated and remains in the “locked” position thereby preventing shroud loss.


THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF CATERPILLAR			
Install Protector GP-Edge 994K	DATE 12/2/2021	CHG NO 00	NUMBER 1.10-211202-1

As pictured below, place a 95 mm section of Seal-O-Ring PN 6G-1546 (Cross Section Diameter 12.7 mm) into the CapSure slot after locking the system and shroud in place.



3.0 Implementation Steps

- 1) Cut a 95 mm long section of Seal-O-Ring PN 6G-1546 or similar with cross section diameter of 12.7 mm.
- 2) Use screwdriver to install Seal-O-Ring into slot.

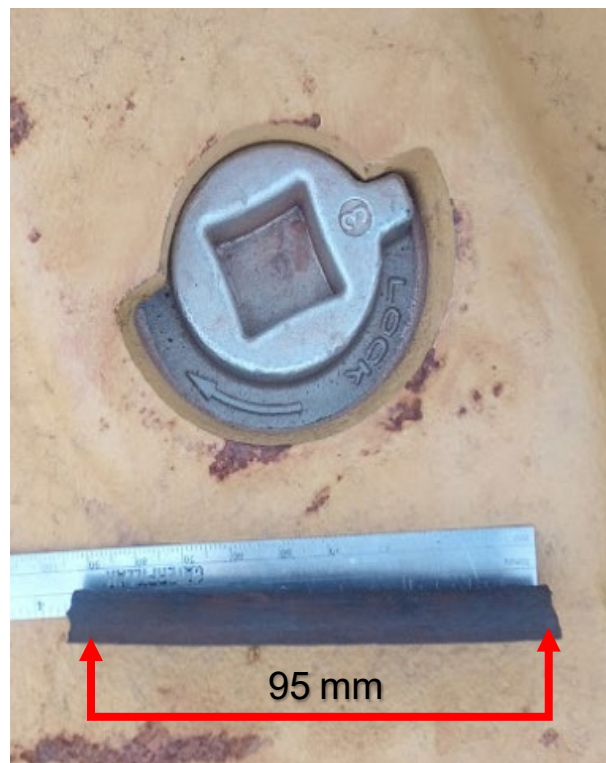

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF CATERPILLAR

Install Protector GP-Edge 994K	DATE 12/2/2021	CHG NO 00	NUMBER 1.10-211202-1
--------------------------------	-------------------	-----------------	-------------------------

4.0 Benefits

- Ensures CapSure system is placed and remains in “Lock” position.
- Prevents the accumulation of material in the CapSure slot.
- Easy slot cleaning when maintaining shrouds.
- Reduces shrouds change time.

5.0 Resources Required

- Seal-O-Ring 6G-1546 or similar with cross section diameter of 12.7 mm.

6.0 Supporting Attachments / References

N/A

7.0 Related Best Practices

- Improving GET Replacement Process

8.0 Acknowledgements

This best practice was written by:

Francisco Sales
 Technical Communicator
 + 55 94 9 3327-9900
 + 55 94 9 8123-0552
francisco.sales@sotreq.com.br

Also, special thanks to the Product Support Team, Infrastructure equipment Engineering Team, our commercial partners and Joaquim Jesus, technical communicator to LOHT.

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF CATERPILLAR			
Install Protector GP-Edge 994K	DATE 12/2/2021	CHG NO 00	NUMBER 1.10-211202-1