



DEALER BEST PRACTICE SERIES

Improved Method of Shimming and Replacing OHT Tray Pads

Maintenance and Repair	Application	Component Life Management	Component Renewal (CRC)	MARC Management
				Improved Method of Shimming and Replacing OHT Tray Pads.....0
				1.0 Introduction.....1
				2.0 Best Practice Description.....1
				3.0 Implementation Steps.....2
				4.0 Benefits.....2
				5.0 Resources Required.....3
				6.0 Supporting Attachments / References.....3
				7.0 Related Best Practices.....3
				8.0 Acknowledgements.....3

DISCLAIMER: The information and potential benefits included in this document are based upon information provided by one or more Cat® dealers, and such dealer(s) opinion of “Best Practices”. Caterpillar makes no representation or warranty about the information contained in this document or the products referenced herein. Caterpillar welcomes additional “Best Practice” recommendations from our dealer network.

The following document is provided as a resource for Caterpillar dealers and customer mine sites. Content was provided by one mine site to be shared with others as a suggested practice. Caterpillar shares it with you as a reference, not a requirement, and has not written, edited, validated, or specifically endorsed the content. Caterpillar reserves the right to add to, delete from, or remove this document entirely at any time in the future.

1.0 Introduction

The clearance between the OHT tray and the truck chassis has to be adjusted to ensure that there are no gaps between the two. The adjustment is made with the tray empty, and according to the instructions per the maintenance manual.

2.0 Best Practice Description

This Best Practice describes the use of a fabricated stand installed on both sides of the chassis rails. The fabricated stand is roughly 350mm in height for a 793 truck, but the exact height will vary depending on the OHT model. When used, the stands are securely clamped to the chassis rails with the tray resting on them. With the use of these stands the mechanic/ technician does not have to work with their arms raised and the risk of dropping of shims and bolts is lessened. Furthermore, the mechanic/ technician can work on a platform that is lower to the ground reducing working at height risks/ injuries.

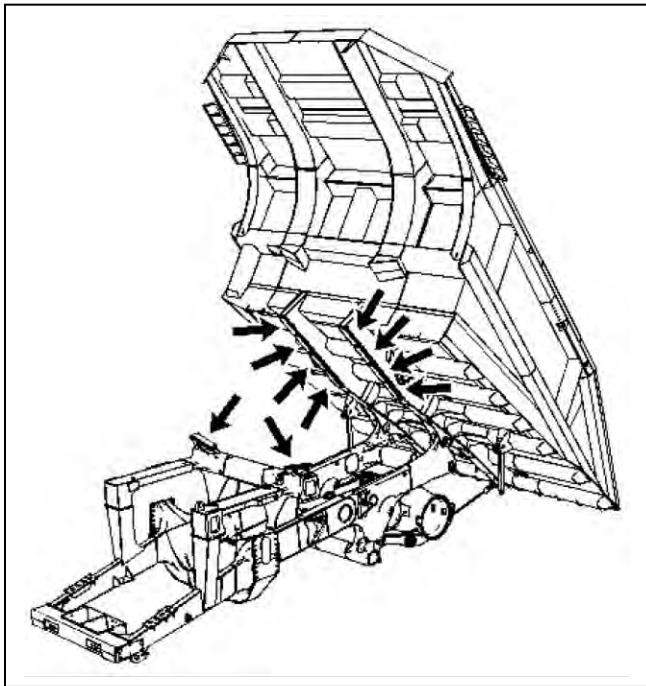


Figure 1: Location of pads on tray



Figure 2: Fabricated stand

Figure 1 shows a typical tray with the pad locations. The idea is to slip a stand between the chassis and the tray at the rear of the pads. The pads can therefore be shimmed without obstructions.

Figure 2 shows one fabricated stand. The stands are always used as a pair with one stand on either side. The height and shape of the stand will depend on the machine model. The one in figure 2 was used on a 793 OHT and is roughly 350mm in height. The stands should be high enough to allow the rearmost pad to be adjusted while not putting the front most pad too high. The model and the desired height of the stand also determine the angle of the top plate of the

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF CATERPILLAR

Improved Method Of Shimming & Replacing OHT Tray Pads	DATE 2/13/2015	CHG NO 00	NUMBER 1204-1.11-1272
--	-------------------	-----------------	--------------------------

stand. The bottom edge of the stand has nuts welded on both sides to secure the stand onto the chassis with bolts performing a clamping effect.

The stand shown in figure 2 is an actual stand that had been made for a 793D truck. The picture also shows the manufacturer's certification and testing plates. **These are support stands and must therefore be fabricated by accredited manufacturers of stands to the appropriate certified carrying capacities.** Figure 3 shows some general details of the stands in a simplified drawing.

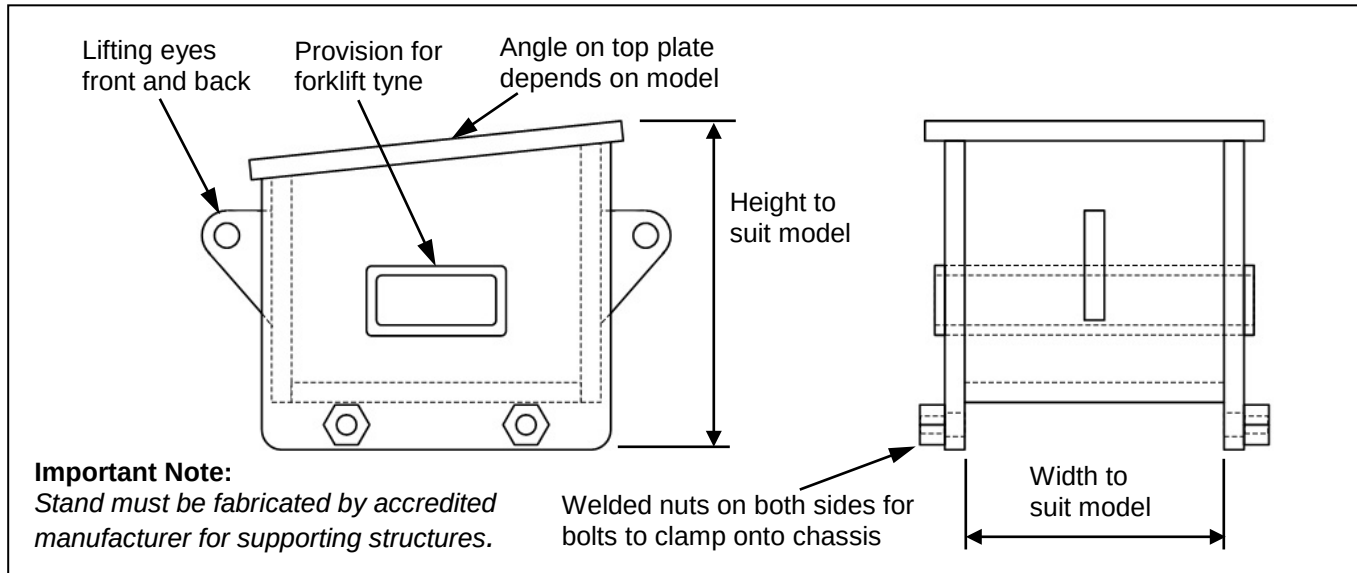


Fig 3: General details of the fabricated stand

3.0 Implementation Steps

Once the benefits of using these stands are recognized, an accredited supplier needs to be selected and the stands built.

1. Provide instructions on the use of such stands.
2. Select an accredited manufacturer / fabricator.
3. Measure appropriate machine models.
4. Have the stands built according to any local legislations, regulations, and safety standards.
5. Draft procedures on the use of the stands.
6. Provide instructions on the use of the stands.
7. Locate proper storage area for stands.
8. Include the stands on the standard periodic testing list of lifting gear and support stands.

4.0 Benefits

1. Ability to perform the task in a more comfortable position.
2. There is less risk of injury if a shim or bolt is accidentally dropped when performing the task.
3. The job is performed at a lower position in relation to the ground.
4. The job is potentially done in a shorter time.

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF CATERPILLAR			
Improved Method Of Shimming & Replacing OHT Tray Pads	DATE 2/13/2015	CHG NO 00	NUMBER 1204-1.11-1272

5.0 Resources Required

A competent individual, structural engineer or organization to design and manufacturer the stands to meet appropriate load bearing capacity for the OHT tray.

6.0 Supporting Attachments / References

Service Information System:
Body pads adjustment procedure
Body pads installation

7.0 Related Best Practices

No related Best Practices

8.0 Acknowledgements

This Best Practice is written with information collated at:

WesTrac Pty Ltd
Boddington MARC Site
Newmont Boddington Gold Mine
Western Australia, Australia

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF CATERPILLAR

Improved Method Of Shimming & Replacing OHT Tray Pads	DATE 2/13/2015	CHG NO 00	NUMBER 1204-1.11-1272
--	-------------------	-----------------	--------------------------