



DEALER BEST PRACTICE SERIES

Wheel Chock Mobility

Maintenance and Repair	Application	Component Life Management	Component Renewal (CRC)	MARC Management
---------------------------	-------------	---------------------------------	-------------------------------	--------------------

Wheel Chock Mobility	0
1.0 Introduction	1
2.0 Best Practice Description.....	1
3.0 Implementation Steps	3
4.0 Benefits.....	3
5.0 Resources Required	3
6.0 Supporting Attachments / References	3
7.0 Related Best Practices	3
8.0 Acknowledgements.....	3

DISCLAIMER: The information and potential benefits included in this document are based upon information provided by one or more Cat® dealers, and such dealer(s) opinion of “Best Practices”. Caterpillar makes no representation or warranty about the information contained in this document or the products referenced herein. Caterpillar welcomes additional “Best Practice” recommendations from our dealer network.

The following document is provided as a resource for Caterpillar dealers and customer mine sites. Content was provided by one mine site to be shared with others as a suggested practice. Caterpillar shares it with you as a reference, not a requirement, and has not written, edited, validated, or specifically endorsed the content. Caterpillar reserves the right to add to, delete from, or remove this document entirely at any time in the future.

1.0 Introduction

Wheel chocks used in mining workshops generally weigh more than 20kg (45lbs.). They normally have a handle to lift or drag along the floor with. In most instances, they are carried, manually slid along the floor or transported by a wheeled trolley. The last option of using wheeled trolley involves lifting the wheel chocks on and off.

2.0 Best Practice Description

Utilizing a wheeled trolley to mobilize wheel chocks involves manually lifting the wheel chocks on and off the trolley. Dragging the wheel chocks involves strain in the back and knees while bending over. An improved method of mobilizing wheel chocks is the use of wheeled bogeys that are dedicated to the wheel chocks. Figure 1 shows one such example. The bogey hooks onto the handle of the wheel chock and picks it up. It is then wheeled straight to the wheel and placed at the desired spot without any manual handling. The bogey is then unhooked by pivoting up the push handle and wheeled out of the way.

The handle should be approximately 0.9m to 1.2m (3-4ft) high when in the stationary position. The height will depend on the average height of the personnel on site. It should be such that an average person can push it along comfortably. It should be noted that the handle will be pushed down to lift the chock when pushing it along. Make sure to check that the handle will not contact the machine tire when the handle is pivoted up to release the chock.



Fig 1: Completed wheeled bogey (yellow band under chock is the wear plate of the chock)

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT CATERPILLAR'S WRITTEN PERMISSION.			
Wheel Chock Mobility	DATE 2/13/2015	CHG NO 00	NUMBER 1206-1.11-1281

Figure 2 shows a general cut-away drawing (not to scale) to indicate the relationship between the chock handle and the hook-up of the bogey. The dimensions of the wheeled bogey will depend on the wheel chock being used. Figures 3 and 4 show the two items unhooked.

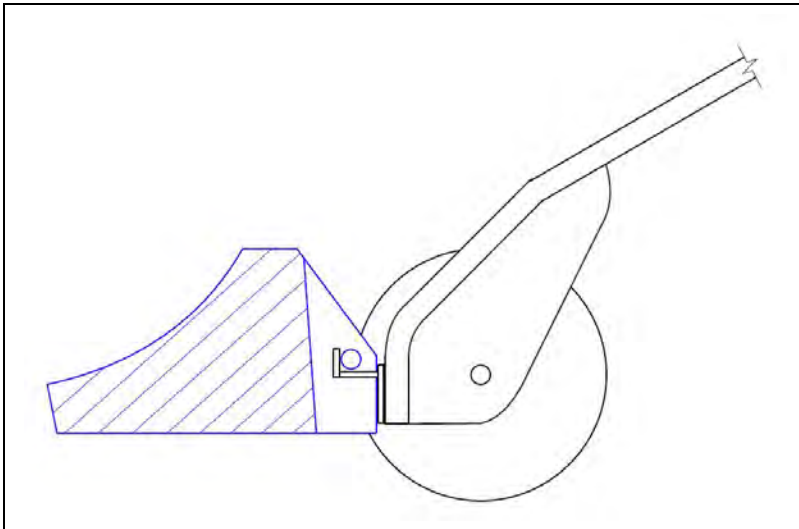


Fig 2: Hook up method



Fig 3: The two items separated



Fig 4: Chock about to be hooked up

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT CATERPILLAR'S WRITTEN PERMISSION.

Wheel Chock Mobility

DATE
2/13/2015

CHG
NO
00

NUMBER
1206-1.11-1281

3.0 Implementation Steps

The implementation steps should follow a similar order as listed below.

- i. Locate sample of wheel chock being used on site. There may be more than one type of wheel chock being used.
- ii. Make enquiries to wheel chock supplier if they have ready-made transportation bogeys. If there are, skip to step (v).
- iii. Research for a local supplier who specialises in light engineering fabrication.
- iv. Design the dimensions of the wheeled bogey with the supplier.
- v. Decide on quantity required.
- vi. Obtain quotations and order.
- vii. Mark out location in the workshop for the storage/parking of the bogeys.
- viii. Set out instructions on their use for all workshop personnel.
- ix. Notify workshop personnel when the product arrives.
- x. Ensure the wheeled bogeys are used.

4.0 Benefits

The benefit of using such a tool is mainly for personnel health in reducing bending and twisting injuries caused by manual handling of heavy objects. A secondary benefit is the increase in labor efficiency while moving wheel chocks to and from parked machines.

5.0 Resources Required

Minimal resources are required to implement this best practice. It will require clearly appointed person(s) in the workshop on site to ensure its implementation. The person(s) in charge of the workshop may be the Maintenance Superintendent or Dealer Project Manager on a MARC site.

6.0 Supporting Attachments / References

None

7.0 Related Best Practices

None

8.0 Acknowledgements

The information for this BP and pictures were obtained from:

WesTrac MARC
Boddington Gold Mine

Written by: Victor Lai

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT CATERPILLAR'S WRITTEN PERMISSION.			
Wheel Chock Mobility	DATE 2/13/2015	CHG NO 00	NUMBER 1206-1.11-1281