0. Preparation for installing the software - **ZK Outlander/MQ Triton**

0-1. Operation on "HOME" screen.



Touch and hold the [Settings] button.

Then SDA will display “Settings " screen.


0-2. Operation on "Settings" screen.



Switch pages with [<< / >>] button on "Settings" screen, and touch the [Information] tab.

Then SDA will display "Information" screen,

0-3. Operation on "Information" tab in "Settings" screen.

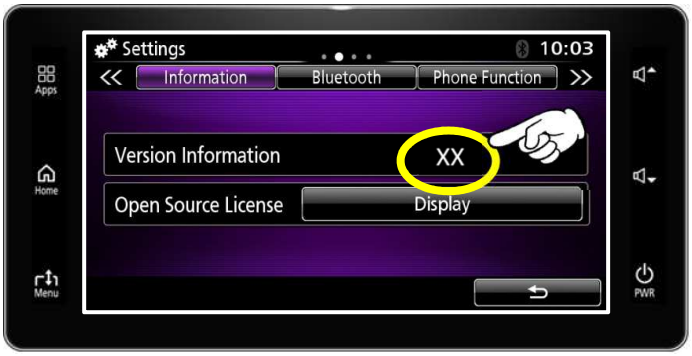

Check the contents of "Version Information".
Please update Software according to the following procedures if you can confirm that it is the version that displayed version information is listed in Hotline Fix.

Mitsubishi Motors Corporation. All rights reserved.

Confidential

1. Install software on the Smartphone Link Display Audio


1-1. Operation on "HOME" screen.



Touch and hold the [PWR] button for 5 seconds.

Then SDA will display “ Screen off " screen.

1-2. Operation on "Screen Off".

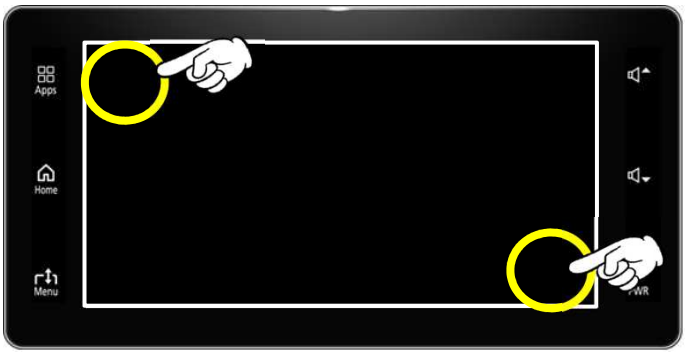


Touch and hold the “Left upper side “ on “ Screen off " Screen for 5 seconds.

Then SDA will output beep.

After beep, Touch the “Right lower side “ on “ Screen off " Screen.

Then SDA will display "Service Menu" screen.

1-3. Operation on "Service menu" screen.

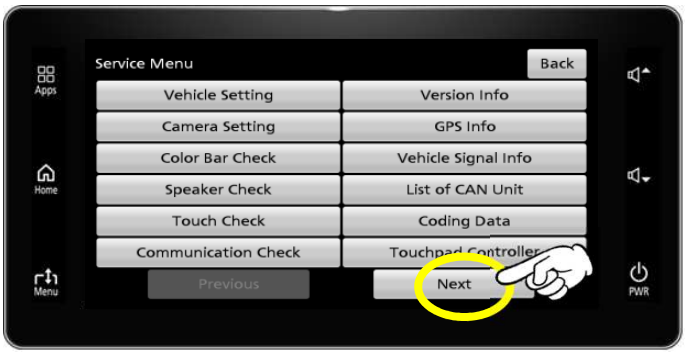

Touch the [Next] button on "Service Menu" Screen.

Then SDA will display 2nd page.



Note: Please ensure to plug in the USB device before this step.

Touch the [SW Update] button on Service Menu.

Then SDA will display “SW Update" screen.

Mitsubishi Motors Corporation. All rights reserved.

Confidential

2. Update Software and Reset the SDA

2-1. Operation on "SW Update" screen.



Touch the [Update] button.

Then SDA will start update of software.

After completion of Software update, SDA restarts.

[Update] button is tone up when there are Update software in the USB device.

Note: Please do not eject the USB device, during the software update.

2-2. Operation on "Opening" screen.



After SDA restart, Eject the USB device.

Touch the [Agree] button.

Then SDA will display "Home" screen.

2-3. Operation on "Home" screen.



Touch the [Settings] icon.

Then SDA will display "Settings" screen.

2-4. Operation on "Settings" screen.



Touch the [System] tab.

Mitsubishi Motors Corporation. All rights reserved.


Confidential

2-5. Operation on "System" tab in "Settings" screen.



Touch the [Reset All] button.

Note: [Reset All] function deletes the all of customer's settings.
Please obtain the customer's consent beforehand.

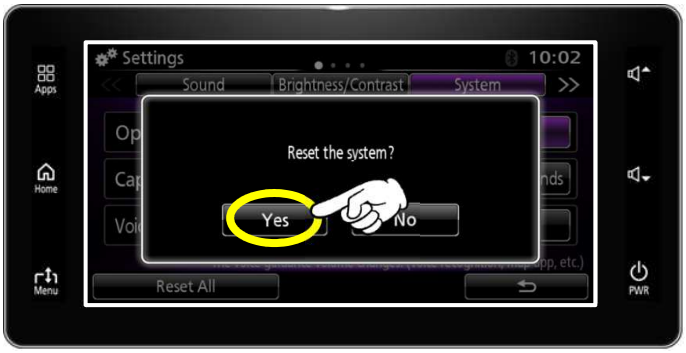

Then SDA will move to "Reset the System?" ask telop screen.

After press the [Yes], SDA begins All Reset.

Mitsubishi Motors Corporation. All rights reserved.

Confidential

3. Confirm software version.("Settings" Screen)

3-1. Operation on "HOME" screen.



Touch and hold the [Settings] button.

Then SDA will display “Settings " screen.


3-2. Operation on "Settings" screen.



Switch pages with [<< / >>] button on "Settings" scree
and touch the [Information] tab.

Then SDA will display "Information" screen,

3-3. Operation on "Information" tab in "Settings" screen.

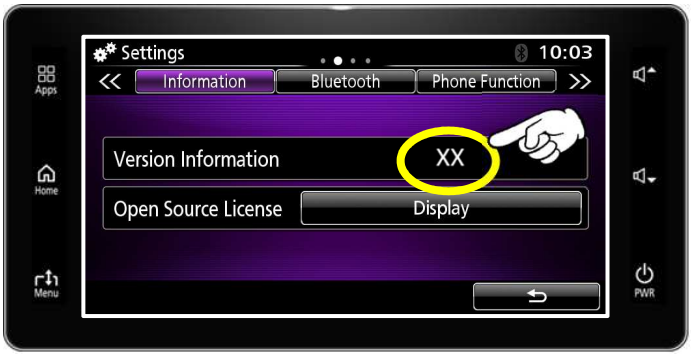

Check the contents of "Version Information".
If these versions are same as below, version up
is correctly finished.

S/W Ver.


1G

Mitsubishi Motors Corporation. All rights reserved.

Confidential

4. Confirm software version.（"Service menu" Screen）

4-1. Operation on "Screen Off" screen. (On any screen, touch and hold the “ PWR “ button for 5seconds.)

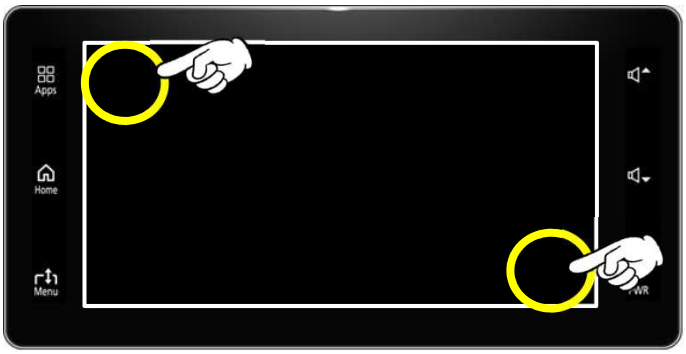


Touch and hold the “Left upper side “ on “ Screen off " Screen for 5 seconds.

Then SDA will output beep.

After beep, Touch the “Right lower side “ on “ Screen off " Screen.

Then SDA will display "Service Menu" screen.


4-2. Operation on "Service Menu" screen.

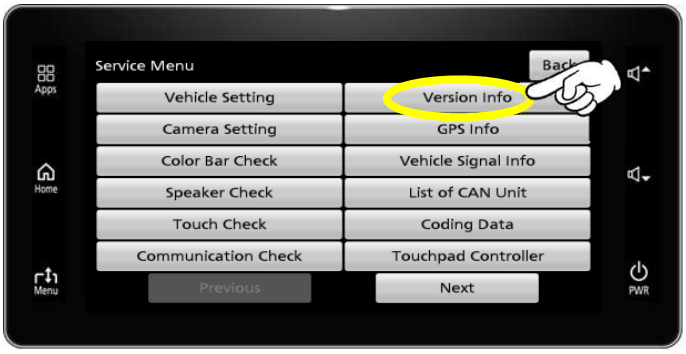


Touch the [Version Info] button on "Service Menu" screen.

Then SDA will display "Version Info" screen.

4-3. Operation on "Version Info" screen.

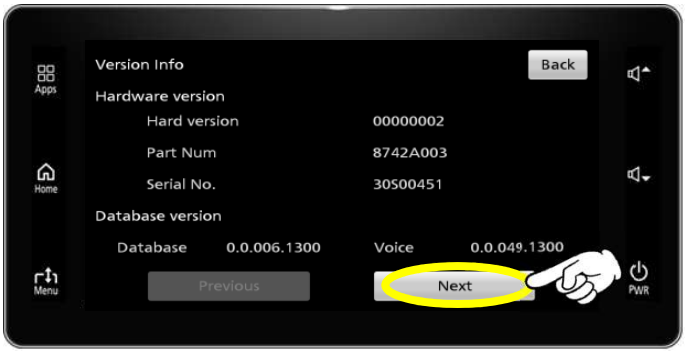

Touch the [Next] button on "Service Menu" screen.

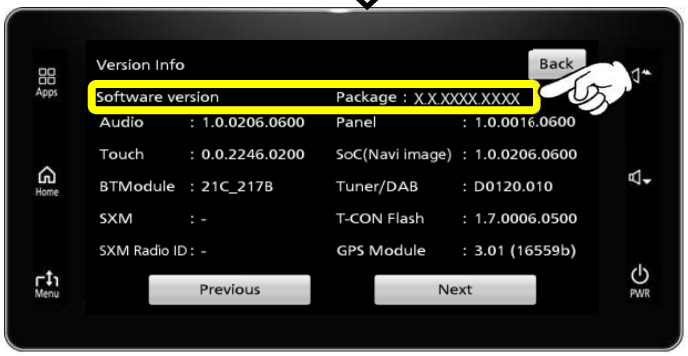

Confirm software version, if these versions are same as below, version up is correctly finished.

S/W Ver.

Package 4.0.0306.0500

Mitsubishi Motors Corporation. All rights reserved.