

Remove and Install Left Side Plate - Stark VARG MX 1.2 / EX

Video link: <https://www.youtube.com/watch?v=n6UB5h2uEY4>

Source video: Remove and Install Left Side Plate - Stark VARG MX 1.2 by Stark Future Official

Applicable models: MX 1.2 / EX

Scope

This guide converts the official Stark Future tutorial video into a step-by-step workshop procedure. It documents each action shown in the video in sequence and pairs every step with a dedicated screenshot.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure

1. Unscrew the side plate bolts

Unscrew the side plate bolts.



2. Unscrew the subframe to seat base bolt under the rear fender

Unscrew the subframe to seat base bolt under the rear fender.



3. Unscrew the four front bolts on the side spoilers

Unscrew the four front bolts on the side spoilers.



4. Carefully remove the spoiler assembly by sliding it backwards

Carefully remove the spoiler assembly by sliding it backwards.



5. Unscrew the four bolts that attach the rear fender to the subframe

Unscrew the four bolts that attach the rear fender to the subframe.



6. Carefully remove the rear fender from the bike

Carefully remove the rear fender from the bike.



7. Unscrew the top shock shaft nut

Unscrew the top shock shaft nut.



8. Unscrew the bottom shock shaft nut

Unscrew the bottom shock shaft nut.



9. Carefully remove the bottom shaft

Carefully remove the bottom shaft.

Gently lift the rear wheel to remove the shaft, and then carefully lower the wheel to the ground.



10. Firmly hold the rear shock and carefully remove it from the bike

Firmly hold the rear shock and carefully remove it from the bike.



11. Unscrew the left foot peg pin

Unscrew the left foot peg pin.




12. Remove the foot peg from the side plate

Remove the foot peg from the side plate.



13. Unscrew the bolt securing the left side plate to the bottom beam

Unscrew the bolt securing the left side plate to the bottom beam.

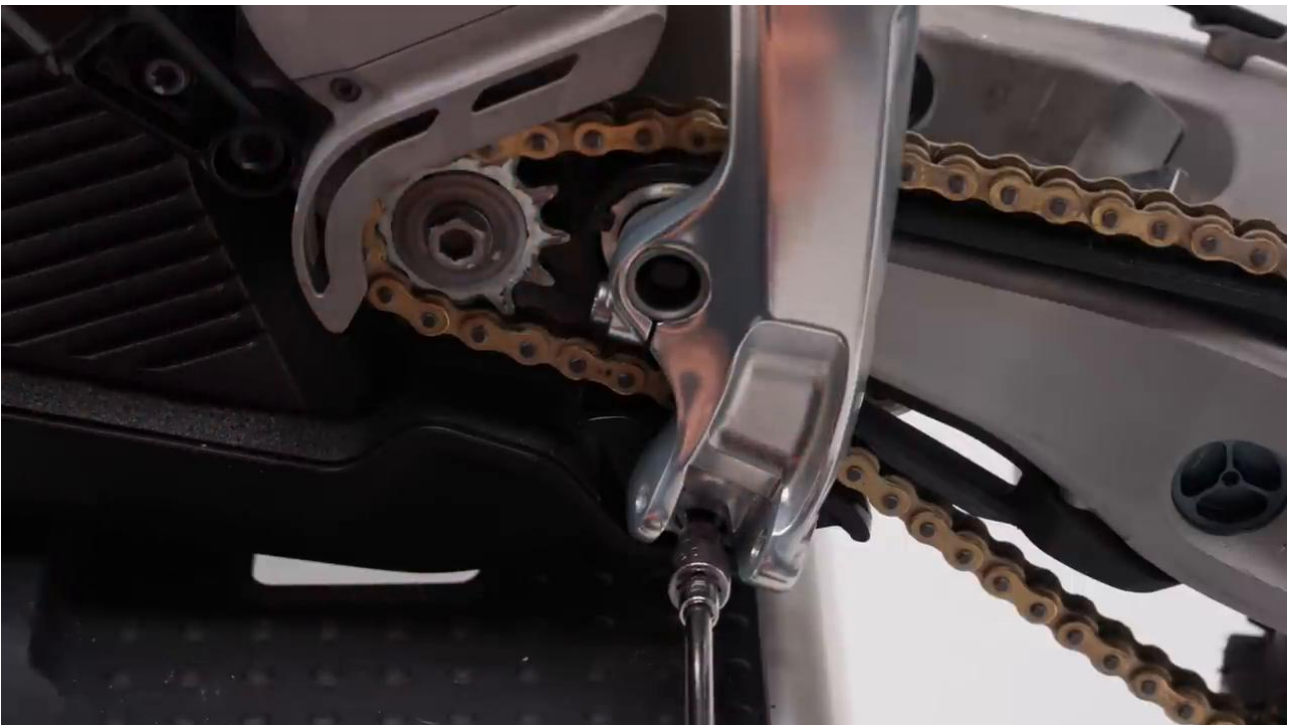


14. Loosen the swingarm shaft clamp bolt

Loosen the swingarm shaft clamp bolt.



15. Unscrew the inner bolt securing the left side plate to the motor case

Unscrew the inner bolt securing the left side plate to the motor case.

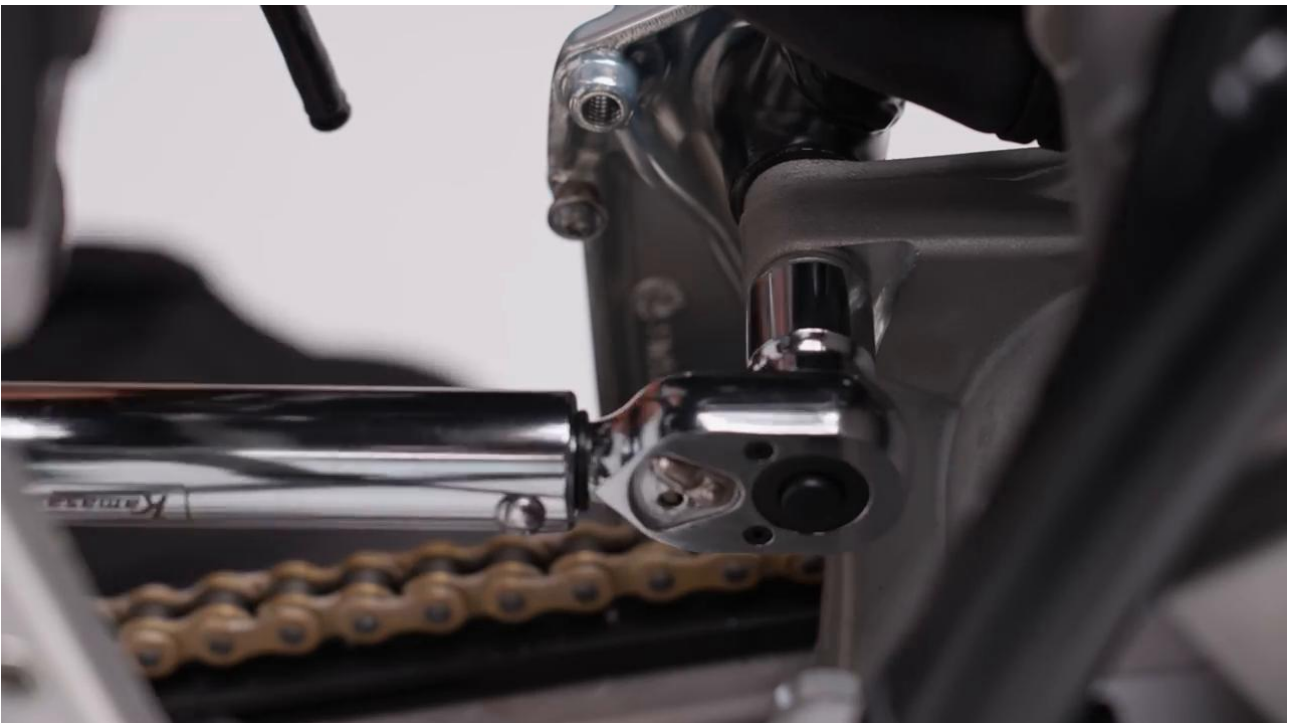

16. Carefully remove the left side plate

Carefully remove the left side plate.



Installation Procedure

17. Apply grease to the side plate-to-frame insert and swingarm shaft

Apply grease to the side plate-to-frame insert and swingarm shaft.



18. Place the lower chain slider into the left side plate

Place the lower chain slider into the left side plate.



19. Place the left side plate on its position

Place the left side plate on its position.



20. Apply grease and thread locker to the bolt securing the side plate to the motor case, and tighten it to 45 Nm

Apply grease and thread locker to the bolt securing the side plate to the motor case, and tighten it to **45 Nm**.



21. Apply thread locker to the bolt securing the side plate to the bottom beam and tighten it to 30 Nm

Apply thread locker to the bolt securing the side plate to the bottom beam and tighten it to **30 Nm**.



22. Tighten the swingarm shaft clamp bolt to 25 Nm

Tighten the swingarm shaft clamp bolt to **25 Nm**.



23. Position the left foot peg into the left side plate

Position the left foot peg into the left side plate.



24. Tighten the foot peg pin to 20 Nm

Tighten the foot peg pin to **20 Nm**.



25. Carefully place the rear shock into the bike

Carefully place the rear shock into the bike.



26. Install the top shock shaft

Install the top shock shaft.

Ensure that it fits correctly into the subframe.



27. Tighten the top shock shaft nut to 40 Nm

Tighten the top shock shaft nut to **40 Nm**.



28. Install the bottom shock shaft

Install the bottom shock shaft.

Gently lift the rear wheel to install the through the rear shock and rocker arm.



29. Tighten the bottom shock shaft nut to 40 Nm

Tighten the bottom shock shaft nut to **40 Nm**.



30. Carefully position the rear fender between the subframe and the rear wheel

Carefully position the rear fender between the subframe and the rear wheel.



31. Tighten the four bolts that attach the rear fender to the subframe to 5 Nm

Tighten the four bolts that attach the rear fender to the subframe to **5 Nm**.



32. Position the spoiler assembly on top of the bike and slide it forward and downward

Position the spoiler assembly on top of the bike and slide it forward and downward.



33. Tighten the four front bolts to 5 Nm

Tighten the four front bolts to **5 Nm**.



34. Tighten the subframe to seat base bolt to 10 Nm

Tighten the subframe to seat base bolt to **10 Nm**.



35. Tighten the side plate bolts to 20 Nm

Tighten the side plate bolts to **20 Nm**.



Torque Summary

Component	Torque
Apply grease and thread locker to the bolt securing the side plate to the motor case, and tighten it	45 Nm
Apply thread locker to the bolt securing the side plate to the bottom beam and tighten it	30 Nm
Tighten the swingarm shaft clamp bolt	25 Nm
Tighten the foot peg pin	20 Nm
Tighten the top shock shaft nut	40 Nm
Tighten the bottom shock shaft nut	40 Nm
Tighten the four bolts that attach the rear fender to the subframe	5 Nm
Tighten the four front bolts	5 Nm
Tighten the subframe to seat base bolt	10 Nm
Tighten the side plate bolts	20 Nm

Video-sourced torque items:

- Apply grease and thread locker to the bolt securing the side plate to the motor case, and tighten it: **45 Nm** from the official Stark tutorial video.
- Apply thread locker to the bolt securing the side plate to the bottom beam and tighten it: **30 Nm** from the official Stark tutorial video.
- Tighten the swingarm shaft clamp bolt: **25 Nm** from the official Stark tutorial video.
- Tighten the foot peg pin: **20 Nm** from the official Stark tutorial video.
- Tighten the top shock shaft nut: **40 Nm** from the official Stark tutorial video.
- Tighten the bottom shock shaft nut: **40 Nm** from the official Stark tutorial video.
- Tighten the four bolts that attach the rear fender to the subframe: **5 Nm** from the official Stark tutorial video.
- Tighten the four front bolts: **5 Nm** from the official Stark tutorial video.
- Tighten the subframe to seat base bolt: **10 Nm** from the official Stark tutorial video.
- Tighten the side plate bolts: **20 Nm** from the official Stark tutorial video.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.