

Remove and Install Footbrake - Stark VARG MX 1.2 / EX

Video link: <https://www.youtube.com/watch?v=JBqwHpLQ798>

Source video: Remove and Install Footbrake - Stark VARG MX 1.2 by Stark Future Official

Applicable models: MX 1.2 / EX

Scope

This guide converts the official Stark Future tutorial video into a step-by-step workshop procedure. It documents each action shown in the video in sequence and pairs every step with a dedicated screenshot.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure

1. Unscrew the rear wheel shaft lock nut and press the shaft outwards

Unscrew the rear wheel shaft lock nut and press the shaft outwards.



2. Remove the rear wheel shaft

Remove the rear wheel shaft.



3. Remove the chain from the rear sprocket

Remove the chain from the rear sprocket.



4. Carefully remove the rear wheel

Carefully remove the rear wheel.



5. Loosen and remove the lever rod-to-brake pedal bolt


Loosen and remove the lever rod-to-brake pedal bolt.

Carefully collect the spring and spring housing during removal.



6. Loosen and remove both bolts from the rear brake master cylinder bracket

Loosen and remove both bolts from the rear brake master cylinder bracket.

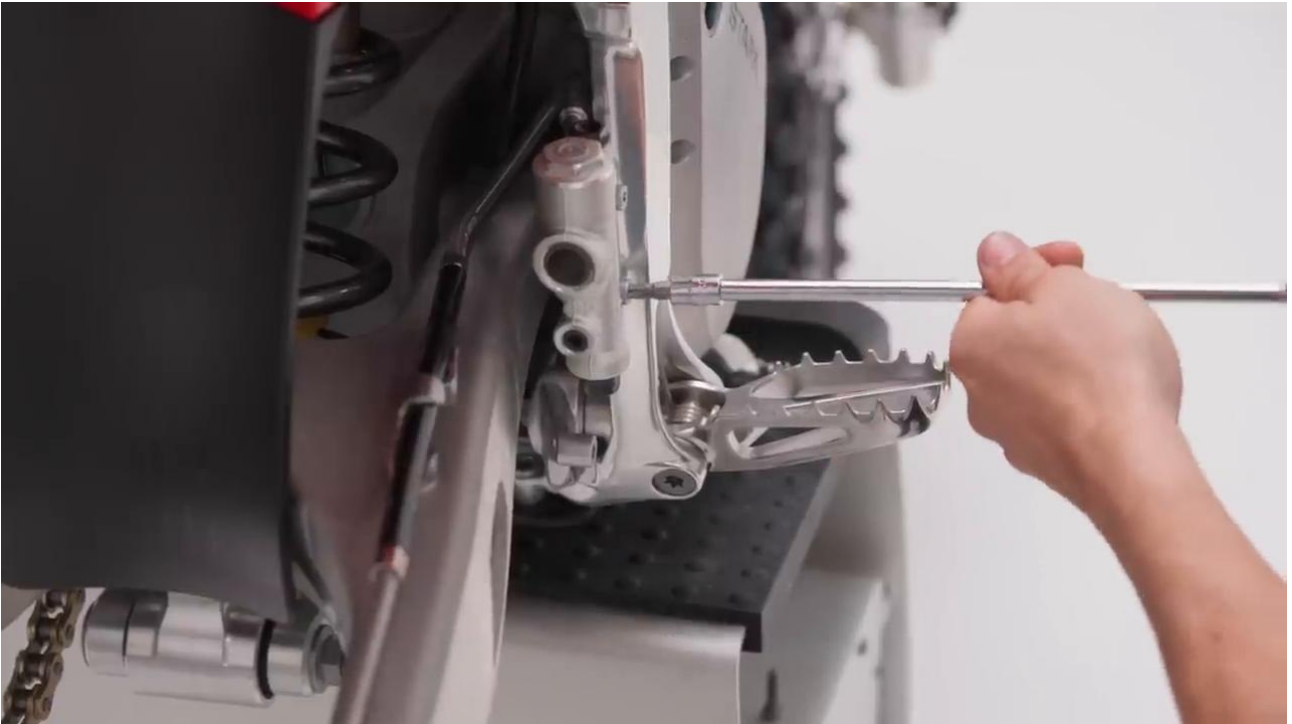

7. Remove the rear foot brake assembly from the bike

Remove the rear foot brake assembly from the bike.




8. Unscrew the rear brake pedal sway bolt

Unscrew the rear brake pedal sway bolt.



9. Carefully remove the rear brake pedal

Carefully remove the rear brake pedal.

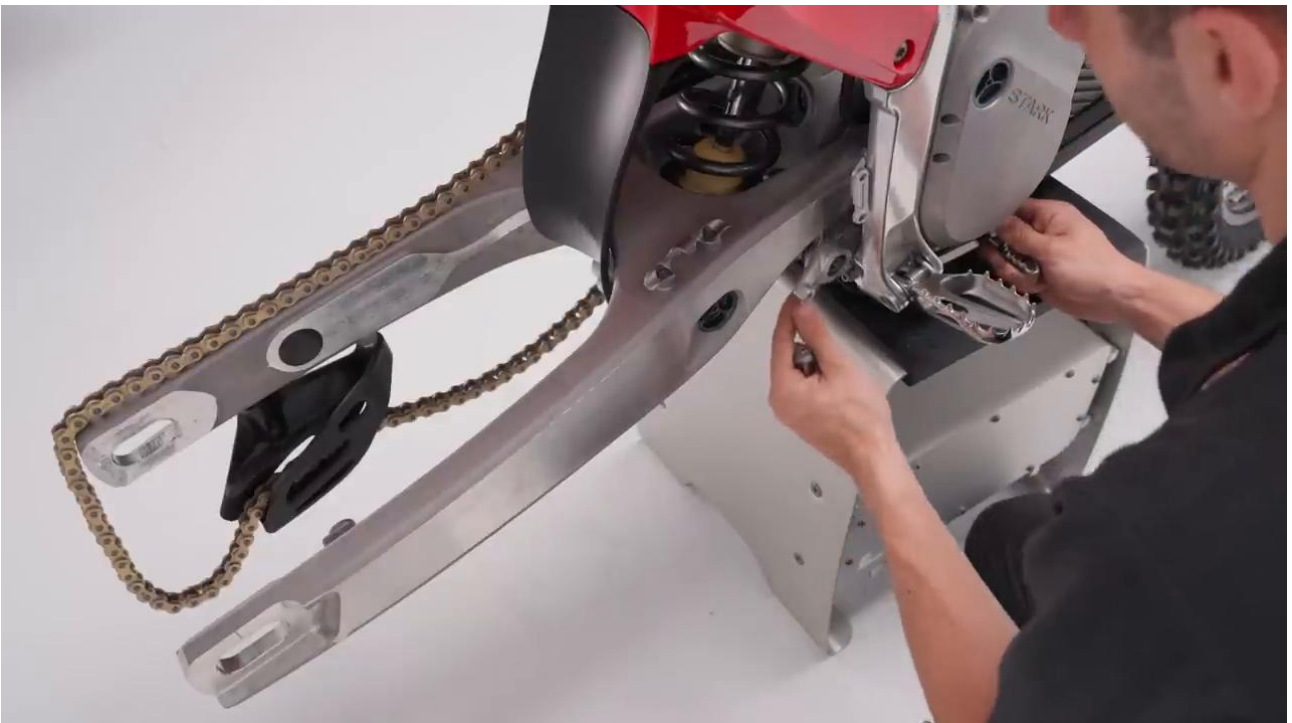

10. Unscrew and remove the stopper bolt from the frame

Unscrew and remove the stopper bolt from the frame.



11. Loosen and remove both bolts to detach the rear foot brake master cylinder from the frame

Loosen and remove both bolts to detach the rear foot brake master cylinder from the frame.



Installation Procedure

12. Apply thread locker to both rear foot brake master cylinder bracket-to-frame bolts before tighten them to 10 Nm

Apply thread locker to both rear foot brake master cylinder bracket-to-frame bolts before tighten them to **10 Nm**.



13. Adjust the stopper bolt to the correct position, then tighten the locknut and torque the stopper bolt to 10 Nm

Adjust the stopper bolt to the correct position, then tighten the locknut and torque the stopper bolt to 10 Nm.



14. Install the brake pedal in its position and tighten the sway bolt to 20 Nm

Install the brake pedal in its position and tighten the sway bolt to 20 Nm.



15. Position the rear foot brake assembly in place

Position the rear foot brake assembly in place.



16. Apply thread locker to both rear foot brake master cylinder to bracket bolts, then tighten them to 10 Nm

Apply thread locker to both rear foot brake master cylinder to bracket bolts, then tighten them to **10 Nm**.

Ensure the hose does not come into contact with the right side plate.



17. Carefully position the spring and spring housing, then insert the push rod into the rear foot brake master cylinder

Carefully position the spring and spring housing, then insert the push rod into the rear foot brake master cylinder.



18. Tighten the lever rod-to-brake pedal bolt to 10 Nm

Tighten the lever rod-to-brake pedal bolt to **10 Nm**.



19. Carefully position the wheel and ensure it is aligned with the swingarm and rear brake caliper. 08.59 Install the chain onto the rear sprocket

Carefully position the wheel and ensure it is aligned with the swingarm and rear brake caliper. 08.59 Install the chain onto the rear sprocket.



20. Install the rear wheel shaft and secure it with the lock nut after placing the chain tensioner

Install the rear wheel shaft and secure it with the lock nut after placing the chain tensioner. Final torque is applied in step 22.



21. Ensure the chain is properly tensioned by placing a cloth between the chain and the rear sprocket

Ensure the chain is properly tensioned by placing a cloth between the chain and the rear sprocket.



22. Tighten the rear wheel shaft lock nut to 80 Nm

Tighten the rear wheel shaft lock nut to **80 Nm**.



23. Check chain tension and brake system

Check chain tension and brake system.



Torque Summary

Component	Torque
Apply thread locker to both rear foot brake master cylinder bracket-to-frame bolts before tighten them	10 Nm
Adjust the stopper bolt to the correct position, then tighten the locknut and torque the stopper bolt	10 Nm
Install the brake pedal in its position and tighten the sway bolt	20 Nm
Apply thread locker to both rear foot brake master cylinder to bracket bolts, then tighten them	10 Nm
Tighten the lever rod-to-brake pedal bolt	10 Nm
Tighten the rear wheel shaft lock nut	80 Nm

Video-sourced torque items:

- Apply thread locker to both rear foot brake master cylinder bracket-to-frame bolts before tighten them: **10 Nm** from the official Stark tutorial video.
- Adjust the stopper bolt to the correct position, then tighten the locknut and torque the stopper bolt: **10 Nm** from the official Stark tutorial video.
- Install the brake pedal in its position and tighten the sway bolt: **20 Nm** from the official Stark tutorial video.
- Apply thread locker to both rear foot brake master cylinder to bracket bolts, then tighten them: **10 Nm** from the official Stark tutorial video.
- Tighten the lever rod-to-brake pedal bolt: **10 Nm** from the official Stark tutorial video.
- Tighten the rear wheel shaft lock nut: **80 Nm** from the official Stark tutorial video.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.