

# Remove and Install Radiator - Stark VARG MX 1.2 / EX

Video link: [https://www.youtube.com/watch?v=NoN5L\\_\\_G2m8](https://www.youtube.com/watch?v=NoN5L__G2m8)

Source video: Remove and Install Radiator - Stark VARG MX 1.2 by Stark Future Official

Applicable models: MX 1.2 / EX

## Scope

This guide converts the official Stark Future tutorial video into a step-by-step workshop procedure. It documents each action shown in the video in sequence and pairs every step with a dedicated screenshot.

## Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

## Removal Procedure

### 1. Unscrew the side plate bolts

Unscrew the side plate bolts.



## 2. Unscrew the subframe to seat base bolt under the rear fender

Unscrew the subframe to seat base bolt under the rear fender.



## 3. Unscrew the four front bolts on the side spoilers

Unscrew the four front bolts on the side spoilers.



#### **4. Carefully remove the spoiler assembly by sliding it backwards**

Carefully remove the spoiler assembly by sliding it backwards.



#### **5. Remove the four skid plate screws**

Remove the four skid plate screws





## 6. Carefully remove the skid plate from the battery

Carefully remove the skid plate from the battery.



## 7. Place a container underneath the bike to collect the drained coolant


Place a container underneath the bike to collect the drained coolant.



## 8. Loosen and remove the coolant drain bolt

Loosen and remove the coolant drain bolt.

Carefully remove and properly dispose of the copper washer.

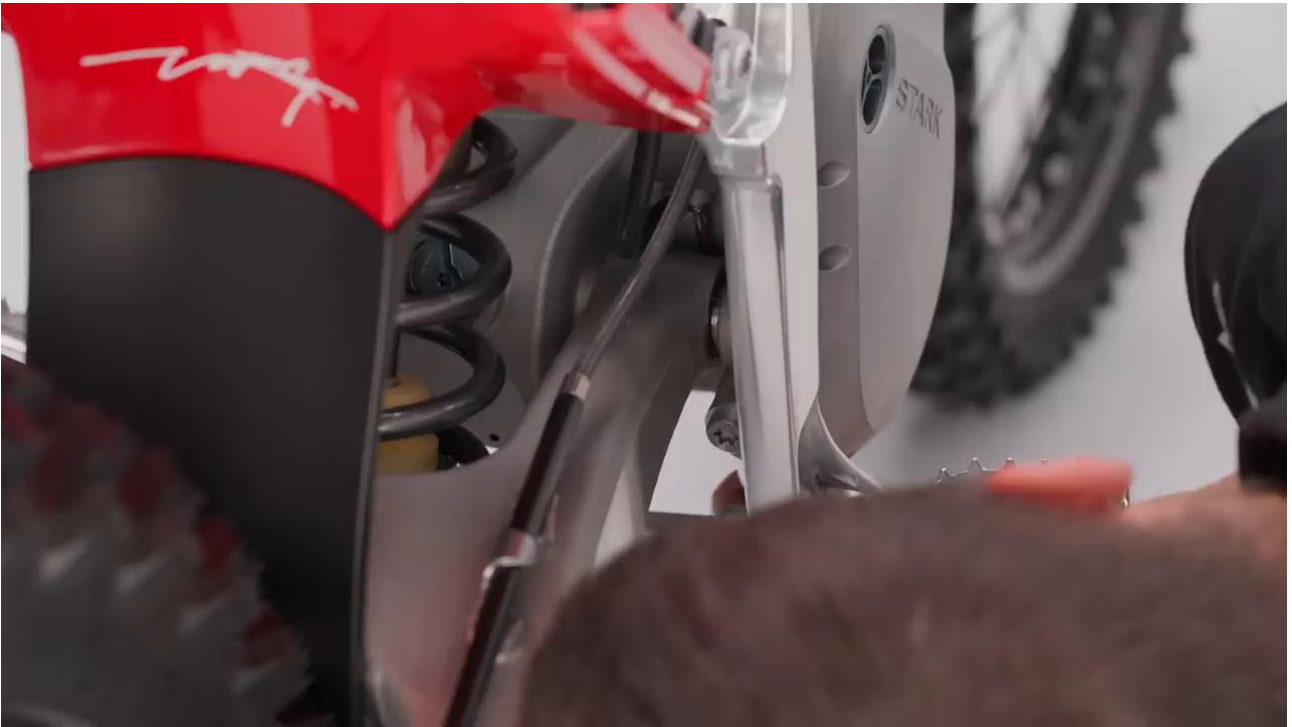

## 9. Loosen the radiator cap to allow the coolant to drain

Loosen the radiator cap to allow the coolant to drain.




#### 10. Unscrew the four bolts that attach the rear fender to the subframe

Unscrew the four bolts that attach the rear fender to the subframe.



#### 11. Carefully remove the rear fender from the bike

Carefully remove the rear fender from the bike.

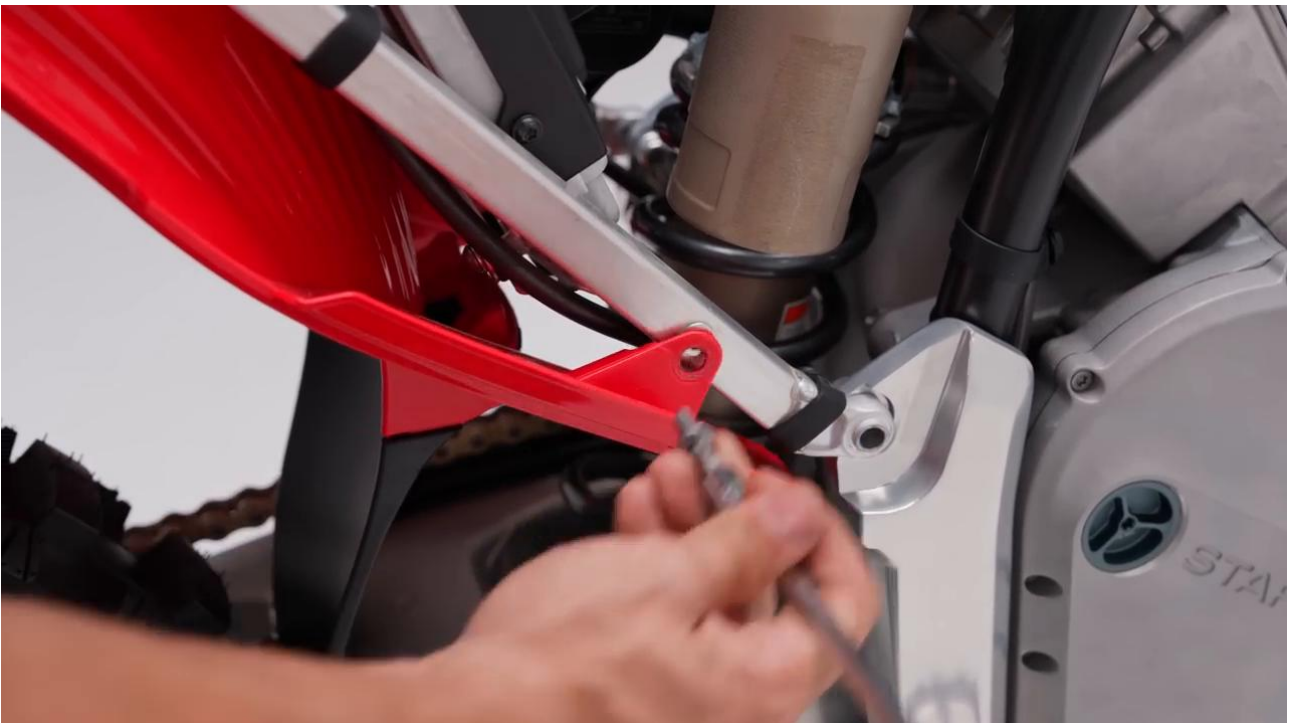



## 12. Remove the bleeding hose clamp from the water pump

Remove the bleeding hose clamp from the water pump



## 13. Unplug the fan connector

Unplug the fan connector.



**14. Remove the radiator hose clamps and slide them back from their original position**

Remove the radiator hose clamps and slide them back from their original position.



**15. Remove the water pump strap**

Remove the water pump strap.





### **16. Remove the hoses by pulling them backward**

Remove the hoses by pulling them backward.

Handle the clamps carefully, as they have sharp edges.




### **17. Remove the bolts securing the radiator to the subframe**

Remove the bolts securing the radiator to the subframe.



### **18. Carefully remove the radiator assembly from the bike**

Carefully remove the radiator assembly from the bike.

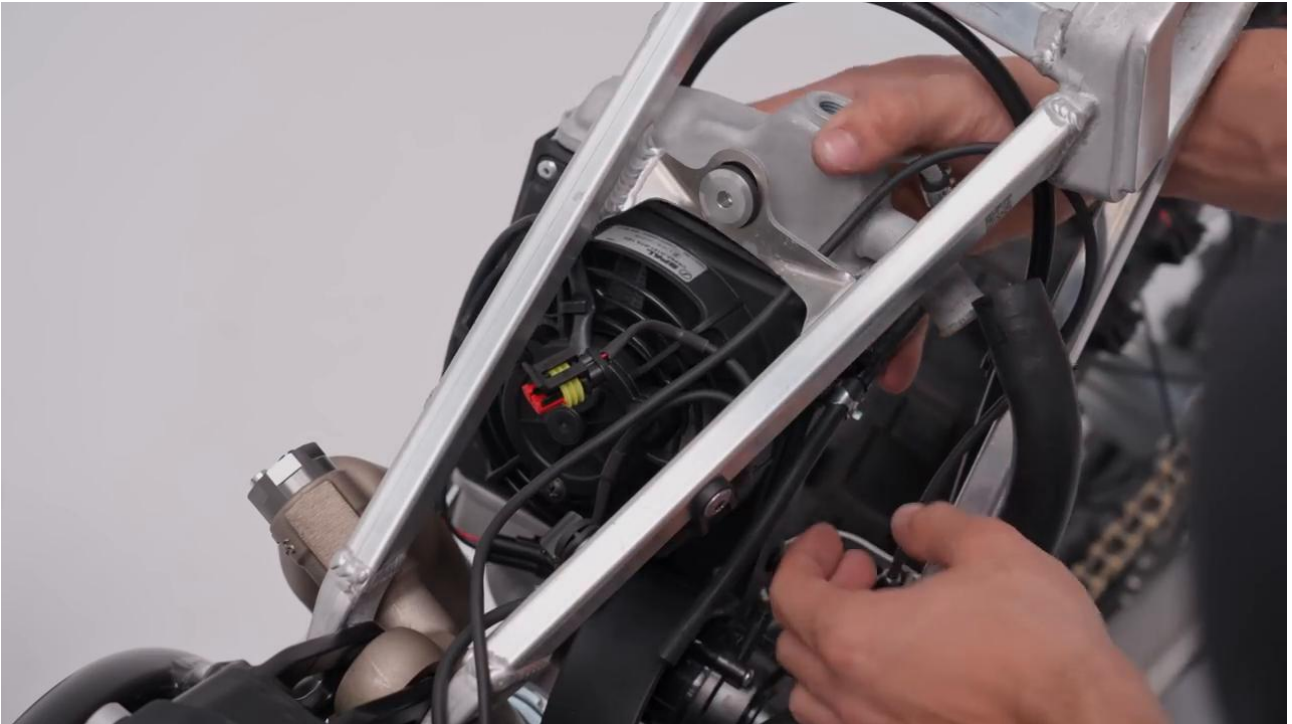

## **Installation Procedure**

### **19. Carefully place the radiator into its position**

Carefully place the radiator into its position.



## 20. Tighten the bolts securing the radiator to the subframe to 5 Nm

Tighten the bolts securing the radiator to the subframe to **5 Nm**.



## 21. Connect the radiator bleed hose to the water pump

Connect the radiator bleed hose to the water pump.





## **22. Connect the radiator hoses by pushing them securely into position**

Connect the radiator hoses by pushing them securely into position.

Handle the clamps carefully, as they have sharp edges.

The hose clamp torque is not shown in the video; verify the official Stark specification if clamp tightening is required.



## **23. Secure the water pump by positioning its rubber strap correctly**

Secure the water pump by positioning its rubber strap correctly.



#### **24. Secure the radiator bleed hose clamp in its proper position**

Secure the radiator bleed hose clamp in its proper position.

The bleed hose clamp torque is not shown in the video; verify the official Stark specification if clamp tightening is required.



**25. Secure the radiator hose clamps in their proper positions. Note: Ensure that no cables are in contact with the clamps**

Secure the radiator hose clamps in their proper positions. Note: Ensure that no cables are in contact with the clamps.

The hose clamp torque is not shown in the video; verify the official Stark specification if clamp tightening is required.



**26. Connect the fan and secure the connector in the subframe bracket**

Connect the fan and secure the connector in the subframe bracket.





**27. Carefully position the rear fender between the subframe and the rear wheel**

Carefully position the rear fender between the subframe and the rear wheel.



**28. Tighten the four bolts that attach the rear fender to the subframe to 5 Nm**

Tighten the four bolts that attach the rear fender to the subframe to **5 Nm**.



**29. Install a new copper washer on the coolant drain bolt, then tighten it to 5 Nm**

Install a new copper washer on the coolant drain bolt, then tighten it to **5 Nm**.



**30. Fill the cooling system to the top with glycol-based coolant**

Fill the cooling system to the top with glycol-based coolant.



**31. Switch the bike ON and OFF as needed to allow the water pump to circulate the coolant and purge any air from the system**

Switch the bike ON and OFF as needed to allow the water pump to circulate the coolant and purge any air from the system.



**32. Tighten the radiator cap to 7 Nm**

Tighten the radiator cap to 7 Nm.





### 33. Place the skid plate into its position

Place the skid plate into its position.



### 34. Tighten the four skid plate bolts to 15 Nm

Tighten the four skid plate bolts to **15 Nm**.



**35. Position the spoiler assembly on top of the bike and slide it forward and downward**

Position the spoiler assembly on top of the bike and slide it forward and downward.



**36. Tighten the four front bolts to 5 Nm**

Tighten the four front bolts to **5 Nm**.



### 37. Tighten the subframe to seat base bolt to 10 Nm

Tighten the subframe to seat base bolt to **10 Nm**.



### 38. Tighten the side plate bolts to 20 Nm

Tighten the side plate bolts to **20 Nm**.





## Torque Summary

| Component                                                              | Torque |
|------------------------------------------------------------------------|--------|
| Tighten the bolts securing the radiator to the subframe                | 5 Nm   |
| Tighten the four bolts that attach the rear fender to the subframe     | 5 Nm   |
| Install a new copper washer on the coolant drain bolt, then tighten it | 5 Nm   |
| Tighten the radiator cap                                               | 7 Nm   |
| Tighten the four skid plate bolts                                      | 15 Nm  |
| Tighten the four front bolts                                           | 5 Nm   |
| Tighten the subframe to seat base bolt                                 | 10 Nm  |
| Tighten the side plate bolts                                           | 20 Nm  |

Video-sourced torque items:

- Tighten the bolts securing the radiator to the subframe: **5 Nm** from the official Stark tutorial video.
- Tighten the four bolts that attach the rear fender to the subframe: **5 Nm** from the official Stark tutorial video.
- Install a new copper washer on the coolant drain bolt, then tighten it: **5 Nm** from the official Stark tutorial video.
- Tighten the radiator cap: **7 Nm** from the official Stark tutorial video.
- Tighten the four skid plate bolts: **15 Nm** from the official Stark tutorial video.
- Tighten the four front bolts: **5 Nm** from the official Stark tutorial video.
- Tighten the subframe to seat base bolt: **10 Nm** from the official Stark tutorial video.
- Tighten the side plate bolts: **20 Nm** from the official Stark tutorial video.

## Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.