

How to remove and install the Front Indicators on your Stark VARG EX

Video link: <https://www.youtube.com/watch?v=J5YUXsPOPCE>

Source video: How to remove and install the Front Indicators on your Stark VARG EX by Stark Future Official

Applicable models: EX

Scope

This guide follows the same step-by-step workshop structure as the MX tutorials, but it is derived as a visual sequence from the official Stark Future ASMR video. Because the EX video does not provide usable captions or narration, the procedure is documented through curated screenshots and concise action guidance.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure

1. Remove the fasteners or panels that block access to the Front Indicators

Remove the front mask hardware and move the mask into a service position so the indicator wiring and retainers are exposed.

Keep the removed hardware organized in sequence so the same covers and brackets can be returned during assembly.



2. Release the clips and routing points for the Front Indicators

Release the front-indicator leads from the clips and guides on the back of the mask.

Document the original routing so the same path and slack are restored during installation.



3. Disconnect the Front Indicators

Disconnect the front-indicator leads at the rear of the mask.

Release the connector lock first and avoid pulling on the wire itself.



4. Remove the retaining hardware for the Front Indicators

Remove the indicator-retaining hardware from the mask while supporting each indicator stalk.

Support the component as the last fastener is removed so it does not drop or hang on the wiring.



5. Remove the Front Indicators from the bike

Withdraw the front indicators from the mask and feed their leads out cleanly.

Keep any washers, spacers, sleeves, or rubber mounts with the removed component for reassembly.



Installation Procedure

6. Position the Front Indicators for installation

Position each front indicator back into the mask and route the lead through the original opening.


Confirm that no cable is trapped behind the component before the fasteners are started.



7. Reconnect the Front Indicators and route the wiring correctly

Reconnect the front-indicator leads and return them to the original clips and guides on the back of the mask.

Check that the wiring has enough slack for steering, suspension, and normal component movement.

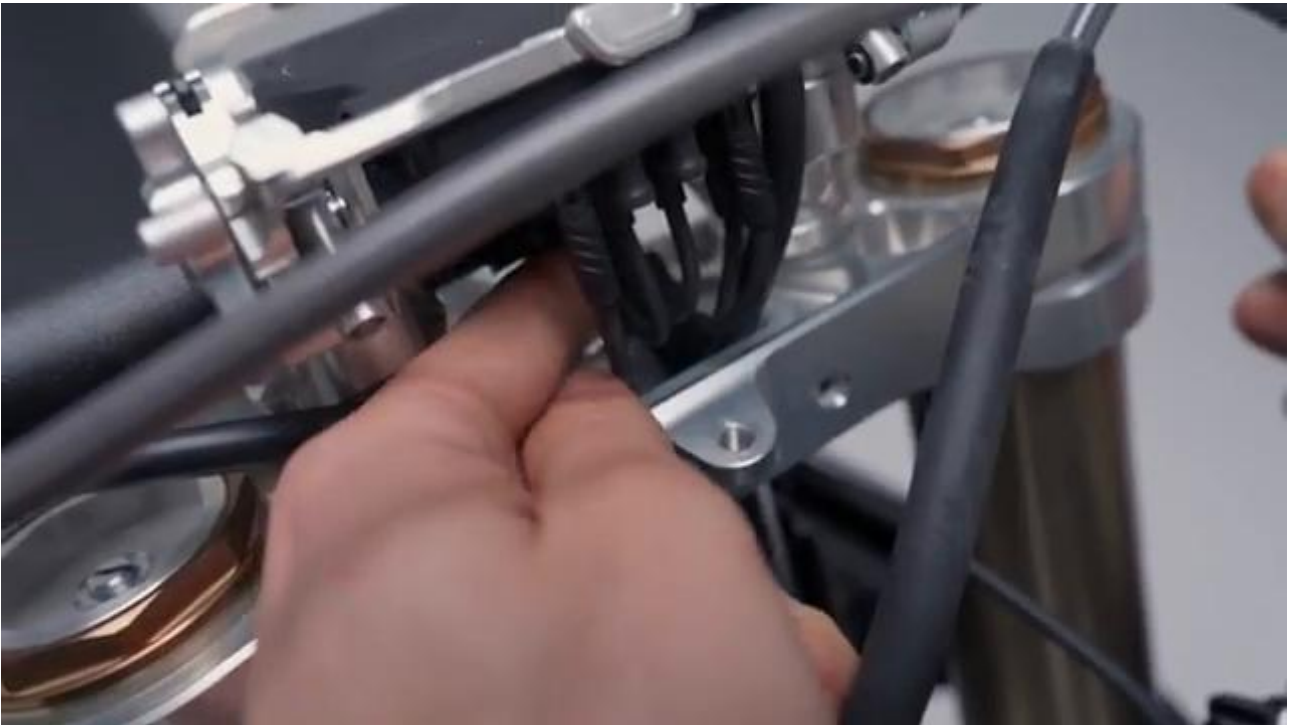

8. Install the retaining hardware for the Front Indicators

Install the indicator retaining hardware by hand first, then tighten it evenly while keeping the stalk aligned.

Reinstall any removed clips, covers, or brackets after the main hardware is secure.



9. Verify the operation of the Front Indicators

Verify both front indicators are aligned evenly and function correctly.

Inspect the surrounding routing and hardware one more time before returning the bike to service.



Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.