

Remove and Install Radiator - Stark VARG MX 1.2 / EX

Video link: https://www.youtube.com/watch?v=NoN5L__G2m8

Source video: Remove and Install Radiator - Stark VARG MX 1.2 by Stark Future Official

Applicable models: MX 1.2 / EX

Scope

This guide converts the official Stark Future tutorial video into a step-by-step workshop procedure. It documents each action shown in the video in sequence and pairs every step with a dedicated screenshot.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure

1. Unscrew the side plate bolts

Unscrew the side plate bolts.



2. Unscrew the subframe to seat base bolt under the rear fender

Unscrew the subframe to seat base bolt under the rear fender.



3. Unscrew the four front bolts on the side spoilers

Unscrew the four front bolts on the side spoilers.



4. Carefully remove the spoiler assembly by sliding it backwards

Carefully remove the spoiler assembly by sliding it backwards.



5. Remove the four skid plate screws

Remove the four skid plate screws



6. Carefully remove the skid plate from the battery

Carefully remove the skid plate from the battery.



7. Place a container underneath the bike to collect the drained coolant


Place a container underneath the bike to collect the drained coolant.



8. Loosen and remove the coolant drain bolt

Loosen and remove the coolant drain bolt.

Carefully remove and properly dispose of the copper washer.

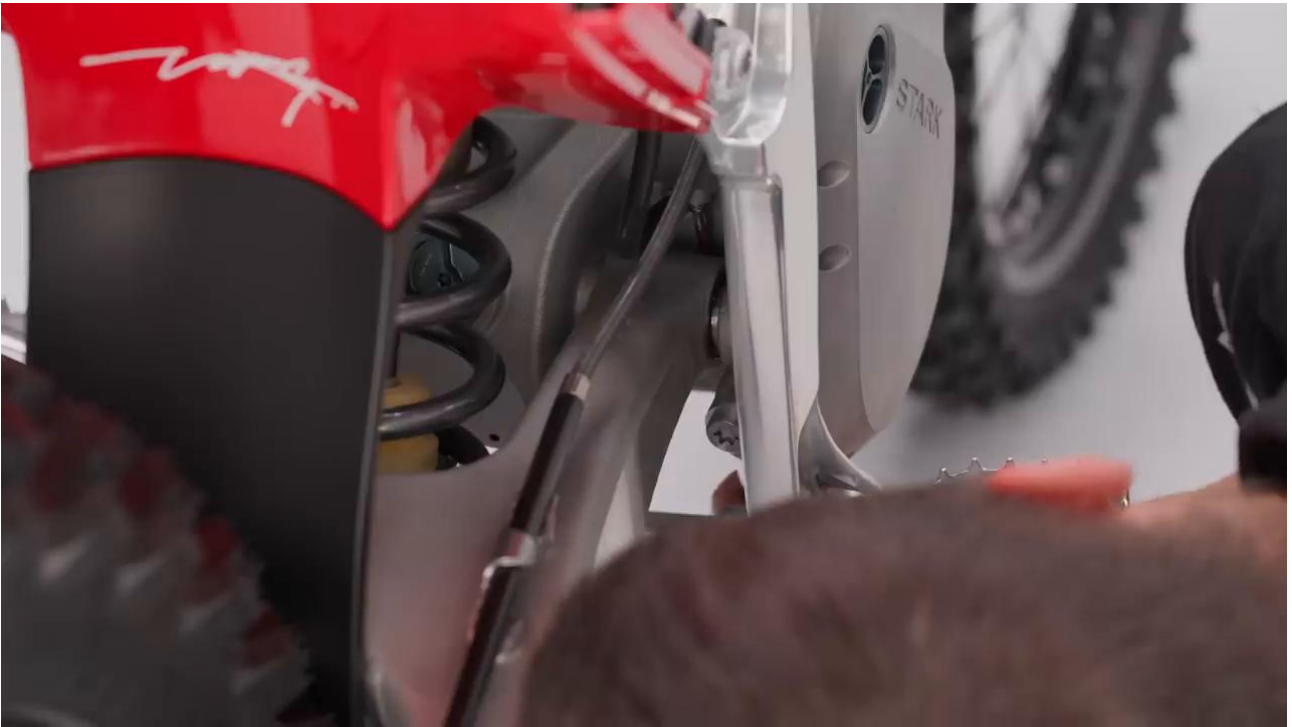

9. Loosen the radiator cap to allow the coolant to drain

Loosen the radiator cap to allow the coolant to drain.




10. Unscrew the four bolts that attach the rear fender to the subframe

Unscrew the four bolts that attach the rear fender to the subframe.



11. Carefully remove the rear fender from the bike

Carefully remove the rear fender from the bike.

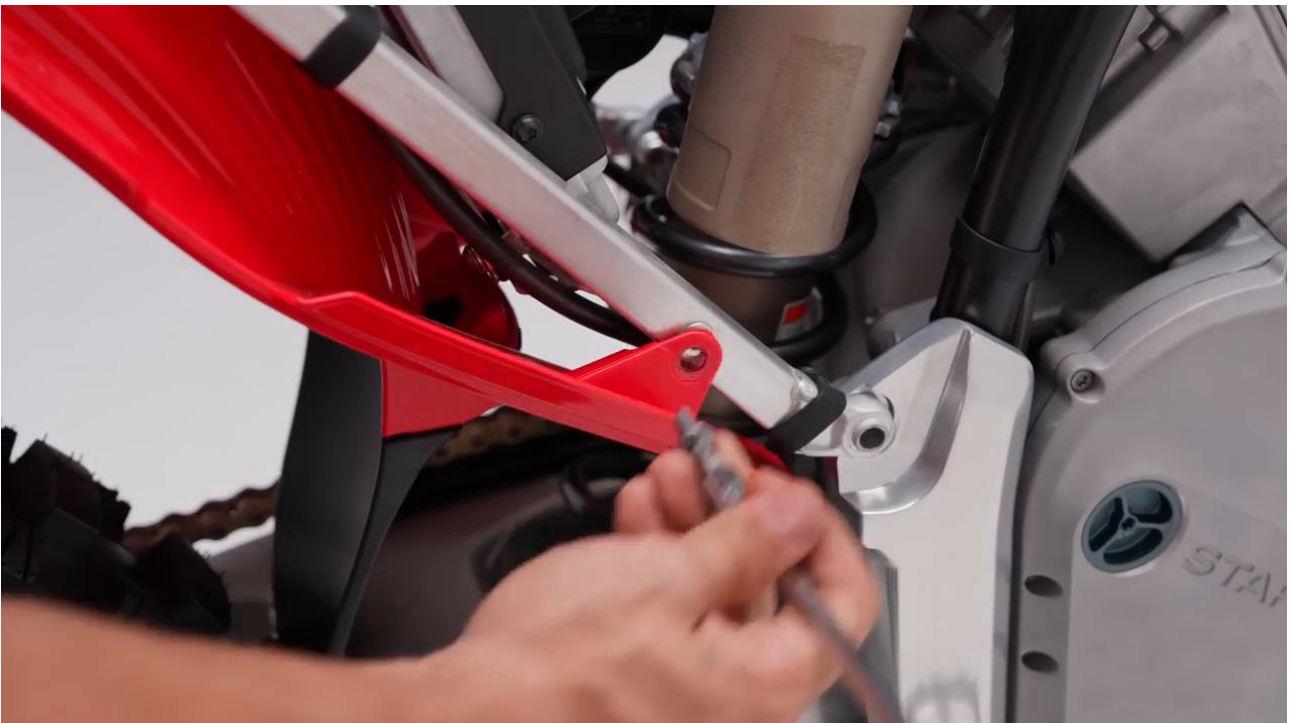

12. Remove the bleeding hose clamp from the water pump

Remove the bleeding hose clamp from the water pump



13. Unplug the fan connector

Unplug the fan connector.



14. Remove the radiator hose clamps and slide them back from their original position

Remove the radiator hose clamps and slide them back from their original position.



15. Remove the water pump strap

Remove the water pump strap.



16. Remove the hoses by pulling them backward

Remove the hoses by pulling them backward.

Handle the clamps carefully, as they have sharp edges.




17. Remove the bolts securing the radiator to the subframe

Remove the bolts securing the radiator to the subframe.



18. Carefully remove the radiator assembly from the bike

Carefully remove the radiator assembly from the bike.

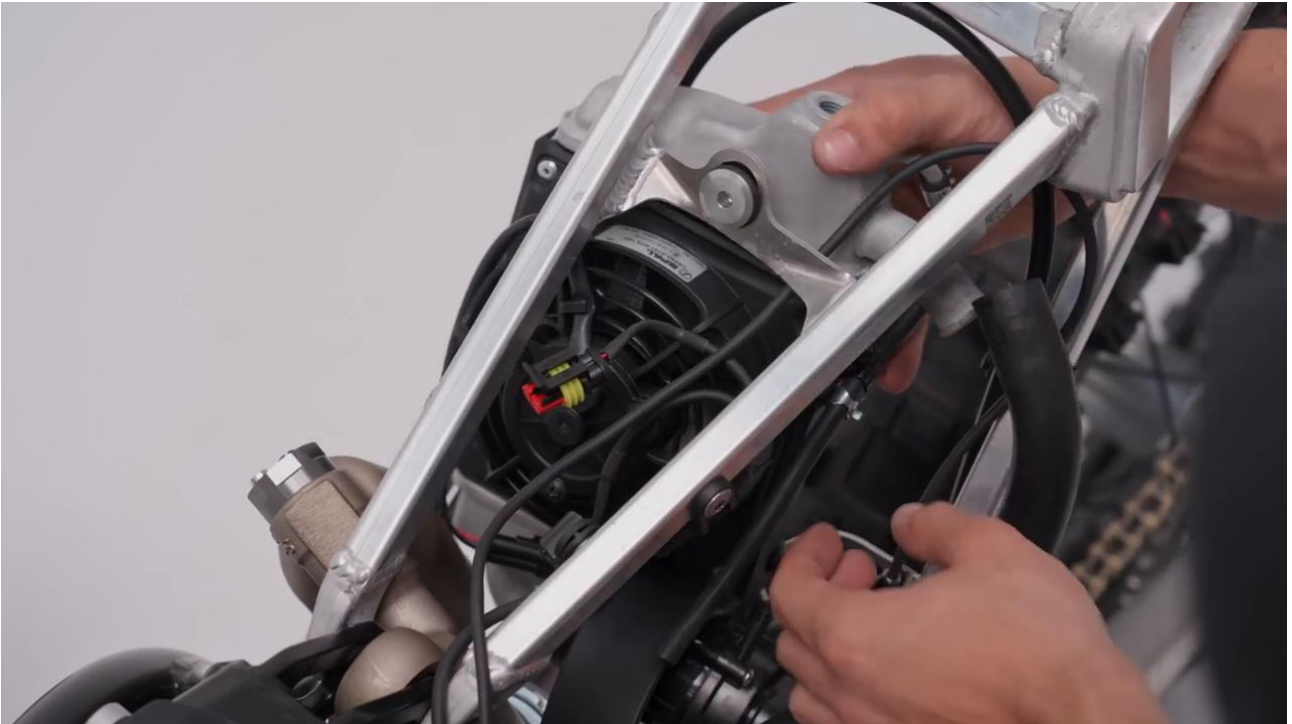

Installation Procedure

19. Carefully place the radiator into its position

Carefully place the radiator into its position.



20. Tighten the bolts securing the radiator to the subframe to 5 Nm

Tighten the bolts securing the radiator to the subframe to **5 Nm**.



21. Connect the radiator bleed hose to the water pump


Connect the radiator bleed hose to the water pump.



22. Connect the radiator hoses by pushing them securely into position

Connect the radiator hoses by pushing them securely into position.

Handle the clamps carefully, as they have sharp edges.

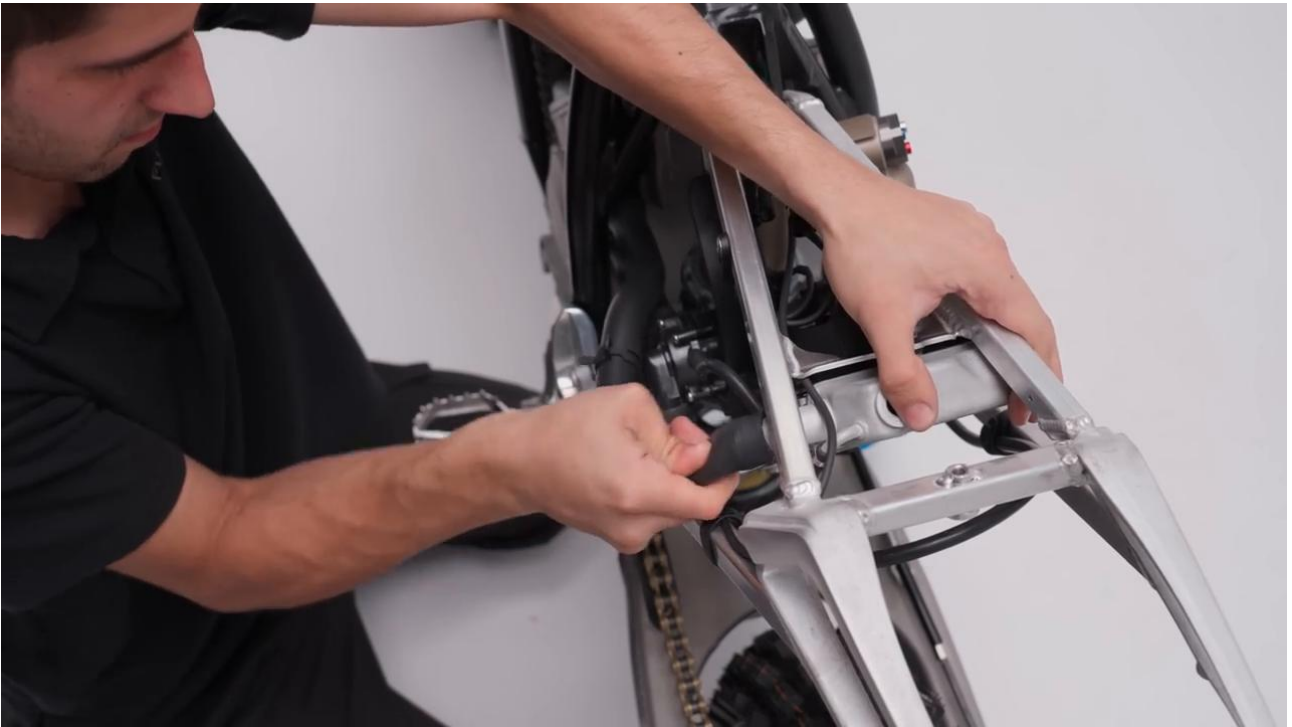

23. Secure the water pump by positioning its rubber strap correctly

Secure the water pump by positioning its rubber strap correctly.



24. Secure the radiator bleed hose clamp in its proper position

Secure the radiator bleed hose clamp in its proper position.



25. Secure the radiator hose clamps in their proper positions. Note: Ensure that no cables are in contact with the clamps

Secure the radiator hose clamps in their proper positions. Note: Ensure that no cables are in contact with the clamps.



26. Connect the fan and secure the connector in the subframe bracket

Connect the fan and secure the connector in the subframe bracket.



27. Carefully position the rear fender between the subframe and the rear wheel

Carefully position the rear fender between the subframe and the rear wheel.



28. Tighten the four bolts that attach the rear fender to the subframe to 5 Nm

Tighten the four bolts that attach the rear fender to the subframe to **5 Nm**.



29. Install a new copper washer on the coolant drain bolt, then tighten it to 5 Nm

Install a new copper washer on the coolant drain bolt, then tighten it to **5 Nm**.



30. Fill the cooling system to the top with glycol-based coolant

Fill the cooling system to the top with glycol-based coolant.



31. Switch the bike ON and OFF as needed to allow the water pump to circulate the coolant and purge any air from the system

Switch the bike ON and OFF as needed to allow the water pump to circulate the coolant and purge any air from the system.



32. Tighten the radiator cap to 7 Nm

Tighten the radiator cap to **7 Nm**.



33. Place the skid plate into its position

Place the skid plate into its position.



34. Tighten the four skid plate bolts to 15 Nm

Tighten the four skid plate bolts to **15 Nm**.



35. Position the spoiler assembly on top of the bike and slide it forward and downward

Position the spoiler assembly on top of the bike and slide it forward and downward.



36. Tighten the four front bolts to 5 Nm

Tighten the four front bolts to **5 Nm**.



37. Tighten the subframe to seat base bolt to 10 Nm

Tighten the subframe to seat base bolt to **10 Nm**.



38. Tighten the side plate bolts to 20 Nm

Tighten the side plate bolts to **20 Nm**.



Torque Summary

Component	Torque
Tighten the bolts securing the radiator to the subframe	5 Nm
Tighten the four bolts that attach the rear fender to the subframe	5 Nm
Install a new copper washer on the coolant drain bolt, then tighten it	5 Nm
Tighten the radiator cap	7 Nm
Tighten the four skid plate bolts	15 Nm
Tighten the four front bolts	5 Nm
Tighten the subframe to seat base bolt	10 Nm
Tighten the side plate bolts	20 Nm

Video-sourced torque items:

- Tighten the bolts securing the radiator to the subframe: **5 Nm** from the official Stark tutorial video.
- Tighten the four bolts that attach the rear fender to the subframe: **5 Nm** from the official Stark tutorial video.
- Install a new copper washer on the coolant drain bolt, then tighten it: **5 Nm** from the official Stark tutorial video.
- Tighten the radiator cap: **7 Nm** from the official Stark tutorial video.
- Tighten the four skid plate bolts: **15 Nm** from the official Stark tutorial video.
- Tighten the four front bolts: **5 Nm** from the official Stark tutorial video.
- Tighten the subframe to seat base bolt: **10 Nm** from the official Stark tutorial video.
- Tighten the side plate bolts: **20 Nm** from the official Stark tutorial video.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.