

Remove and Install Pull Rod - Stark VARG

Video link: <https://www.youtube.com/watch?v=yNa4CXP0EMk>

Source video: Remove and Install Pull Rod - Stark VARG by Stark Future Official

Applicable models: MX

Scope

This guide follows the original Stark Future video overlay sequence for the procedure shown in the original MX tutorial video. Each step below is aligned to the instruction text shown on screen.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Follow the torque values shown in the original Stark tutorial video wherever the video displays a torque on screen.

Removal Procedure

1. Loosen brake pedal fink bolt


Loosen brake pedal fink bolt.



Installation Procedure

2. Hold spring

Hold spring.

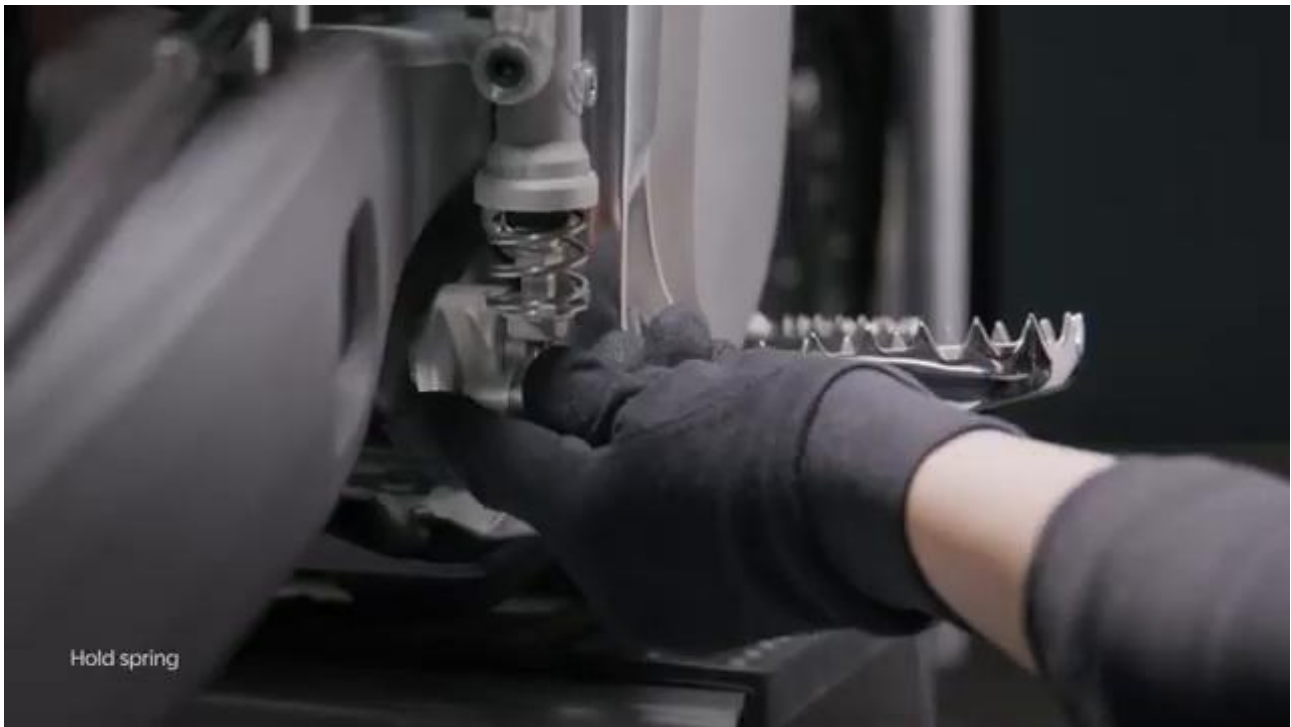

3. Remove sway bolt

Remove sway bolt.



4. Remove chain link

Remove chain link.



5. Remove chain link

Remove chain link.



6. Run the chain through the front sprocket

Run the chain through the front sprocket.



7. Loosen chain protector bolt

Loosen chain protector bolt.



8. Remove pull rod lock nuts

Remove pull rod lock nuts.



9. Remove dull red

Remove dull red.



10. Remove pull rod

Remove pull rod.



11. Hold pull rod in place

Hold pull rod in place.




12. Insert the bolts

Insert the bolts.




13. Tighten lock nuts to 69

Tighten lock nuts to 69.

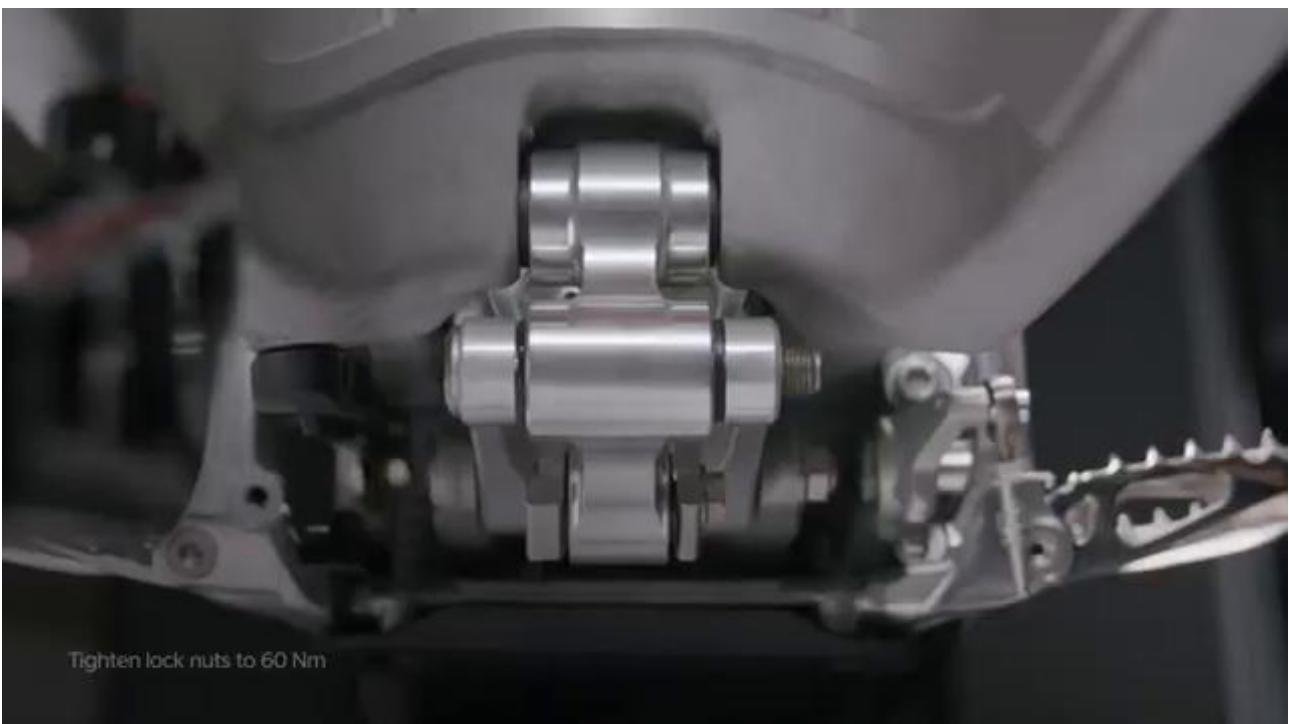


14. Tighten lock nuts to 60 Nm

Tighten lock nuts to 60 Nm.

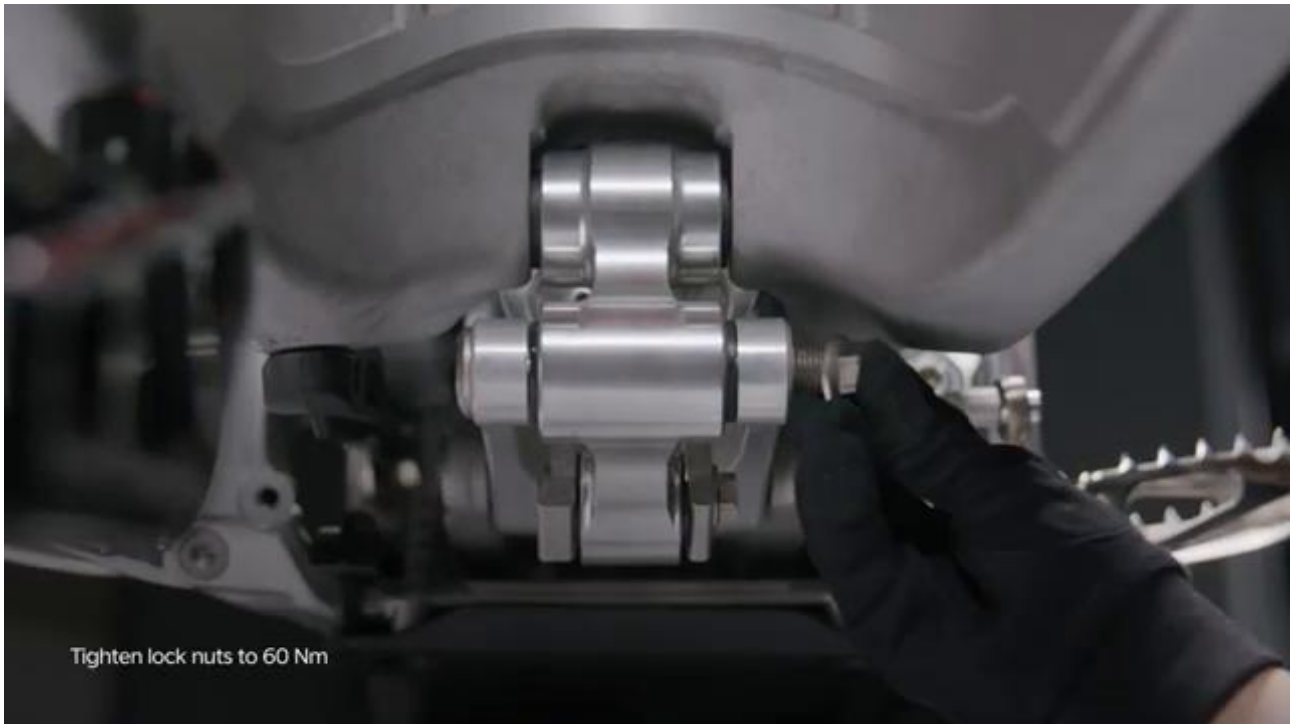

15. Run the chain through the front sprocket

Run the chain through the front sprocket.

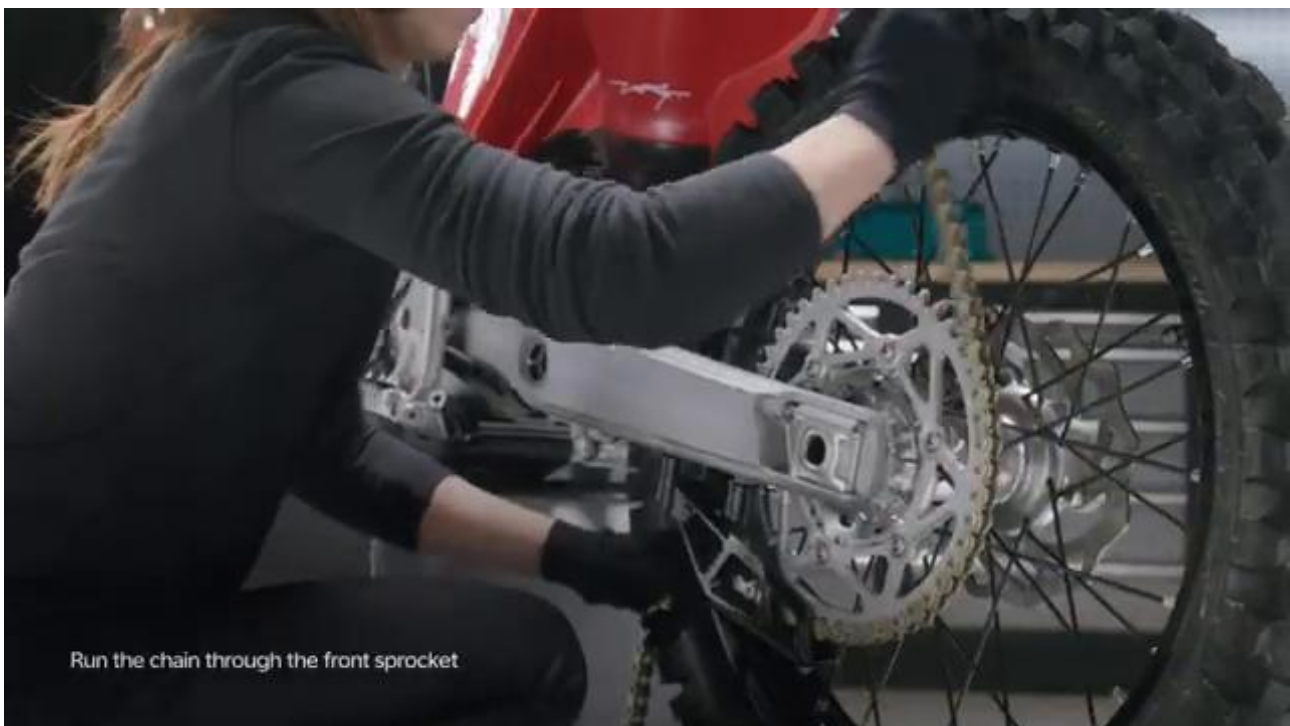

16. Install chain bok

Install chain bok.



17. Install pedal

Install pedal.



18. Tighten sway bolts to 20

Tighten sway bolts to 20.



19. Install the rear brake pedal link

Install the rear brake pedal link.



20. Tighten link bolts to 10

Tighten link bolts to 10.



21. Tighten link bolts to 1

Tighten link bolts to 1.



22. Check brake operation before operating the bike

Check brake operation before operating the bike.



23. Check brake operation before cpcrating the bike

Check brake operation before cpcrating the bike.



Critical Checks Before Riding

- Confirm the serviced components are fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.