

Remove and Install Hand Brake Master Cylinder - Stark VARG

Video link: <https://www.youtube.com/watch?v=RATa3ZFhgU8>

Source video: Remove and Install Hand Brake Master Cylinder - Stark VARG by Stark Future Official

Applicable models: MX

Scope

This guide follows the same step-by-step workshop structure as the MX tutorials, but it is derived as a visual sequence from the official Stark Future ASMR video. Because the source video does not provide usable captions or narration, the procedure is documented through curated screenshots and concise action guidance.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure

1. Prepare access to the Hand Brake Master Cylinder

Remove or move aside the surrounding part, cover, or hardware needed to reach the Hand Brake Master Cylinder.

Keep the removed fasteners organized in sequence so reassembly matches the video.



2. Remove the visible retaining hardware for the Hand Brake Master Cylinder

Remove the bolts, screws, nuts, or clips that directly secure the Hand Brake Master Cylinder.


Support the component as the last fastener is removed.



3. Release any bracket, clip, or coupling attached to the Hand Brake Master Cylinder

Free any bracket, clip, spacer, linkage, or connector that still ties the Hand Brake Master Cylinder to the bike.

Note the orientation of these supporting pieces before setting them aside.

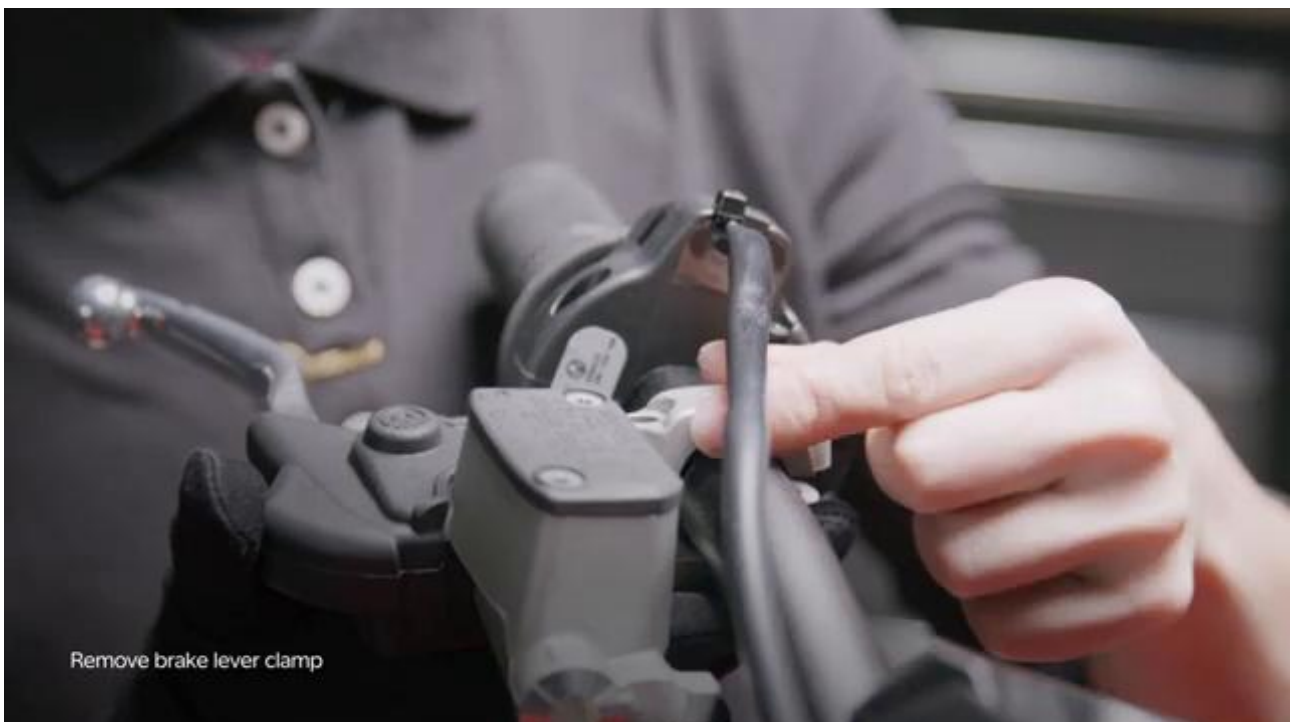

4. Remove the Hand Brake Master Cylinder from the bike

Lift, slide, or guide the Hand Brake Master Cylinder out of its mounting position once the retaining hardware is removed.

Inspect the removed part and the mounting points before reassembly.



Installation Procedure

5. Position the Hand Brake Master Cylinder for installation

Return the Hand Brake Master Cylinder to its mounting position and align the holes, tabs, or locating surfaces.

Hold the component in place until the first retaining hardware is started.



6. Reconnect or refit the support pieces for the Hand Brake Master Cylinder

Reinstall the clamp and any related support pieces for the Hand Brake Master Cylinder.

Set the brake lever in the preferred position before final tightening.



7. Install the retaining hardware for the Hand Brake Master Cylinder

Install the main retaining hardware for the Hand Brake Master Cylinder by hand first, then tighten it evenly.

Check that the component remains aligned while the hardware is brought fully home.

Tighten the hand brake master cylinder clamp bolts to **6 Nm**.



8. Verify the completed installation of the Hand Brake Master Cylinder

Inspect the final position of the Hand Brake Master Cylinder and confirm that all hardware, clips, and surrounding parts are back in place.

Check that the brake lever moves freely and can be fully pressed without contacting other handlebar controls before returning the bike to service.



Torque Summary

Component	Torque
Tighten the hand brake master cylinder clamp bolts	6 Nm

Verified torque items:

- Tighten the hand brake master cylinder clamp bolts: **6 Nm** from Stark technical manual 02.009.01
- Remove and install hand brake master cylinder.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.