

Remove and Install Control Switch - Stark VARG

Video link: <https://www.youtube.com/watch?v=2n49aoU9KEk>

Source video: Remove and Install Control Switch - Stark VARG by Stark Future Official

Applicable models: MX

Scope

This guide follows the same step-by-step workshop structure as the MX tutorials, but it is derived as a visual sequence from the official Stark Future ASMR video. Because the source video does not provide usable captions or narration, the procedure is documented through curated screenshots and concise action guidance.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure

1. Prepare access to the Control Switch

Remove or move aside the surrounding part, cover, or hardware needed to reach the Control Switch.

Keep the removed fasteners organized in sequence so reassembly matches the video.



2. Remove the visible retaining hardware for the Control Switch

Remove the bolts, screws, nuts, or clips that directly secure the Control Switch.


Support the component as the last fastener is removed.



3. Release any bracket, clip, or coupling attached to the Control Switch

Free any bracket, clip, spacer, linkage, or connector that still ties the Control Switch to the bike.

Note the orientation of these supporting pieces before setting them aside.

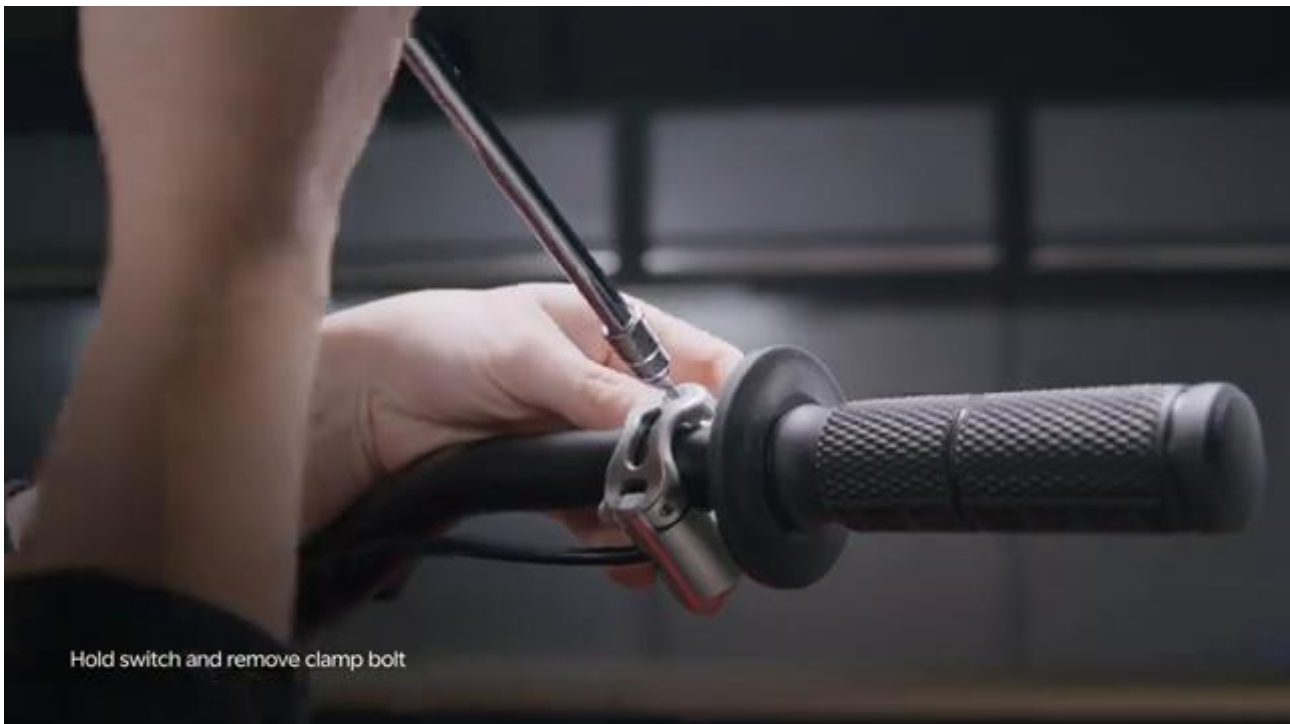

4. Remove the Control Switch from the bike

Lift, slide, or guide the Control Switch out of its mounting position once the retaining hardware is removed.

Inspect the removed part and the mounting points before reassembly.



Installation Procedure

5. Position the Control Switch for installation

Route the control switch cable through the triple clamp and return the control switch to its mounting position on the handlebar.

Hold the switch in place and tighten the control switch clamp bolt to **3 Nm**.



6. Reconnect or refit the support pieces for the Control Switch

Reconnect the control switch plugs and clip the connectors back onto the junction box.

Make sure the harness routing is seated correctly before tightening the junction box bolts.



7. Install the retaining hardware for the Control Switch

Fit the brake line back into the front number plate brackets and slide the front number plate into the front fender slots.

Confirm the brake line is seated correctly in the guide before the number plate is fully home.



8. Verify the completed installation of the Control Switch

Hold the front number plate in place and tighten the front number plate bolt to **8 Nm**.

Inspect the final position of the control switch, wiring, brake line routing, and number plate before returning the bike to service.



Torque Summary

Component	Torque
Tighten the control switch clamp bolt	3 Nm
Tighten the front number plate bolt	8 Nm

Verified torque items:

- Tighten the control switch clamp bolt: **3 Nm** from Stark technical manual 06.010.01 Remove and install control switch.
- Tighten the front number plate bolt: **8 Nm** from Stark technical manual 01.006.01 Remove and install front number plate.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.