

Remove and Install Rear Brake Master Cylinder - Stark VARG MX 1.2 / EX

Video link: https://www.youtube.com/watch?v=_zuf6jAthuo

Source video: Remove and Install Rear Brake Master Cylinder- Stark VARG MX 1.2 by Stark Future Official

Applicable models: MX 1.2 / EX

Scope

This guide converts the official Stark Future tutorial video into a step-by-step workshop procedure. It documents each action shown in the video in sequence and pairs every step with a dedicated screenshot.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure


1. Remove the rubber cap from the rear caliper bleeder

Remove the rubber cap from the rear caliper bleeder.



2. Fit the wrench onto the bleed screw to open and close it before attaching the hose to drain the brake fluid

Fit the wrench onto the bleed screw to open and close it before attaching the hose to drain the brake fluid.

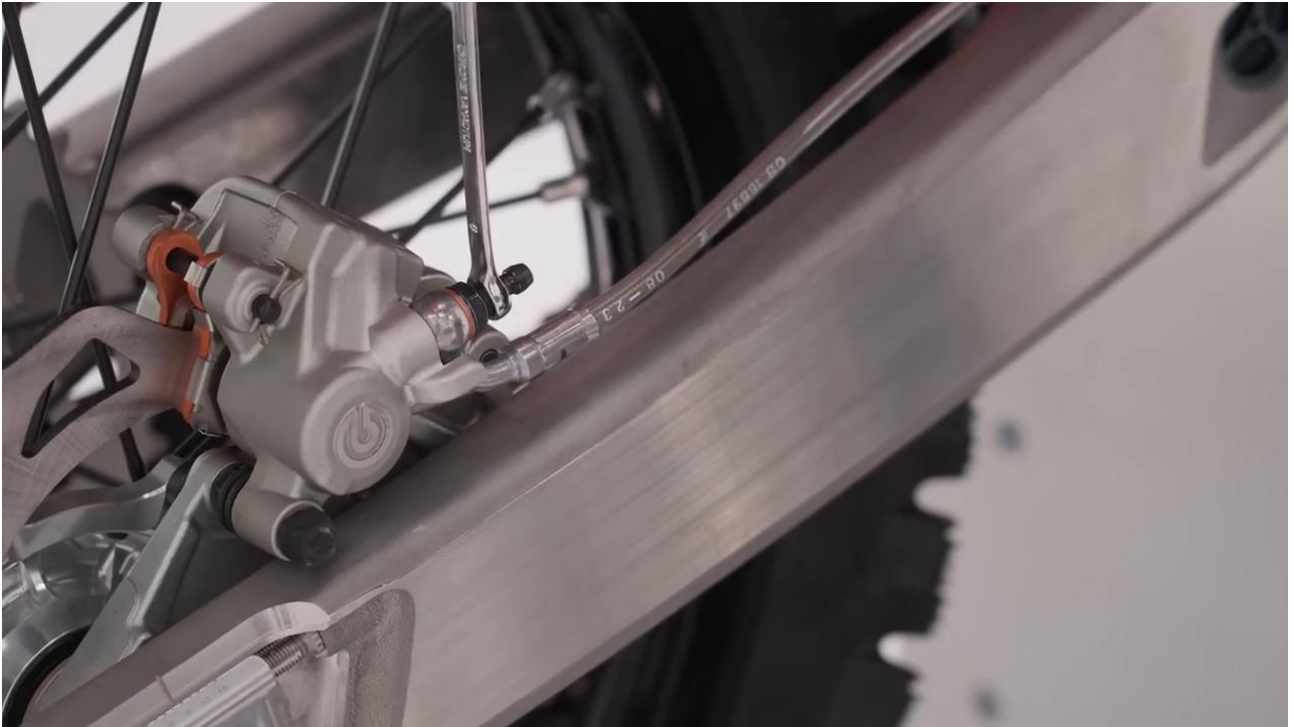

3. Drain the brake fluid from the system

Drain the brake fluid from the system.



4. Carefully remove the hose from the rear caliper bleeder

Carefully remove the hose from the rear caliper bleeder.



5. Unscrew and carefully remove the foot brake master cylinder reservoir cap

Unscrew and carefully remove the foot brake master cylinder reservoir cap.



6. Unscrew the banjo bolt from the master cylinder

Unscrew the banjo bolt from the master cylinder.

Carefully remove and dispose of the copper washers.



7. Loosen and remove the lever rod-to-brake pedal bolt

Loosen and remove the lever rod-to-brake pedal bolt.

Carefully collect the spring and spring housing during removal.



8. Loosen and remove both bolts from the rear brake master cylinder bracket

Loosen and remove both bolts from the rear brake master cylinder bracket.



9. Remove the rear foot brake assembly from the bike

Remove the rear foot brake assembly from the bike.



Installation Procedure


10. Apply thread locker to both rear foot brake master cylinder to bracket bolts, then tighten them to 10 Nm

Apply thread locker to both rear foot brake master cylinder to bracket bolts, then tighten them to **10 Nm**.



11. Carefully position the spring and spring housing, then insert the push rod into the rear foot brake master cylinder

Carefully position the spring and spring housing, then insert the push rod into the rear foot brake master cylinder.

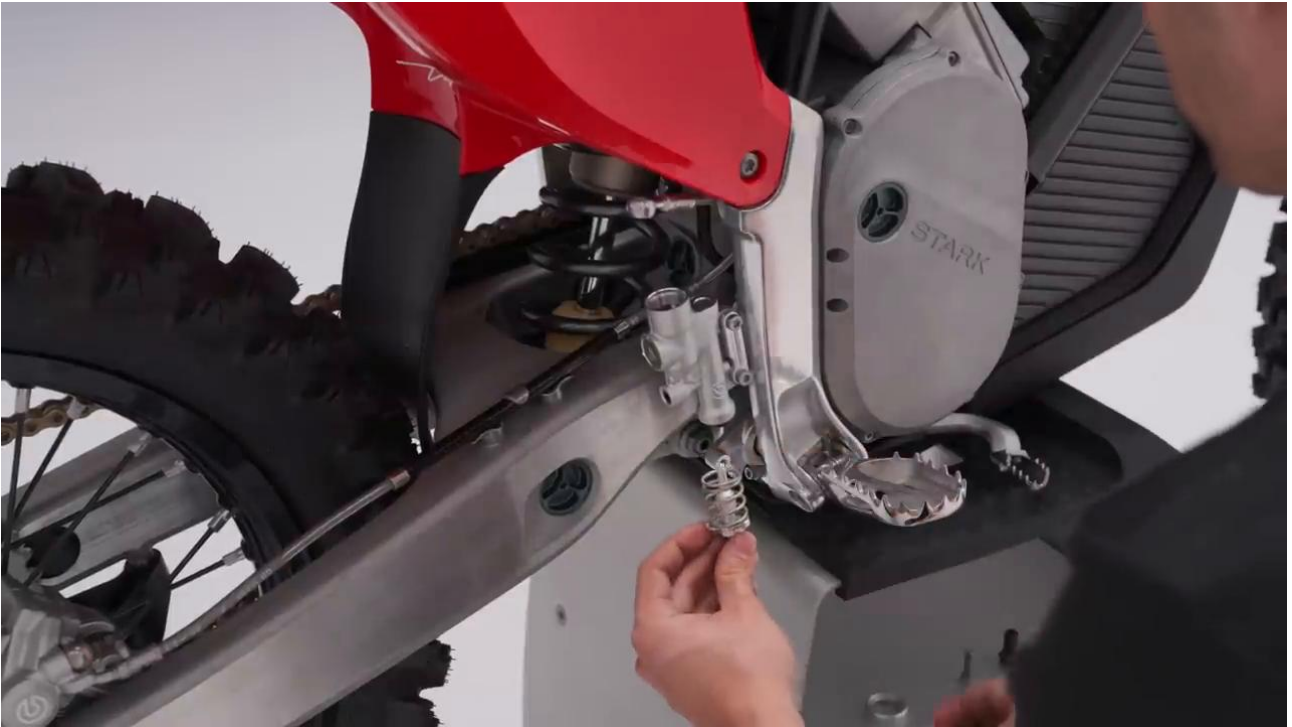

12. Tighten the lever rod-to-brake pedal bolt to 10 Nm

Tighten the lever rod-to-brake pedal bolt to **10 Nm**.



13. Tighten the banjo bolt into the master cylinder to 27 Nm

Tighten the banjo bolt into the master cylinder to **27 Nm**.

Use new copper washers and install them on both sides of the brake hose. Ensure that the hose does not come into contact with the right side plate.



14. Refit the wrench and hose to the rear bleed screw so the rear brake system can be bled

Refit the wrench and hose to the rear bleed screw so the rear brake system can be bled.



15. Bleed the braking system by adding brake fluid to the reservoir

Bleed the braking system by adding brake fluid to the reservoir.



16. Pump the brake pedal several times and, while holding pressure on it, open and close the rear caliper bleed screw before releasing it

Pump the brake pedal several times and, while holding pressure on it, open and close the rear caliper bleed screw before releasing it.



17. Actively check the brake fluid level

Actively check the brake fluid level.

Ensure the level does not drop too low at any time.



18. Tighten the foot brake master cylinder reservoir cap


Tighten the foot brake master cylinder reservoir cap.



19. Carefully remove the hose from the rear brake caliper bleed screw, then tighten the bleed screw and clean the area


Carefully remove the hose from the rear brake caliper bleed screw, then tighten the bleed screw and clean the area.

The bleed screw torque is not shown in the video. Verify the official Stark specification before final tightening.

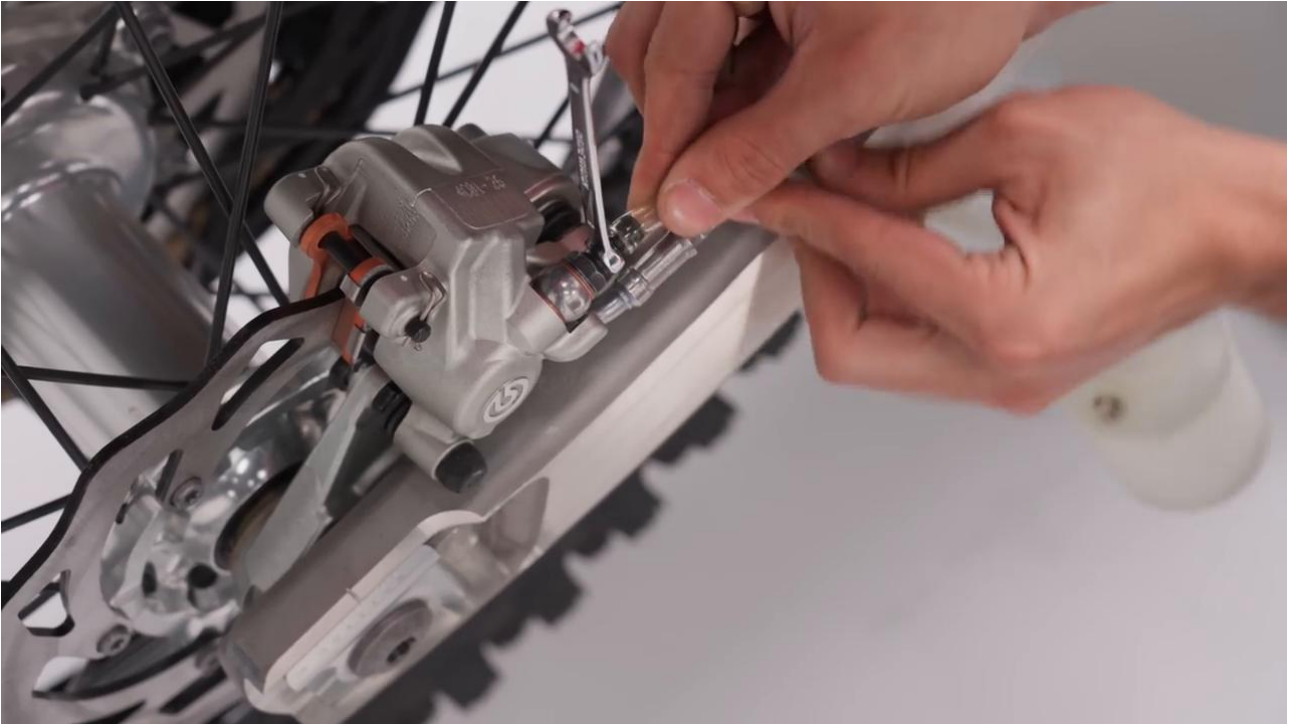

20. Place the rubber protector cap into its position

Place the rubber protector cap into its position.

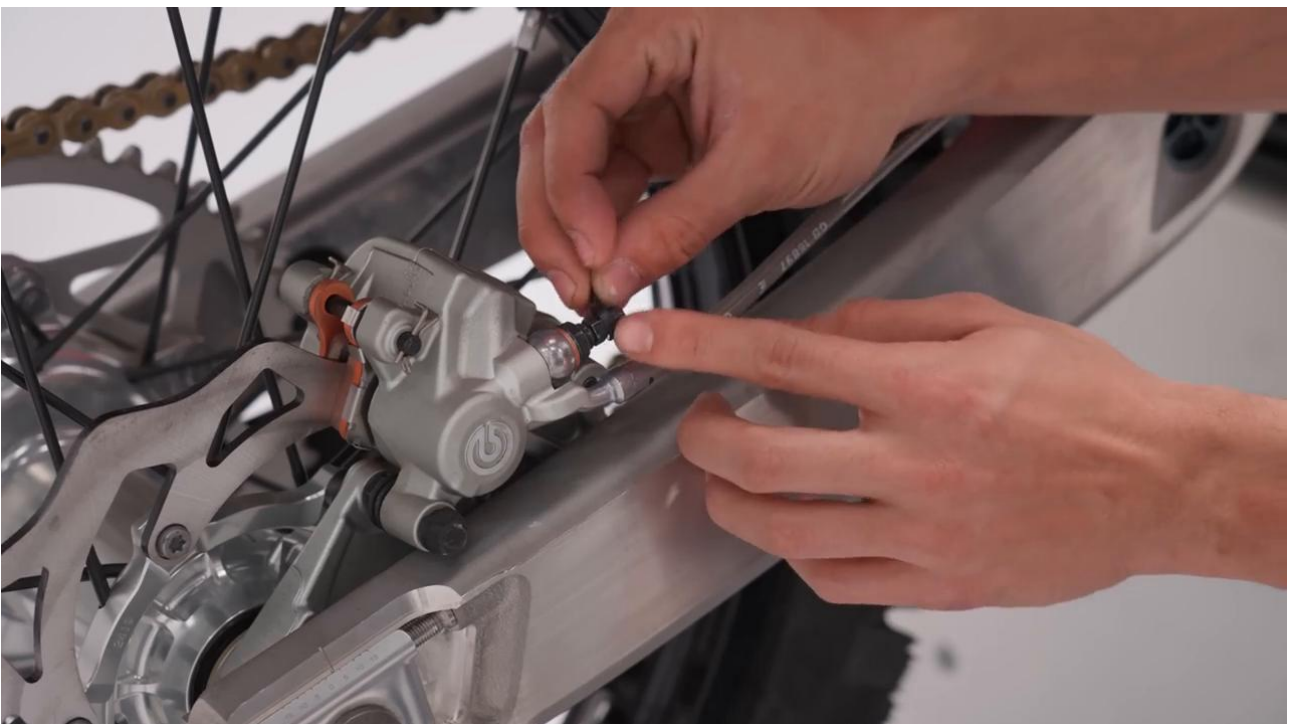

21. Clean the area thoroughly and test the brake system

Clean the area thoroughly and test the brake system.



Torque Summary

Component	Torque
Apply thread locker to both rear foot brake master cylinder to bracket bolts, then tighten them	10 Nm
Tighten the lever rod-to-brake pedal bolt	10 Nm
Tighten the banjo bolt into the master cylinder	27 Nm

Video-sourced torque items:

- Apply thread locker to both rear foot brake master cylinder to bracket bolts, then tighten them: **10 Nm** from the official Stark tutorial video.
- Tighten the lever rod-to-brake pedal bolt: **10 Nm** from the official Stark tutorial video.
- Tighten the banjo bolt into the master cylinder: **27 Nm** from the official Stark tutorial video.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.