

Remove and Install Rear Shock - Stark VARG

Video link: <https://www.youtube.com/watch?v=s-pQVWsXvz0>

Source video: Remove and Install Rear Shock - Stark VARG by Stark Future Official

Applicable models: MX

Scope

This guide follows the original Stark Future video overlay sequence for the procedure shown in the original MX tutorial video. Each step below is aligned to the instruction text shown on screen.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Follow the torque values shown in the original Stark tutorial video wherever the video displays a torque on screen.

Removal Procedure

1. Remove front bolts

Remove front bolts.



2. Remove rear center bolt

Remove rear center bolt.



3. Remove the complete front spoiler

Remove the complete front spoiler.



4. Loosen shock top lock nut

Loosen shock top lock nut.



5. Remove bottom lock nut

Remove bottom lock nut.



6. Push the subframe away and hold it clear for shock removal

Push the subframe away and hold it clear for shock removal.



7. Remove shock

Remove shock.



Installation Procedure


8. Ensure the subframe rests in the subframe slots

Ensure the subframe rests in the subframe slots.



9. Push the subframe away and hold it clear for shock installation

Push the subframe away and hold it clear for shock installation.

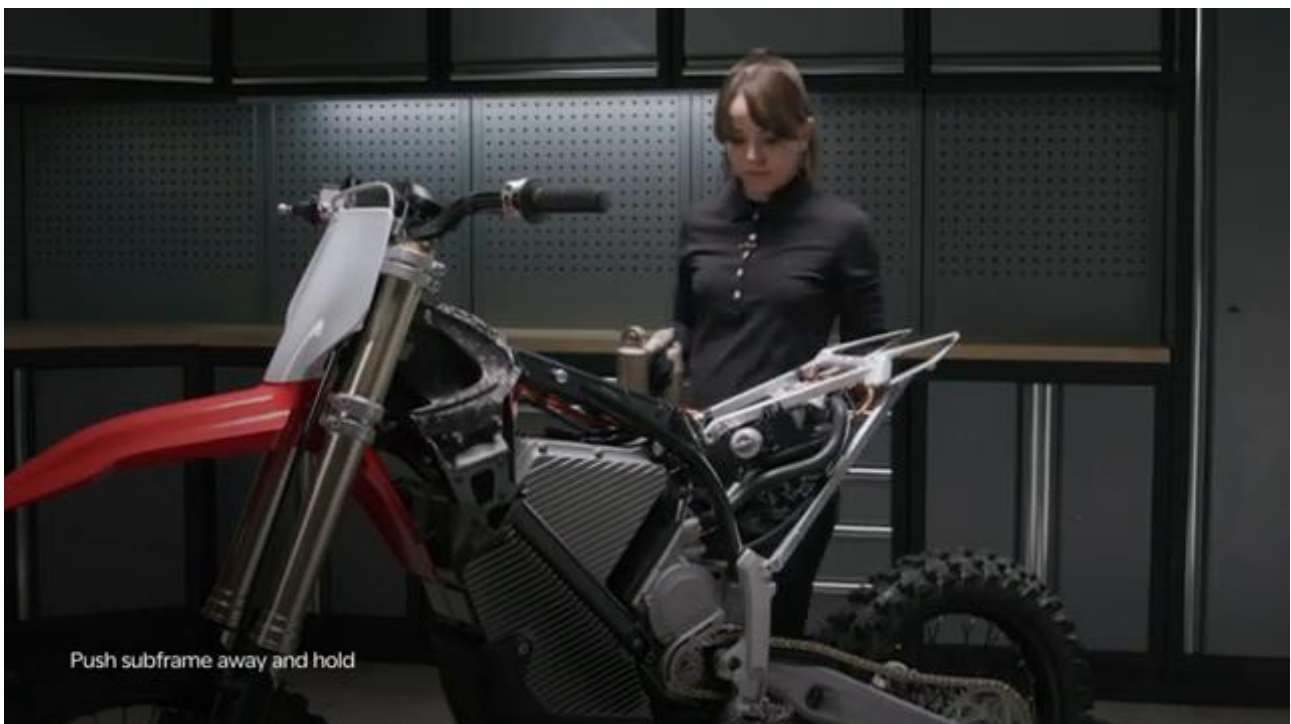

10. Hold shock in place

Hold shock in place.



11. Insert top bolt

Insert top bolt.



12. Tighten the top lock nut to 40 Nm

Tighten the top lock nut to **40 Nm**.



13. Insert bottom bolt

Insert bottom bolt.



14. Tighten the bottom lock nut to 40 Nm

Tighten the bottom lock nut to **40 Nm**.



15. Tighten the lower rear fender bolts

Tighten the lower rear fender bolts.

The lower rear fender bolt torque is not shown in the video. Verify the official Stark specification before final tightening.



Torque Summary

Component	Torque
Tighten the top lock nut	40 Nm
Tighten the bottom lock nut	40 Nm

Verified torque items:

- Tighten the top lock nut: **40 Nm** from the original Stark Future tutorial video text overlay.
- Tighten the bottom lock nut: **40 Nm** from the original Stark Future tutorial video text overlay.

Critical Checks Before Riding

- Confirm the serviced components are fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.