

Bleeding the Cooling System - Stark VARG

Video link: <https://www.youtube.com/watch?v=dZMHxFu8dU4>

Source video: Bleeding the Cooling System - Stark VARG by Stark Future Official

Applicable models: MX

Scope

This guide follows the same step-by-step workshop structure as the MX tutorials, but it is derived as a visual sequence from the official Stark Future ASMR video. Because the source video does not provide usable captions or narration, the procedure is documented through curated screenshots and concise action guidance.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Procedure

1. Prepare access to the cooling system

Place the bike on a stable stand and remove the visible bodywork or guards shown in the video to reach the cooling system service points.



2. Position a container for drained coolant

Place a suitable container under the bike before opening the cooling system so drained coolant is captured cleanly.



3. Open the cooling system service points

Loosen the drain and cap points shown in the video so coolant can move through the system and trapped air can be released.



4. Drain and refill the coolant circuit

Drain the old coolant as shown, then refill the system with the coolant type indicated in the procedure.



5. Cycle the system to purge trapped air

Operate the bike as shown in the video so the coolant circulates and air is bled from the system.



6. Top off and close the cooling system


Bring the coolant level back to the correct height, then close the cap and service points shown in the video.



7. Reinstall the removed bodywork

Reinstall the covers, skid plate, and other removed parts in the same order used during access.

Tighten the skid plate bolts to **15 Nm**.

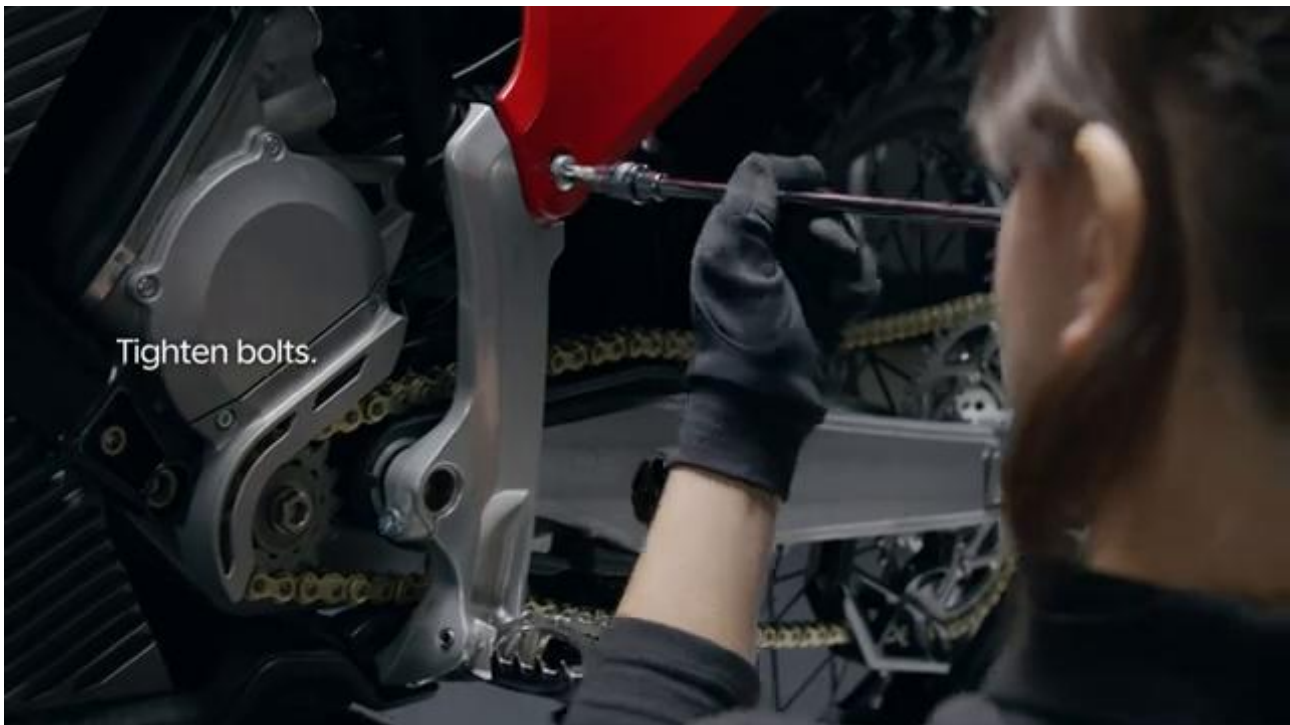

8. Check for leaks and correct level

Inspect the system for leaks and confirm the coolant level remains correct before riding.



Torque Summary

Component	Torque
Tighten the skid plate bolts	15 Nm

Verified torque items:

- Tighten the skid plate bolts: **15 Nm** from the official Stark VARG owner manual torque table.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.