

Remove and Install Rear Shock - Stark VARG MX 1.2 / EX

Video link: <https://www.youtube.com/watch?v=xsRjWXCPaLc>

Source video: Remove and Install Rear Shock - Stark VARG MX 1.2 by Stark Future Official

Applicable models: MX 1.2 / EX

Scope

This guide follows the same step-by-step workshop structure as the MX tutorials, but it is derived as a visual sequence from the official Stark Future ASMR video. Because the source video does not provide usable captions or narration, the procedure is documented through curated screenshots and concise action guidance.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure

1. Prepare access to the Rear Shock

Prepare access to the Rear Shock.




2. Remove the visible fasteners securing the Rear Shock

Remove the visible fasteners securing the Rear Shock.



3. Release the Rear Shock from its mounting position

Release the Rear Shock from its mounting position.

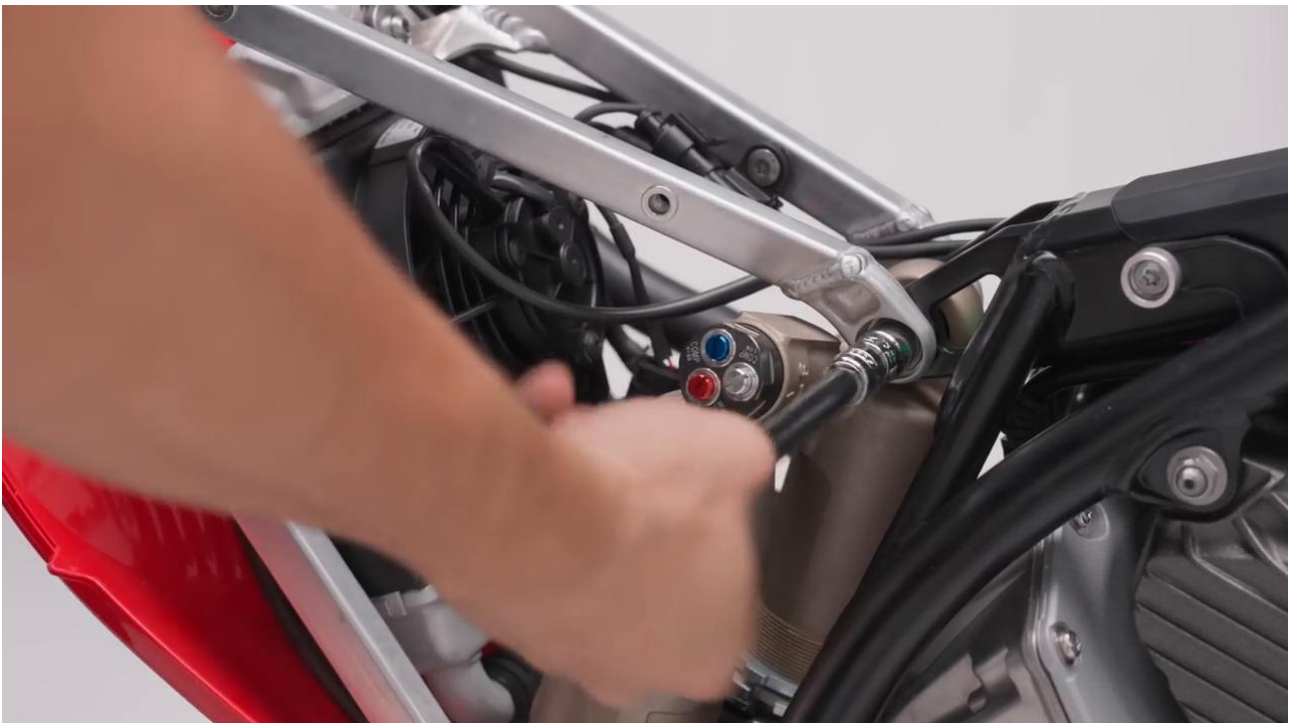

4. Remove or free any related clip, bracket, or connector

Remove or free any related clip, bracket, or connector.



Installation Procedure

5. Position the Rear Shock for installation

Position the Rear Shock for installation.



6. Install the retaining hardware for the Rear Shock

Install the retaining hardware for the Rear Shock.

Tighten the top shock shaft nut to **40 Nm**.

Tighten the bottom shock shaft nut to **40 Nm**.



7. Align the Rear Shock in its final position

Align the Rear Shock in its final position.



8. Verify the completed installation

Verify the completed installation.



Torque Summary

Component	Torque
Tighten the top shock shaft nut	40 Nm
Tighten the bottom shock shaft nut	40 Nm

Verified torque items:

- Tighten the top shock shaft nut: **40 Nm** from the official Stark VARG MX 1.2 owner manual torque table.
- Tighten the bottom shock shaft nut: **40 Nm** from the official Stark VARG MX 1.2 owner manual torque table.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.