

How to remove and install the VCU - Stark VARG MX 1.2 / EX

Video link: <https://www.youtube.com/watch?v=QmTcJvOdRrY>

Source video: How to remove and install the VCU on your Stark VARG MX1.2 by Stark Future Official

Applicable models: MX 1.2 / EX

Scope

This guide converts the official Stark Future tutorial video into a step-by-step workshop procedure. It documents each action shown in the video in sequence and pairs every step with a dedicated screenshot.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure

1. Unscrew the side plate bolts

Unscrew the side plate bolts.



2. Unscrew the subframe to seat base bolt under the rear fender

Unscrew the subframe to seat base bolt under the rear fender.



3. Unscrew the four front bolts on the side spoilers

Unscrew the four front bolts on the side spoilers.



4. Carefully remove the spoiler assembly by sliding it backwards

Carefully remove the spoiler assembly by sliding it backwards.



5. Unscrew the carbon fiber spoiler to frame bolts

Unscrew the carbon fiber spoiler to frame bolts.




6. Carefully remove the carbon fiber spoiler

Carefully remove the carbon fiber spoiler.



7. Unscrew the four bolts of the front fender to the lower triple clamp

Unscrew the four bolts of the front fender to the lower triple clamp.

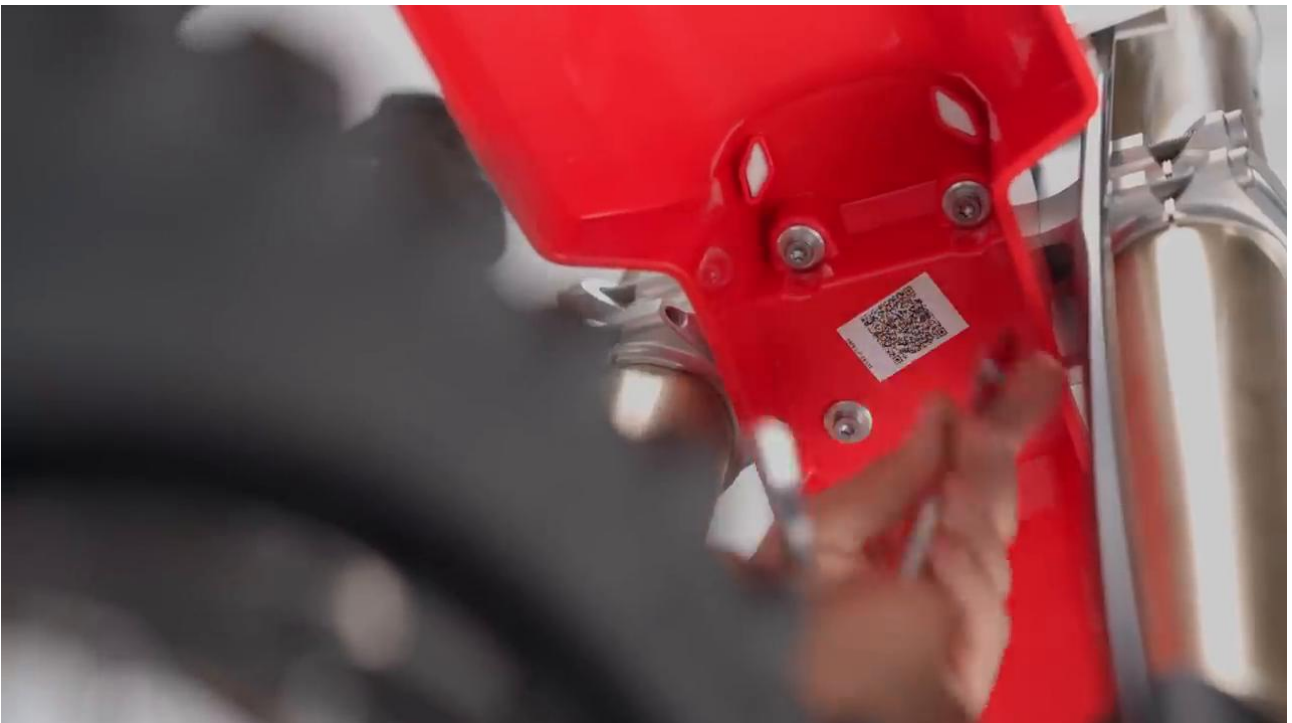

8. Carefully remove the front fender

Carefully remove the front fender.

The bushings may fall during this procedure.




9. Unscrew the top center bolt from the VCU to the frame

Unscrew the top center bolt from the VCU to the frame.



10. Remove the two side bolts from the VCU to the frame

Remove the two side bolts from the VCU to the frame.

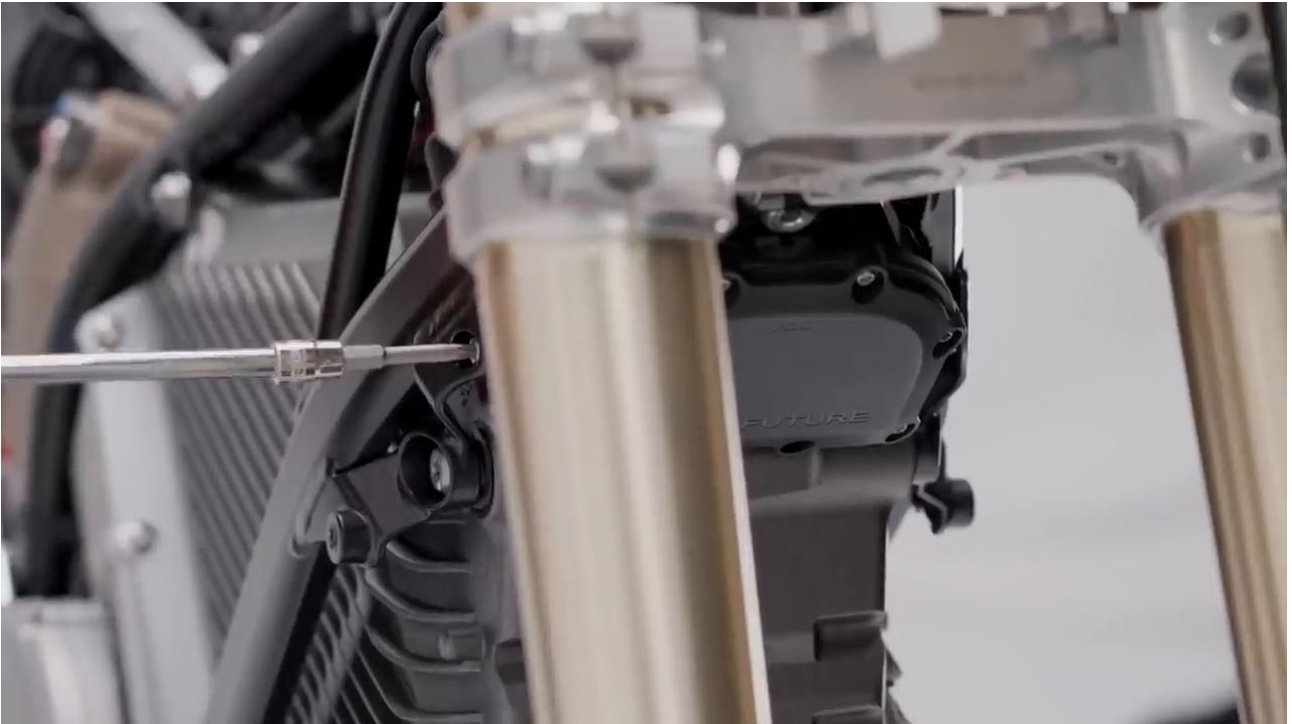

11. Unplug the VCU from the wiring harness connector

Unplug the VCU from the wiring harness connector.



12. Carefully remove the VCU from the bike

Carefully remove the VCU from the bike.



13. Plug the VCU into the wiring harness connector

Plug the VCU into the wiring harness connector.

Make sure to secure the connector.



Installation Procedure

14. Tighten the side bolts from the VCU to the frame at 2 Nm

Tighten the side bolts from the VCU to the frame at **2 Nm**.



15. Tighten the center bolt from the VCU to the frame at 5 Nm

Tighten the center bolt from the VCU to the frame at **5 Nm**.



16. Carefully place the front fender under the lower triple clamp and into the number plate inserts

Carefully place the front fender under the lower triple clamp and into the number plate inserts.



17. Tighten the four bolts from the front fender to the lower triple clamp to 8 Nm

Tighten the four bolts from the front fender to the lower triple clamp to **8 Nm**.

The bushings have to be in place.



18. Carefully position the carbon spoiler assembly on top of the frame

Carefully position the carbon spoiler assembly on top of the frame.



19. Tighten the carbon fiber spoiler to frame bolts to 8 Nm

Tighten the carbon fiber spoiler to frame bolts to **8 Nm**.

The two shorter bolts must be placed on the upper position of each side.



20. Position the spoiler assembly on top of the bike and slide it forward and downward

Position the spoiler assembly on top of the bike and slide it forward and downward.



21. Tighten the four front bolts to 5 Nm

Tighten the four front bolts to **5 Nm**.



22. Tighten the subframe to seat base bolt to 10 Nm

Tighten the subframe to seat base bolt to **10 Nm**.



23. Tighten the side plate bolts to 20 Nm

Tighten the side plate bolts to **20 Nm**.



Torque Summary

Component	Torque
Tighten the side bolts from the VCU to the frame	2 Nm
Tighten the center bolt from the VCU to the frame	5 Nm
Tighten the four bolts from the front fender to the lower triple clamp	8 Nm
Tighten the carbon fiber spoiler to frame bolts	8 Nm
Tighten the four front bolts	5 Nm
Tighten the subframe to seat base bolt	10 Nm
Tighten the side plate bolts	20 Nm

Video-sourced torque items:

- Tighten the side bolts from the VCU to the frame: **2 Nm** from the official Stark tutorial video.
- Tighten the center bolt from the VCU to the frame: **5 Nm** from the official Stark tutorial video.
- Tighten the four bolts from the front fender to the lower triple clamp: **8 Nm** from the official Stark tutorial video.
- Tighten the carbon fiber spoiler to frame bolts: **8 Nm** from the official Stark tutorial video.
- Tighten the four front bolts: **5 Nm** from the official Stark tutorial video.
- Tighten the subframe to seat base bolt: **10 Nm** from the official Stark tutorial video.
- Tighten the side plate bolts: **20 Nm** from the official Stark tutorial video.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.