

# Remove and Install Handlebar - Stark VARG MX 1.2 / EX

Video link: [https://www.youtube.com/watch?v=BDqmEHqy\\_vQ](https://www.youtube.com/watch?v=BDqmEHqy_vQ)

Source video: Remove and Install Handlebar - Stark VARG MX 1.2 by Stark Future Official

Applicable models: MX 1.2 / EX

## Scope

This guide converts the official Stark Future tutorial video into a step-by-step workshop procedure. It documents each action shown in the video in sequence and pairs every step with a dedicated screenshot.

## Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

## Removal Procedure

### 1. Unscrew the number plate bolt from the top triple clamp

Unscrew the number plate bolt from the top triple clamp.



## 2. Remove the front brake hose from the number plate

Remove the front brake hose from the number plate.



## 3. Press the top pad of the mechanism to release the Arkenstone

Press the top pad of the mechanism to release the Arkenstone.



#### 4. Remove the Arkenstone and the foam from the docking station

Remove the Arkenstone and the foam from the docking station.



#### 5. Remove the wireless charging module connectors plastic cover

Remove the wireless charging module connectors plastic cover.



## 6. Disconnect the control switch from the wireless charging module

Disconnect the control switch from the wireless charging module.



## 7. Remove the rubber wire guide from the handlebar


Remove the rubber wire guide from the handlebar.





## 8. Unscrew the control switch bolt

Unscrew the control switch bolt.

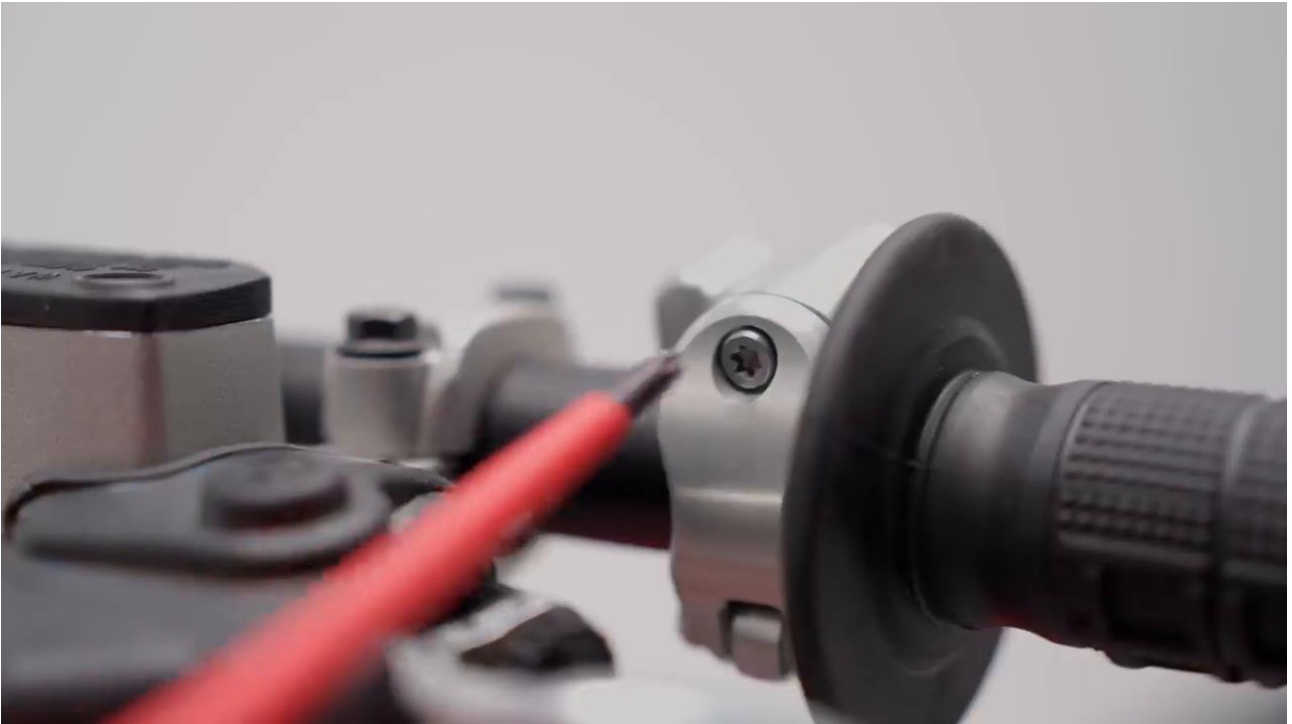

## 9. Carefully remove the control switch from the handlebar

Carefully remove the control switch from the handlebar.



## 10. Unscrew the throttle splitter holder screw to the top triple clamp

Unscrew the throttle splitter holder screw to the top triple clamp



## 11. Carefully remove the throttle splitter holder

Carefully remove the throttle splitter holder.




## 12. Disconnect the throttle from the wireless charging module

Disconnect the throttle from the wireless charging module.



## 13. Carefully remove the throttle cable from the top triple clamp silicone guide

Carefully remove the throttle cable from the top triple clamp silicone guide.

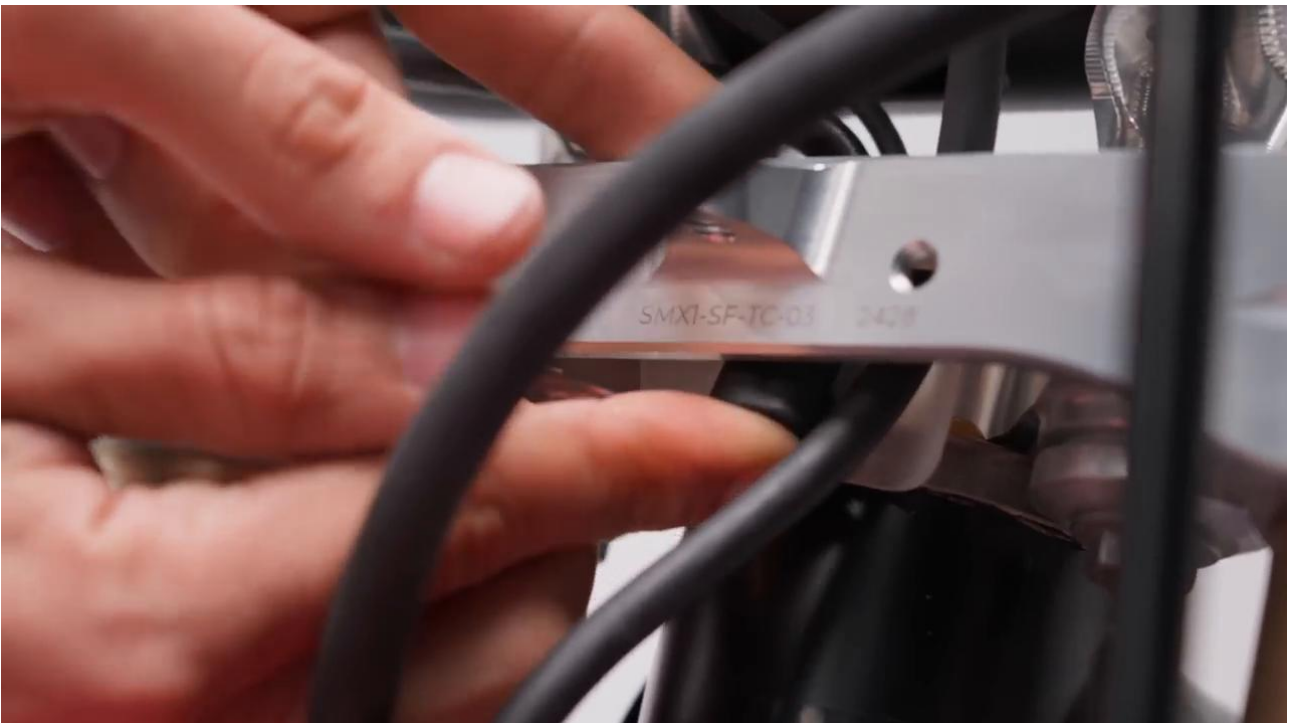

#### **14. Remove the throttle cable rubber strap from the handlebar**

Remove the throttle cable rubber strap from the handlebar.



#### **15. Unscrew the throttle body bolt**

Unscrew the throttle body bolt.





## **16. Remove the throttle assembly from the handlebar**

Remove the throttle assembly from the handlebar.



## **17. Unscrew the two bolts from the handlebar bracket and remove the front brake master cylinder**

Unscrew the two bolts from the handlebar bracket and remove the front brake master cylinder.



**18. Unscrew the two bolts from the handlebar bracket and remove the rear hand brake master cylinder**

Unscrew the two bolts from the handlebar bracket and remove the rear hand brake master cylinder.



**19. Unscrew the four bolts securing the docking station mechanism**

Unscrew the four bolts securing the docking station mechanism.



## 20. Remove the handlebar

Remove the handlebar.



## 21. Carefully position the handle bar onto the lower brackets

Carefully position the handle bar onto the lower brackets.



## Installation Procedure

### 22. Place the docking station mechanism over the handlebar and tighten the four bolts in the specified sequence to 30 Nm

Place the docking station mechanism over the handlebar and tighten the four bolts in the specified sequence to **30 Nm**.





**23. Install the rear hand brake master cylinder by tightening the handlebar bracket bolts to 6 Nm**

Install the rear hand brake master cylinder by tightening the handlebar bracket bolts to **6 Nm**.


Ensure the arrow is facing forward.



**24. Install the front brake master cylinder by tightening the handlebar bracket bolts to 6 Nm**

Install the front brake master cylinder by tightening the handlebar bracket bolts to **6 Nm**.

Ensure the arrow is facing forward.

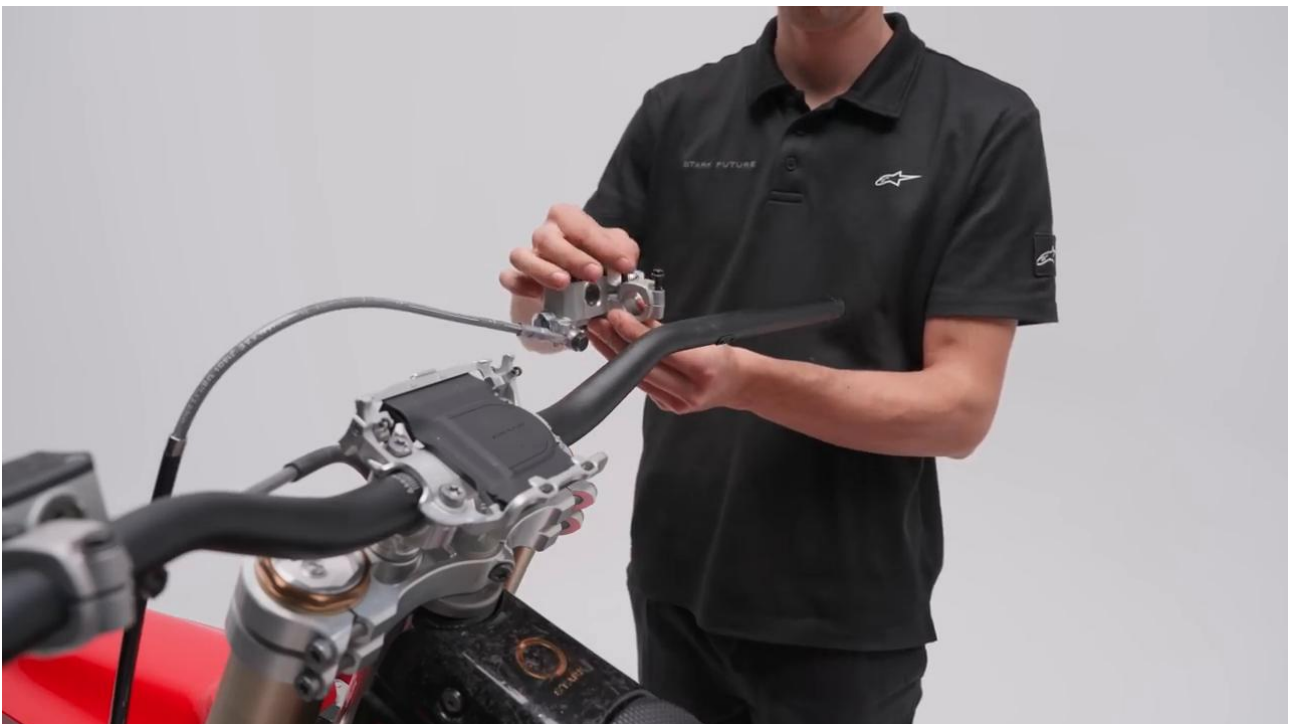

## 25. Install the throttle assembly onto the handlebar

Install the throttle assembly onto the handlebar.



## 26. Tighten the throttle body bolt to 2.5 Nm

Tighten the throttle body bolt to **2.5 Nm**.




## 27. Route the throttle splitter through the top triple clamp silicone guide

Route the throttle splitter through the top triple clamp silicone guide.



## 28. Connect the throttle into the wireless charging module

Connect the throttle into the wireless charging module.

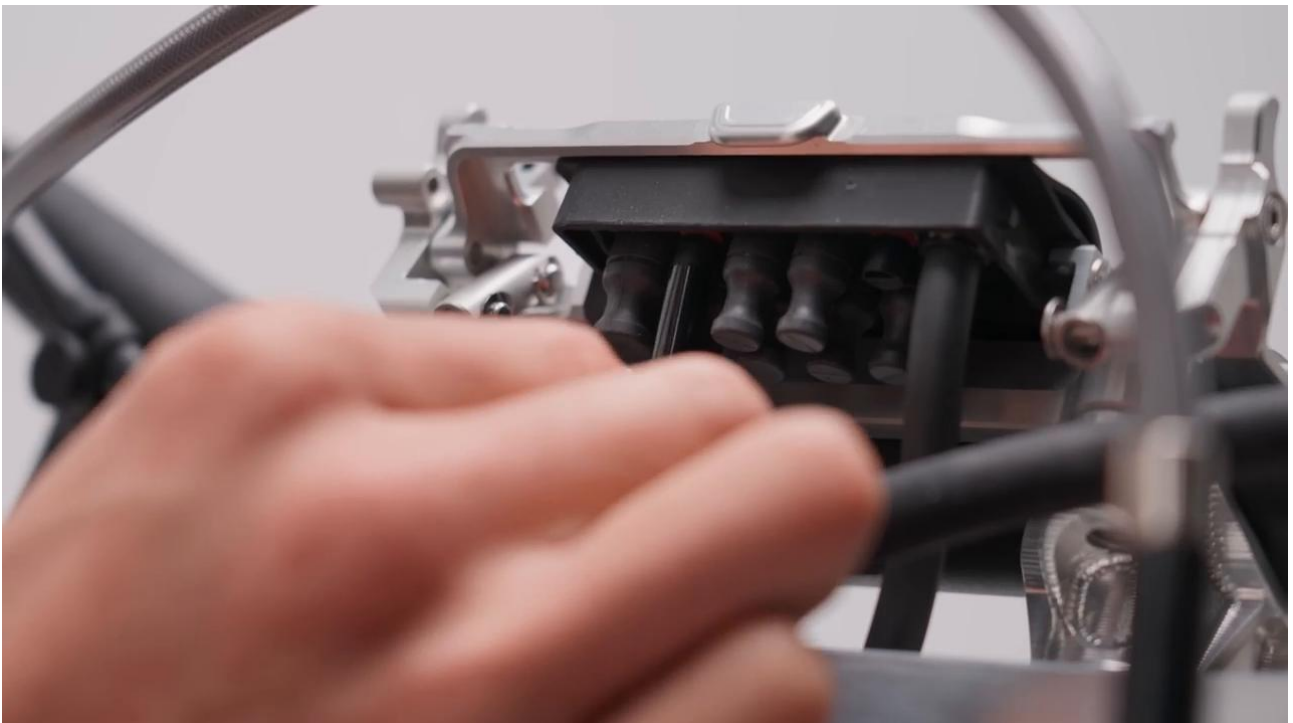




### **29. Secure the throttle cable rubber strap around the handlebar**

Secure the throttle cable rubber strap around the handlebar.



### **30. Clip the throttle splitter into the throttle splitter holder**

Clip the throttle splitter into the throttle splitter holder.

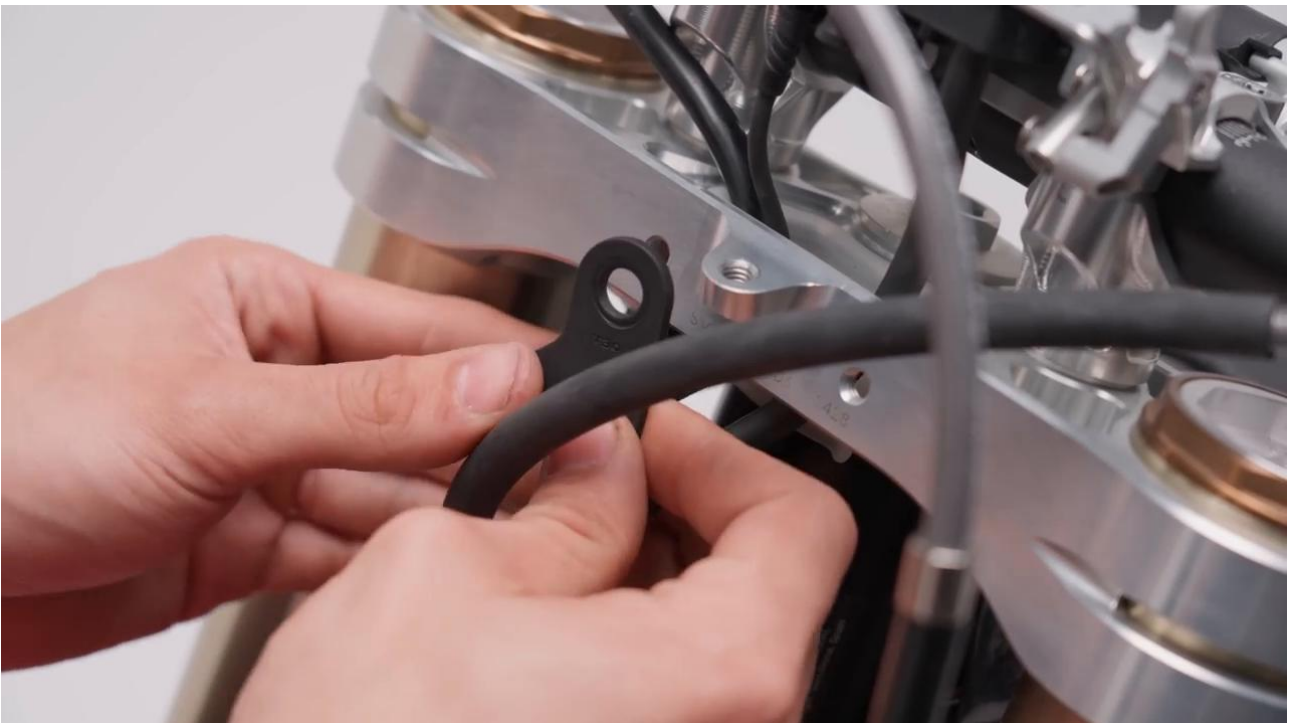



**31. Tighten the throttle splitter holder bolt to the top triple clamp to 5 Nm**

Tighten the throttle splitter holder bolt to the top triple clamp to **5 Nm**.



**32. Carefully guide the control switch cable through the handlebar in and out apertures**

Carefully guide the control switch cable through the handlebar in and out apertures.




### 33. Tighten the control switch bolt to 2,5 Nm

Tighten the control switch bolt to **2.5 Nm**.




### 34. Place the rubber cable guide into the handlebar center aperture

Place the rubber cable guide into the handlebar center aperture.

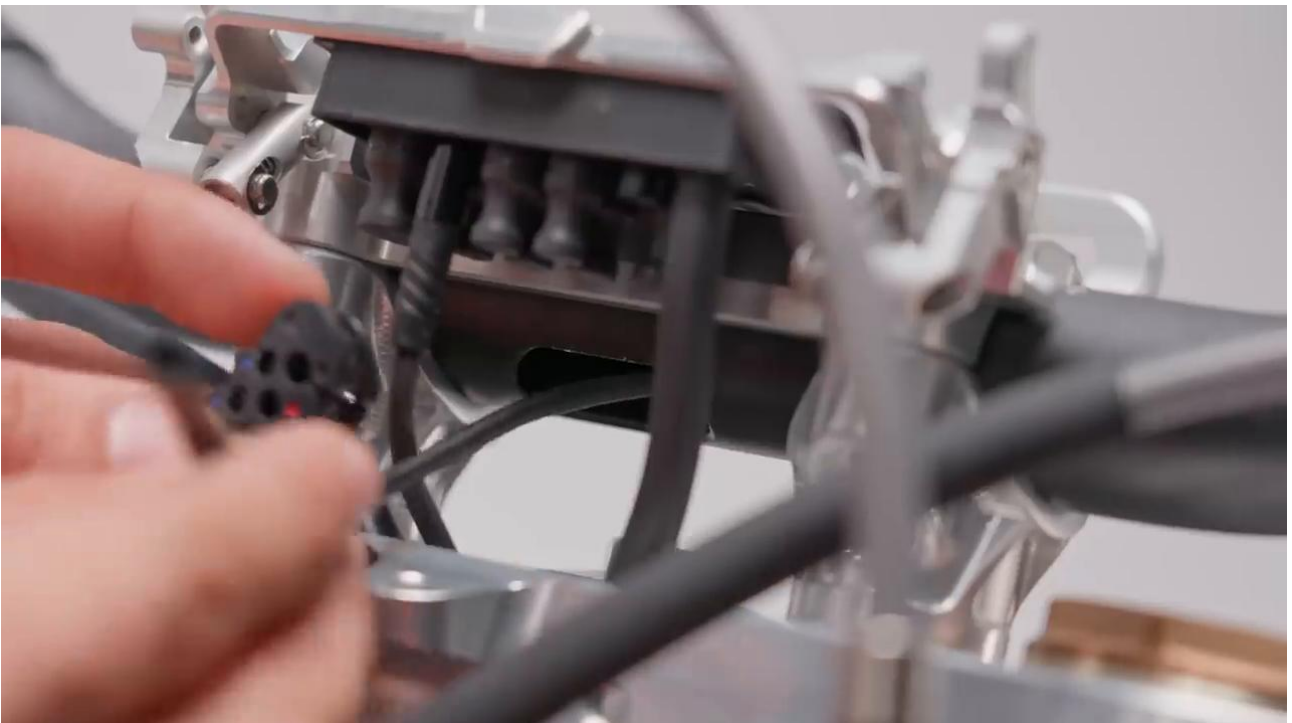

### 35. Connect the control switch into the wireless charging module

Connect the control switch into the wireless charging module.

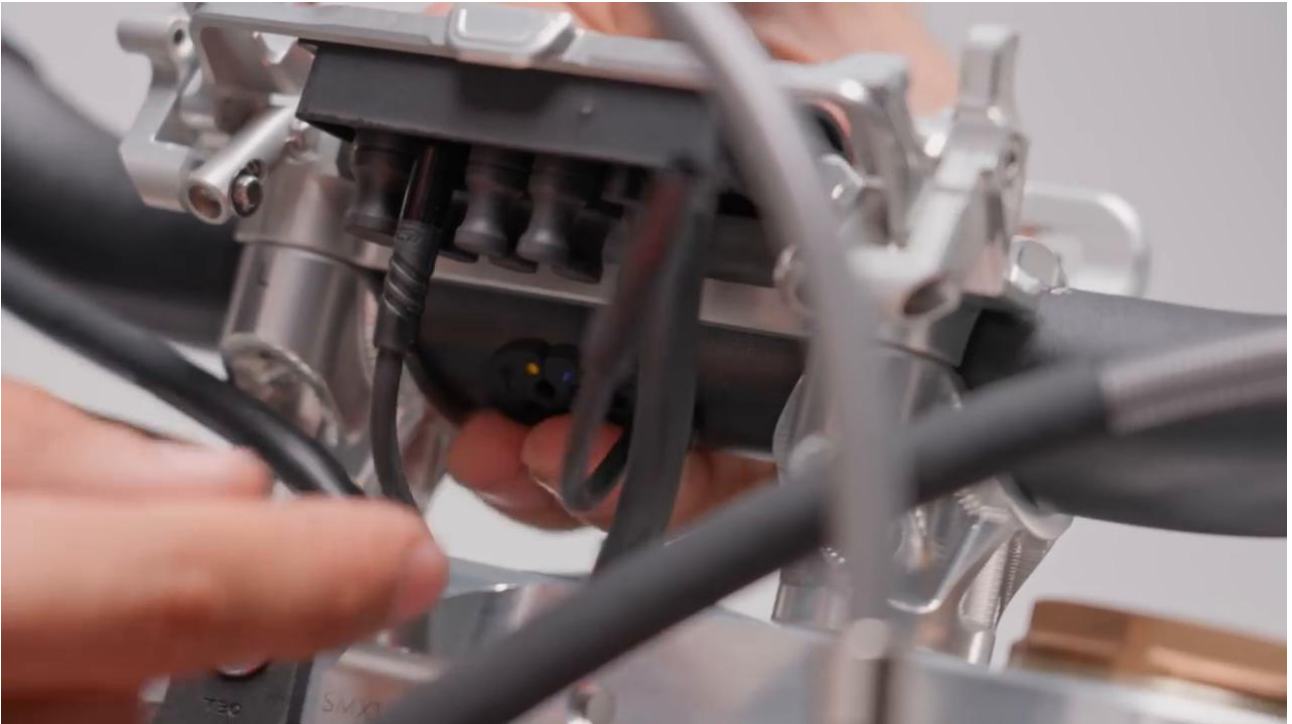

### 36. Place the wireless charging module connectors plastic cover

Place the wireless charging module connectors plastic cover.



### 37. Place the foam into the docking station

Place the foam into the docking station.



### 38. Dock the Arkenstone into the docking station

Dock the Arkenstone into the docking station.





### 39. Position the front brake hose through the number plate guides

Position the front brake hose through the number plate guides.



### 40. Position the number plate over the front fender inserts

Position the number plate over the front fender inserts.



#### 41. Tighten the number plate bolt into the top triple clamp to 8 Nm

Tighten the number plate bolt into the top triple clamp to **8 Nm**.



## Torque Summary

| Component                                                                                                   | Torque |
|-------------------------------------------------------------------------------------------------------------|--------|
| Place the docking station mechanism over the handlebar and tighten the four bolts in the specified sequence | 30 Nm  |
| Install the rear hand brake master cylinder by tightening the handlebar bracket bolts                       | 6 Nm   |
| Install the front brake master cylinder by tightening the handlebar bracket bolts                           | 6 Nm   |
| Tighten the throttle body bolt                                                                              | 2.5 Nm |
| Tighten the throttle splitter holder bolt to the top triple clamp                                           | 5 Nm   |
| Tighten the control switch bolt                                                                             | 2.5 Nm |
| Tighten the number plate bolt into the top triple clamp                                                     | 8 Nm   |

Video-sourced torque items:

- Place the docking station mechanism over the handlebar and tighten the four bolts in the specified sequence: **30 Nm** from the official Stark tutorial video.
- Install the rear hand brake master cylinder by tightening the handlebar bracket bolts: **6 Nm** from the official Stark tutorial video.
- Install the front brake master cylinder by tightening the handlebar bracket bolts: **6 Nm** from the official Stark tutorial video.
- Tighten the throttle body bolt: **2.5 Nm** from the official Stark tutorial video.
- Tighten the throttle splitter holder bolt to the top triple clamp: **5 Nm** from the official Stark tutorial video.
- Tighten the control switch bolt: **2.5 Nm** from the official Stark tutorial video.
- Tighten the number plate bolt into the top triple clamp: **8 Nm** from the official Stark tutorial video.

## Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.