

Remove and Install Subframe - Stark VARG MX 1.2 / EX

Video link: <https://www.youtube.com/watch?v=BqxuHpaQHIE>

Source video: Remove and Install Subframe- Stark VARG MX 1.2 by Stark Future Official

Applicable models: MX 1.2 / EX

Scope

This guide converts the official Stark Future tutorial video into a step-by-step workshop procedure. It documents each action shown in the video in sequence and pairs every step with a dedicated screenshot.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure

1. Unscrew the side plate bolts

Unscrew the side plate bolts.



2. Unscrew the subframe to seat base bolt under the rear fender

Unscrew the subframe to seat base bolt under the rear fender.



3. Unscrew the four front bolts on the side spoilers

Unscrew the four front bolts on the side spoilers.



4. Carefully remove the spoiler assembly by sliding it backwards

Carefully remove the spoiler assembly by sliding it backwards.



5. Unscrew the four bolts that attach the rear fender to the subframe

Unscrew the four bolts that attach the rear fender to the subframe.



6. Carefully remove the rear fender from the bike

Carefully remove the rear fender from the bike.



7. Remove the fan connector bracket from the subframe

Remove the fan connector bracket from the subframe.



8. Remove the subframe cable holder

Remove the subframe cable holder.



9. Unscrew the three bolts that hold the radiator to the subframe

Unscrew the three bolts that hold the radiator to the subframe.

Remove the bushings as well.



10. Remove the rubber straps holding the breathing hose of the motor case

Remove the rubber straps holding the breathing hose of the motor case.



11. Unscrew the bottom shock shaft nut

Unscrew the bottom shock shaft nut.



12. Carefully remove the bottom shaft


Carefully remove the bottom shaft.

Gently lift the rear wheel to remove the shaft, and then carefully lower the wheel to the ground.



13. Unscrew the top shock shaft nut

Unscrew the top shock shaft nut.

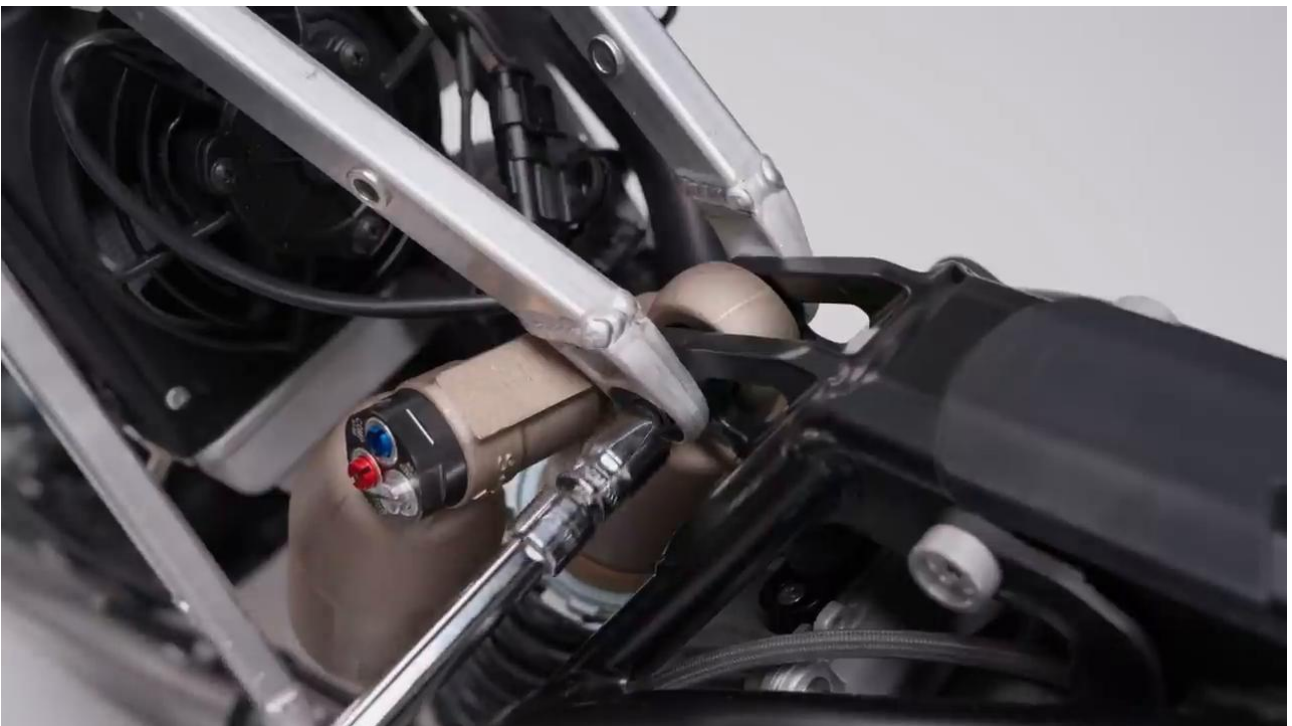

14. Carefully remove the top shock shaft

Carefully remove the top shock shaft.



15. Carefully remove the subframe from the bike

Carefully remove the subframe from the bike.



16. Remove the bushings and the silent blocks from the subframe

Remove the bushings and the silent blocks from the subframe.



Installation Procedure

17. Install the silent blocks and bushings into the subframe

Install the silent blocks and bushings into the subframe.



18. Carefully place the subframe into the bike

Carefully place the subframe into the bike.



19. Install the top shock shaft

Install the top shock shaft.

Ensure that it fits correctly into the subframe.



20. Tighten the top shock shaft nut to 40 Nm

Tighten the top shock shaft nut to **40 Nm**.



21. Install the bottom shock shaft

Install the bottom shock shaft.

Gently lift the rear wheel to install the through the rear shock and rocker arm.



22. Tighten the bottom shock shaft nut to 40 Nm

Tighten the bottom shock shaft nut to **40 Nm**.




23. Place the bushings in their positions and tighten the bolts securing the radiator to the subframe to 5 Nm

Place the bushings in their positions and tighten the bolts securing the radiator to the subframe to **5 Nm**.



24. Tighten the bolt to secure the fan connector bracket into the subframe at 5 Nm

Tighten the bolt to secure the fan connector bracket into the subframe at **5 Nm**.

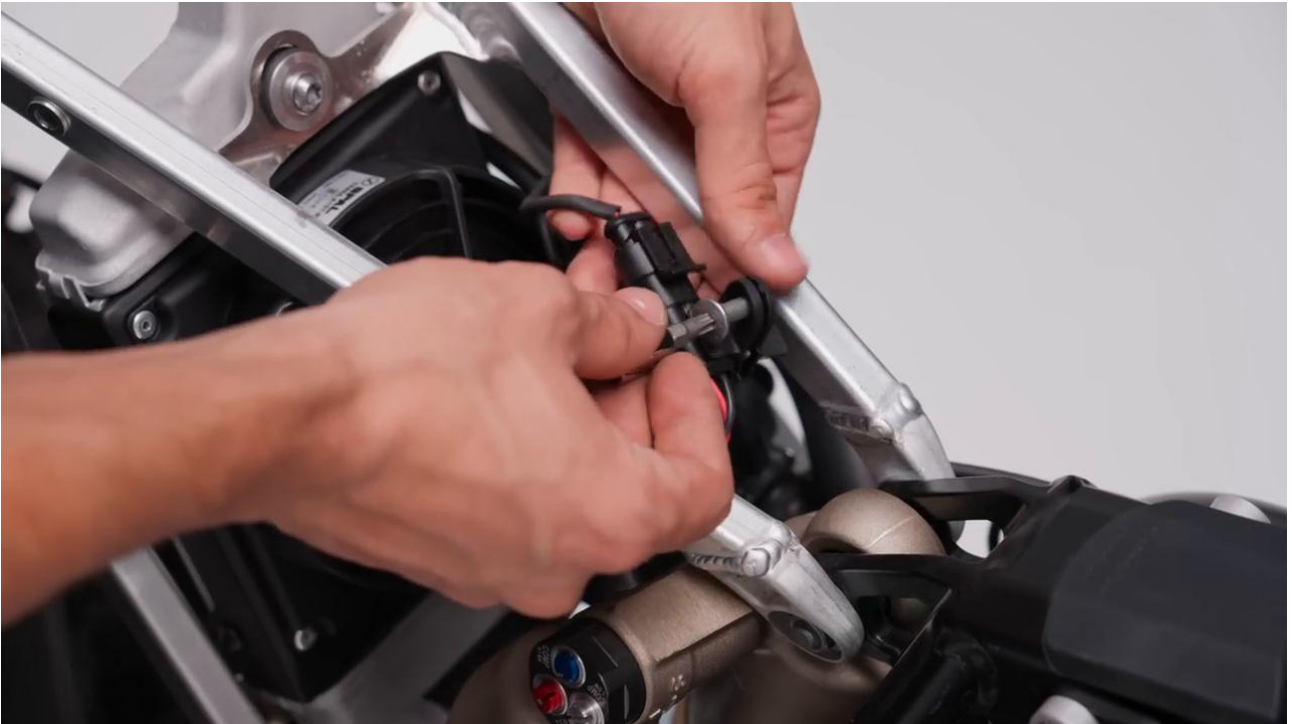

25. Tighten the bolt to secure the cable holder into the subframe at 5 Nm


Tighten the bolt to secure the cable holder into the subframe at **5 Nm**.



26. Position the rubber straps around the subframe to secure the motor case breathing hose

Position the rubber straps around the subframe to secure the motor case breathing hose.

Ensure the wiring harness cable is secured as well.

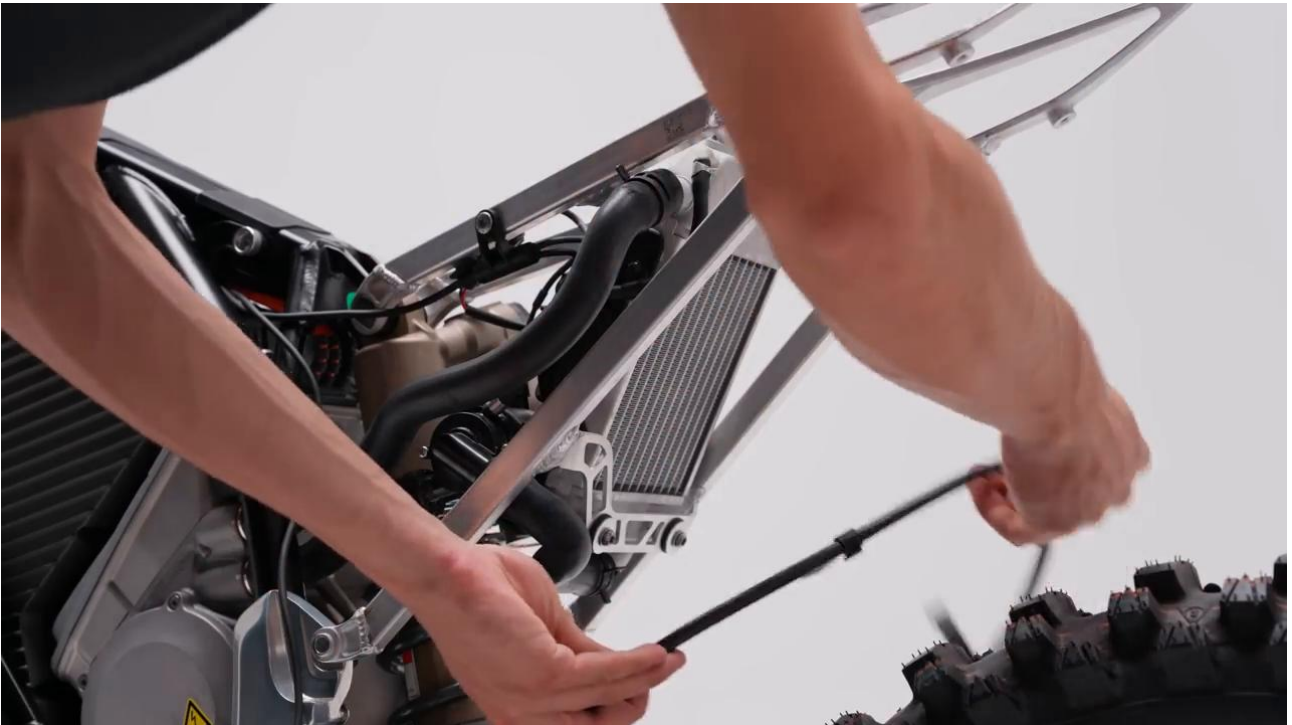

27. Carefully position the rear fender between the subframe and the rear wheel

Carefully position the rear fender between the subframe and the rear wheel.



28. Tighten the four bolts that attach the rear fender to the subframe to 5 Nm

Tighten the four bolts that attach the rear fender to the subframe to **5 Nm**.



29. Position the spoiler assembly on top of the bike and slide it forward and downward

Position the spoiler assembly on top of the bike and slide it forward and downward.



30. Tighten the four front bolts to 5 Nm

Tighten the four front bolts to **5 Nm**.



31. Tighten the subframe to seat base bolt to 10 Nm

Tighten the subframe to seat base bolt to **10 Nm**.



32. Tighten the side plate bolts to 20 Nm

Tighten the side plate bolts to **20 Nm**.



Torque Summary

Component	Torque
Tighten the top shock shaft nut	40 Nm
Tighten the bottom shock shaft nut	40 Nm
Place the bushings in their positions and tighten the bolts securing the radiator to the subframe	5 Nm
Tighten the bolt to secure the fan connector bracket into the subframe	5 Nm
Tighten the bolt to secure the cable holder into the subframe	5 Nm
Tighten the four bolts that attach the rear fender to the subframe	5 Nm
Tighten the four front bolts	5 Nm
Tighten the subframe to seat base bolt	10 Nm
Tighten the side plate bolts	20 Nm

Video-sourced torque items:

- Tighten the top shock shaft nut: **40 Nm** from the official Stark tutorial video.
- Tighten the bottom shock shaft nut: **40 Nm** from the official Stark tutorial video.
- Place the bushings in their positions and tighten the bolts securing the radiator to the subframe: **5 Nm** from the official Stark tutorial video.
- Tighten the bolt to secure the fan connector bracket into the subframe: **5 Nm** from the official Stark tutorial video.
- Tighten the bolt to secure the cable holder into the subframe: **5 Nm** from the official Stark tutorial video.
- Tighten the four bolts that attach the rear fender to the subframe: **5 Nm** from the official Stark tutorial video.
- Tighten the four front bolts: **5 Nm** from the official Stark tutorial video.
- Tighten the subframe to seat base bolt: **10 Nm** from the official Stark tutorial video.
- Tighten the side plate bolts: **20 Nm** from the official Stark tutorial video.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.