


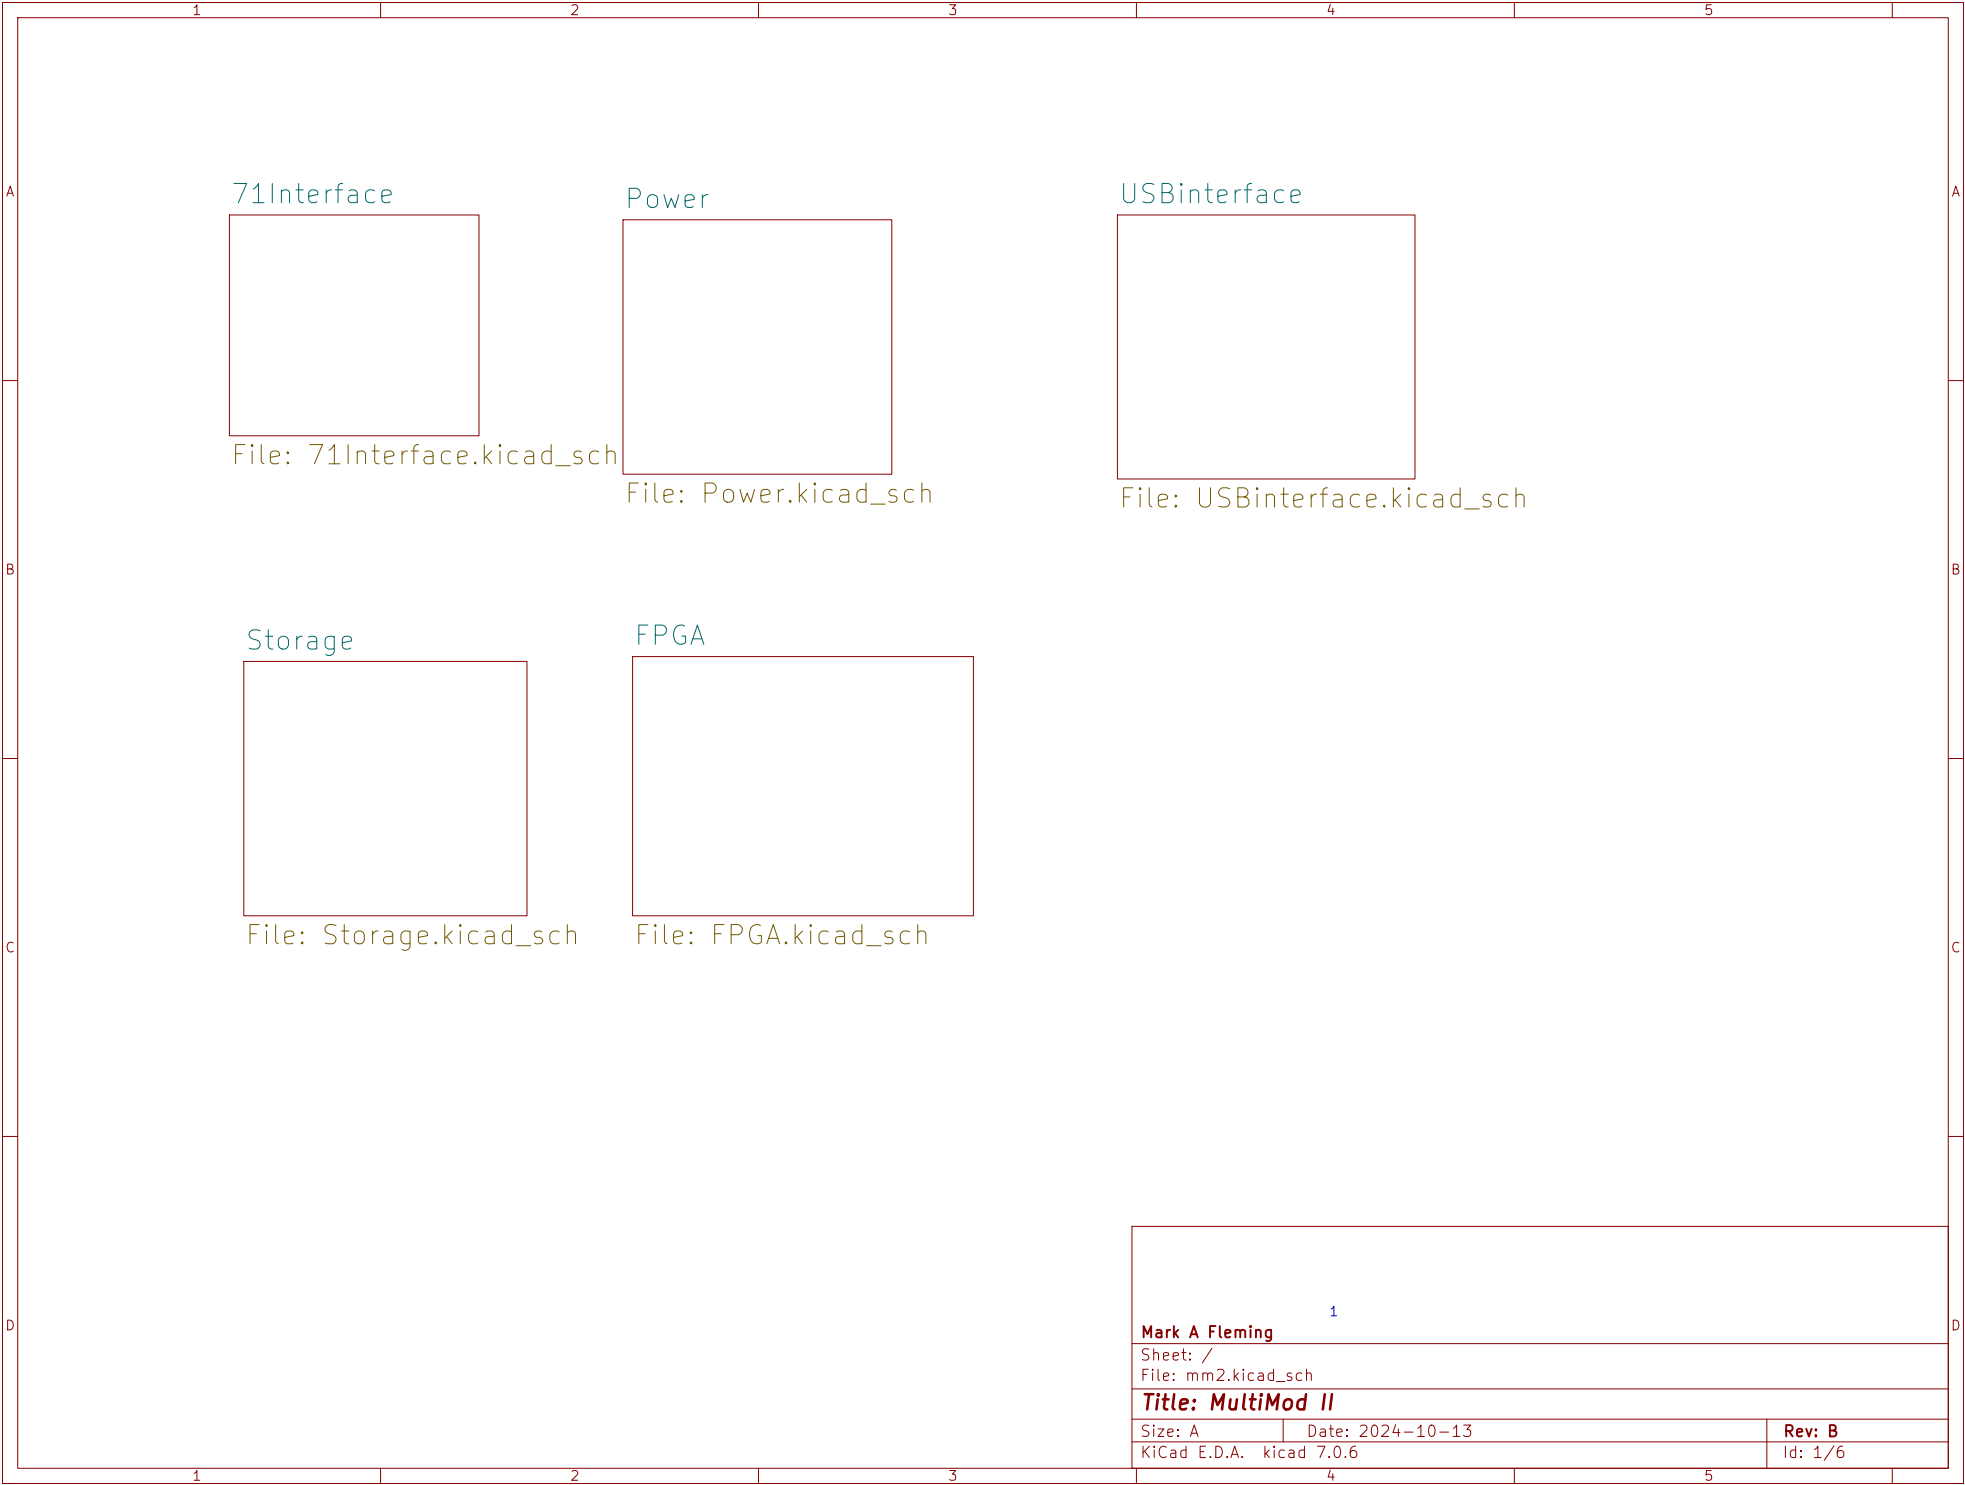

71Interface



File: 71Interface.kicad_sch

Power



File: Power.kicad_sch

USBinterface



File: USBinterface.kicad_sch

Storage



File: Storage.kicad_sch

FPGA



File: FPGA.kicad_sch

Mark A Fleming


Sheet: /
File: mm2.kicad_sch

Title: MultiMod II


Size: A Date: 2024-10-13
KiCad E.D.A. kicad 7.0.6

Rev: B
Id: 1/6

3V < Vdd < 18V, Vcc can exceed Vdd

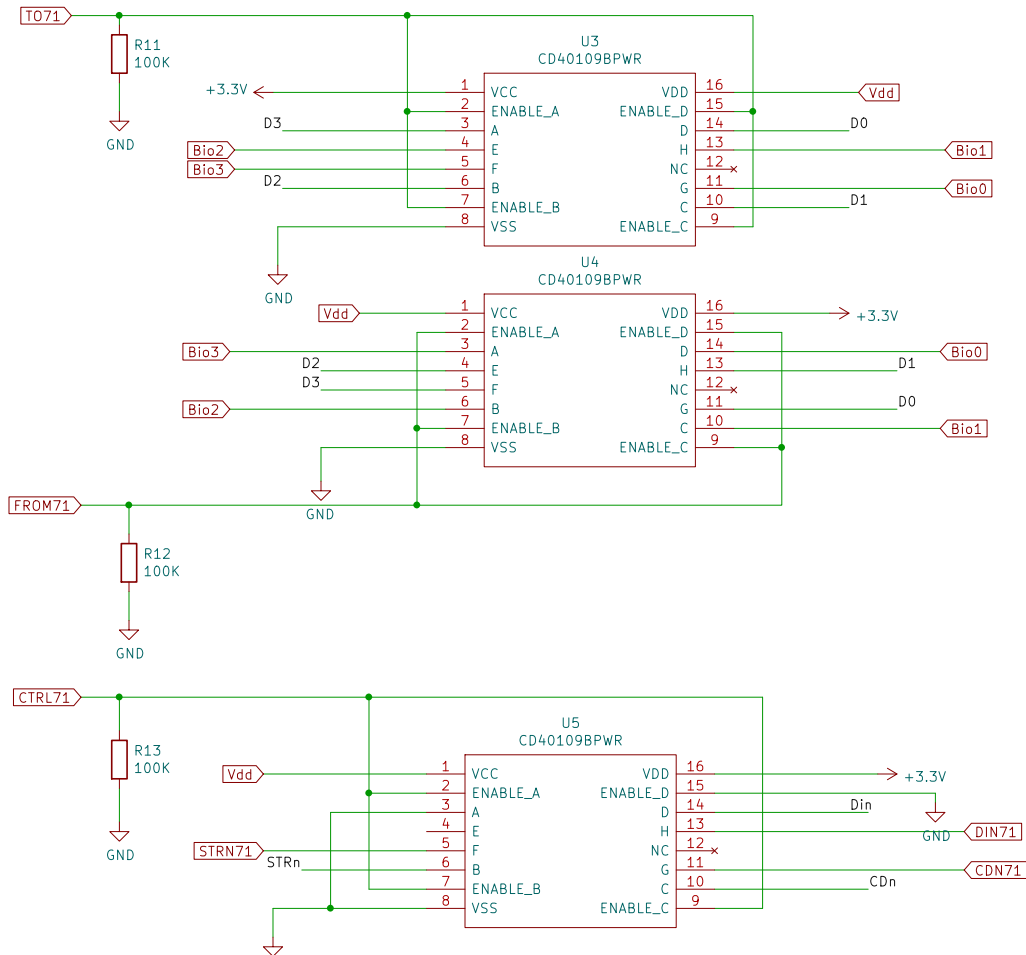

A custom PCB footprint is needed with proper hole size and spacing

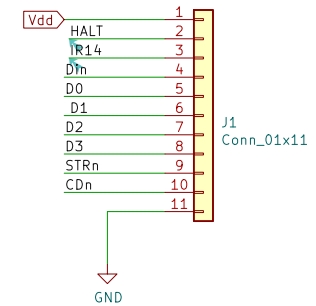

Pulldowns protect 71B interface during FPGA initialization and when power jumper removed


HP-71B Interface

Sheet: /71Interface/
File: 71Interface.kicad_sch

Title: MultiMod II

Size: A Date: 2024-10-13
KiCad E.D.A. kicad 7.0.6

Rev: B
Id: 2/6

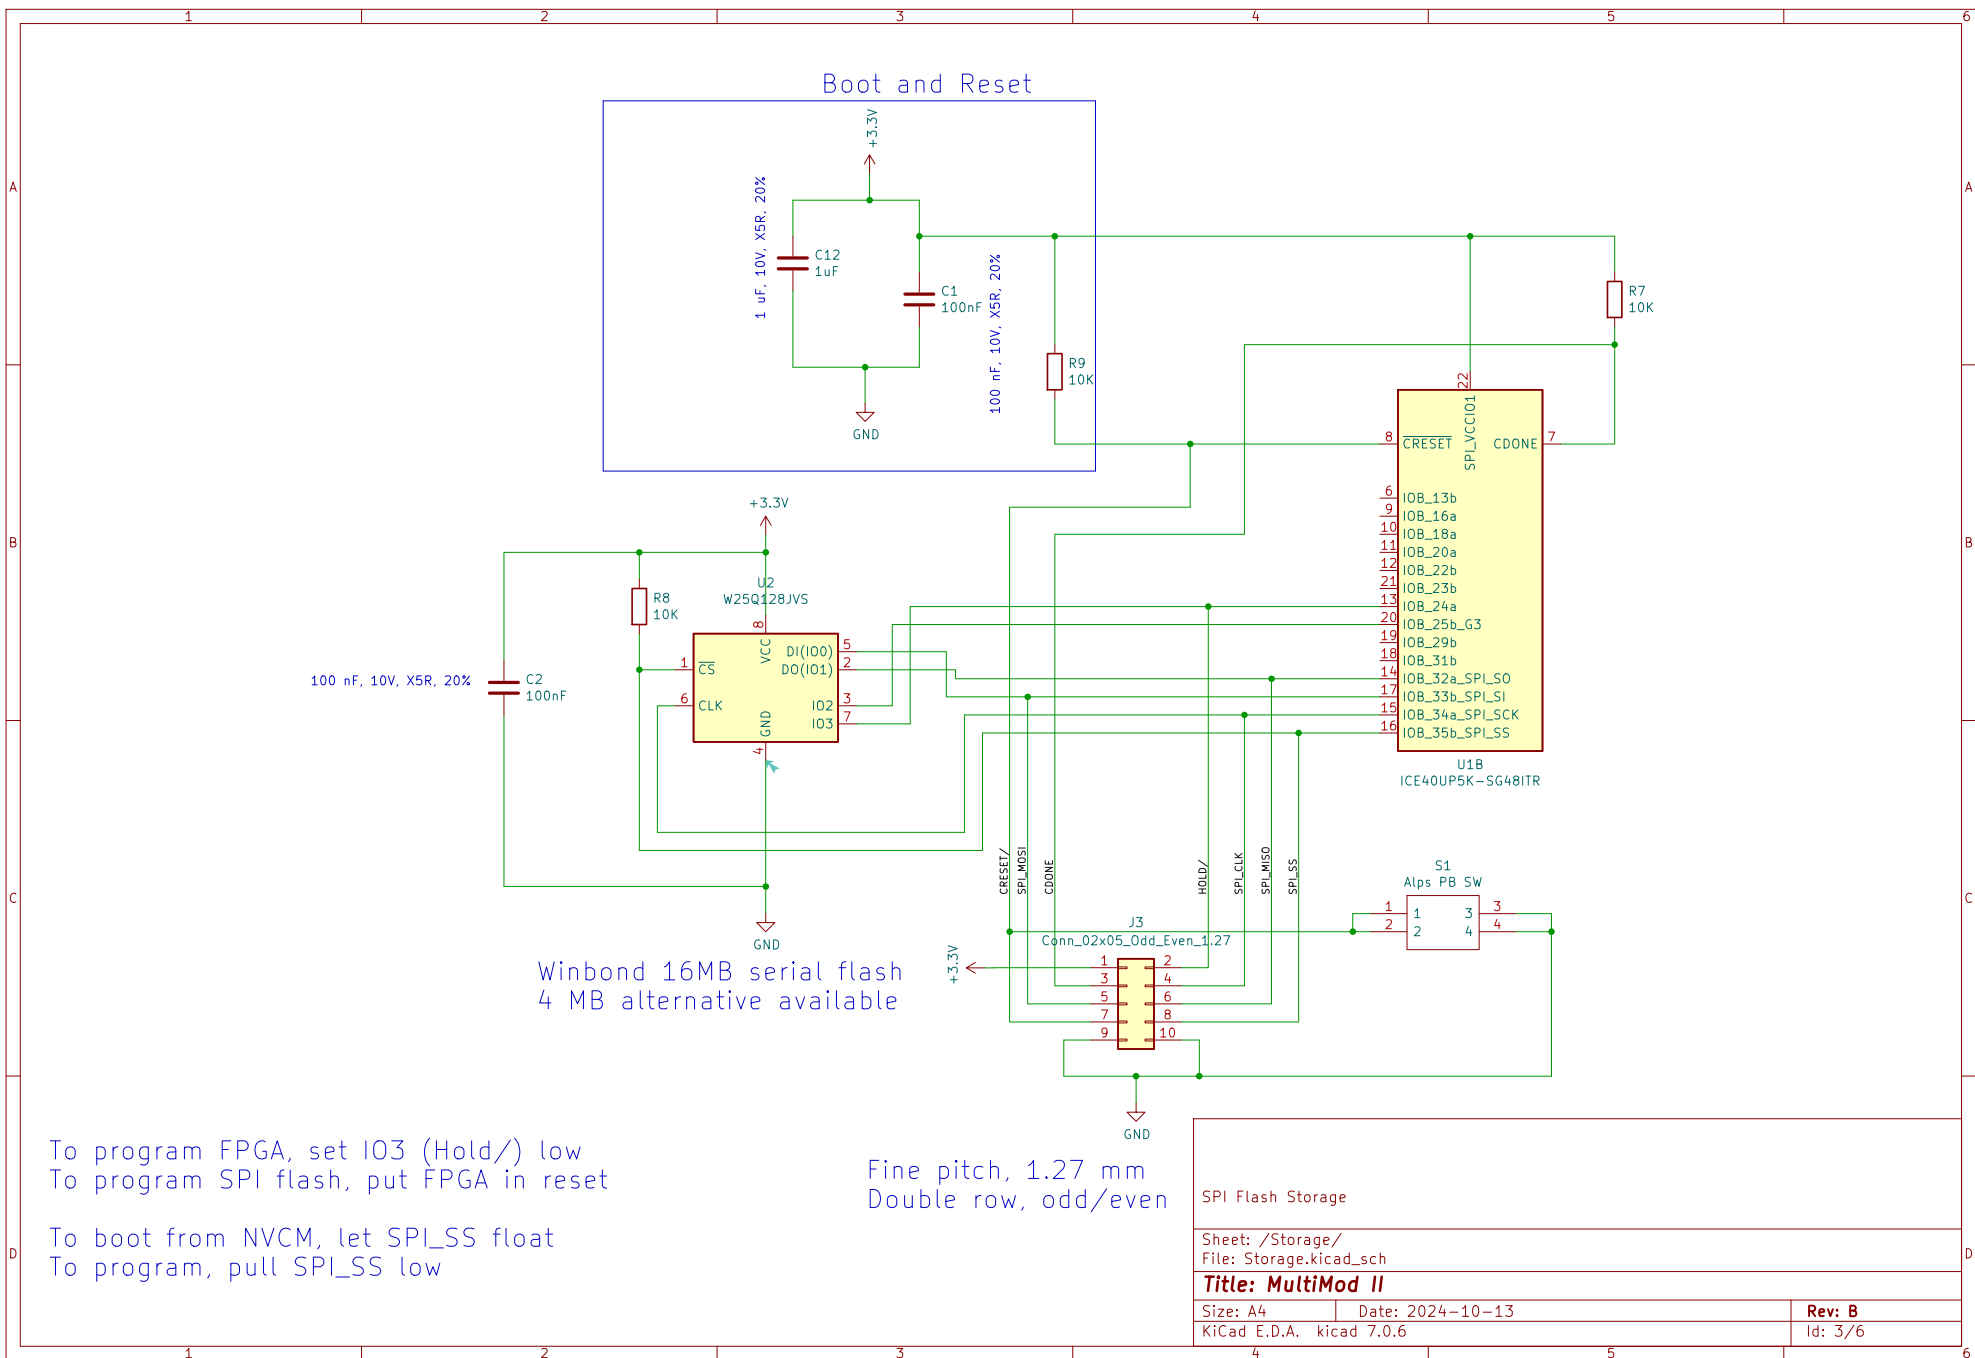

SPI Flash Storage

Sheet: /Storage/
File: Storage.kicad_sch



Title: MultiMod II

Size: A4 Date: 2024-10-13
KiCad E.D.A. kicad 7.0.6

Rev: B
Id: 3/6

Power Supply Sequencing

- 1) 1.2V FPGA core voltage
- 2) 3.3V External I/O
- 3) 2.5V External I/O

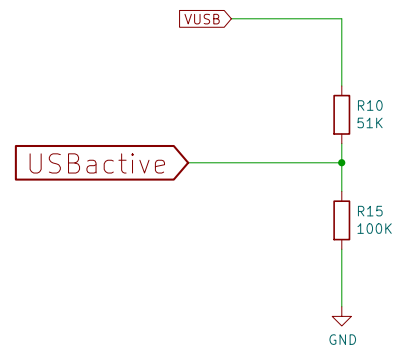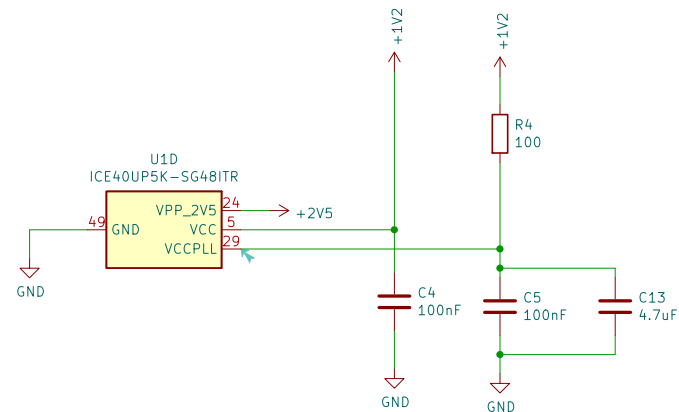


Sheet: /Power/
File: Power.kicad_sch


Size: A	Date: 2024-10-13
---------	------------------

Size: A	Date: 2
KiCad E.D.A.	kiCad 7.0.6

Rev: B

Id: 4/6

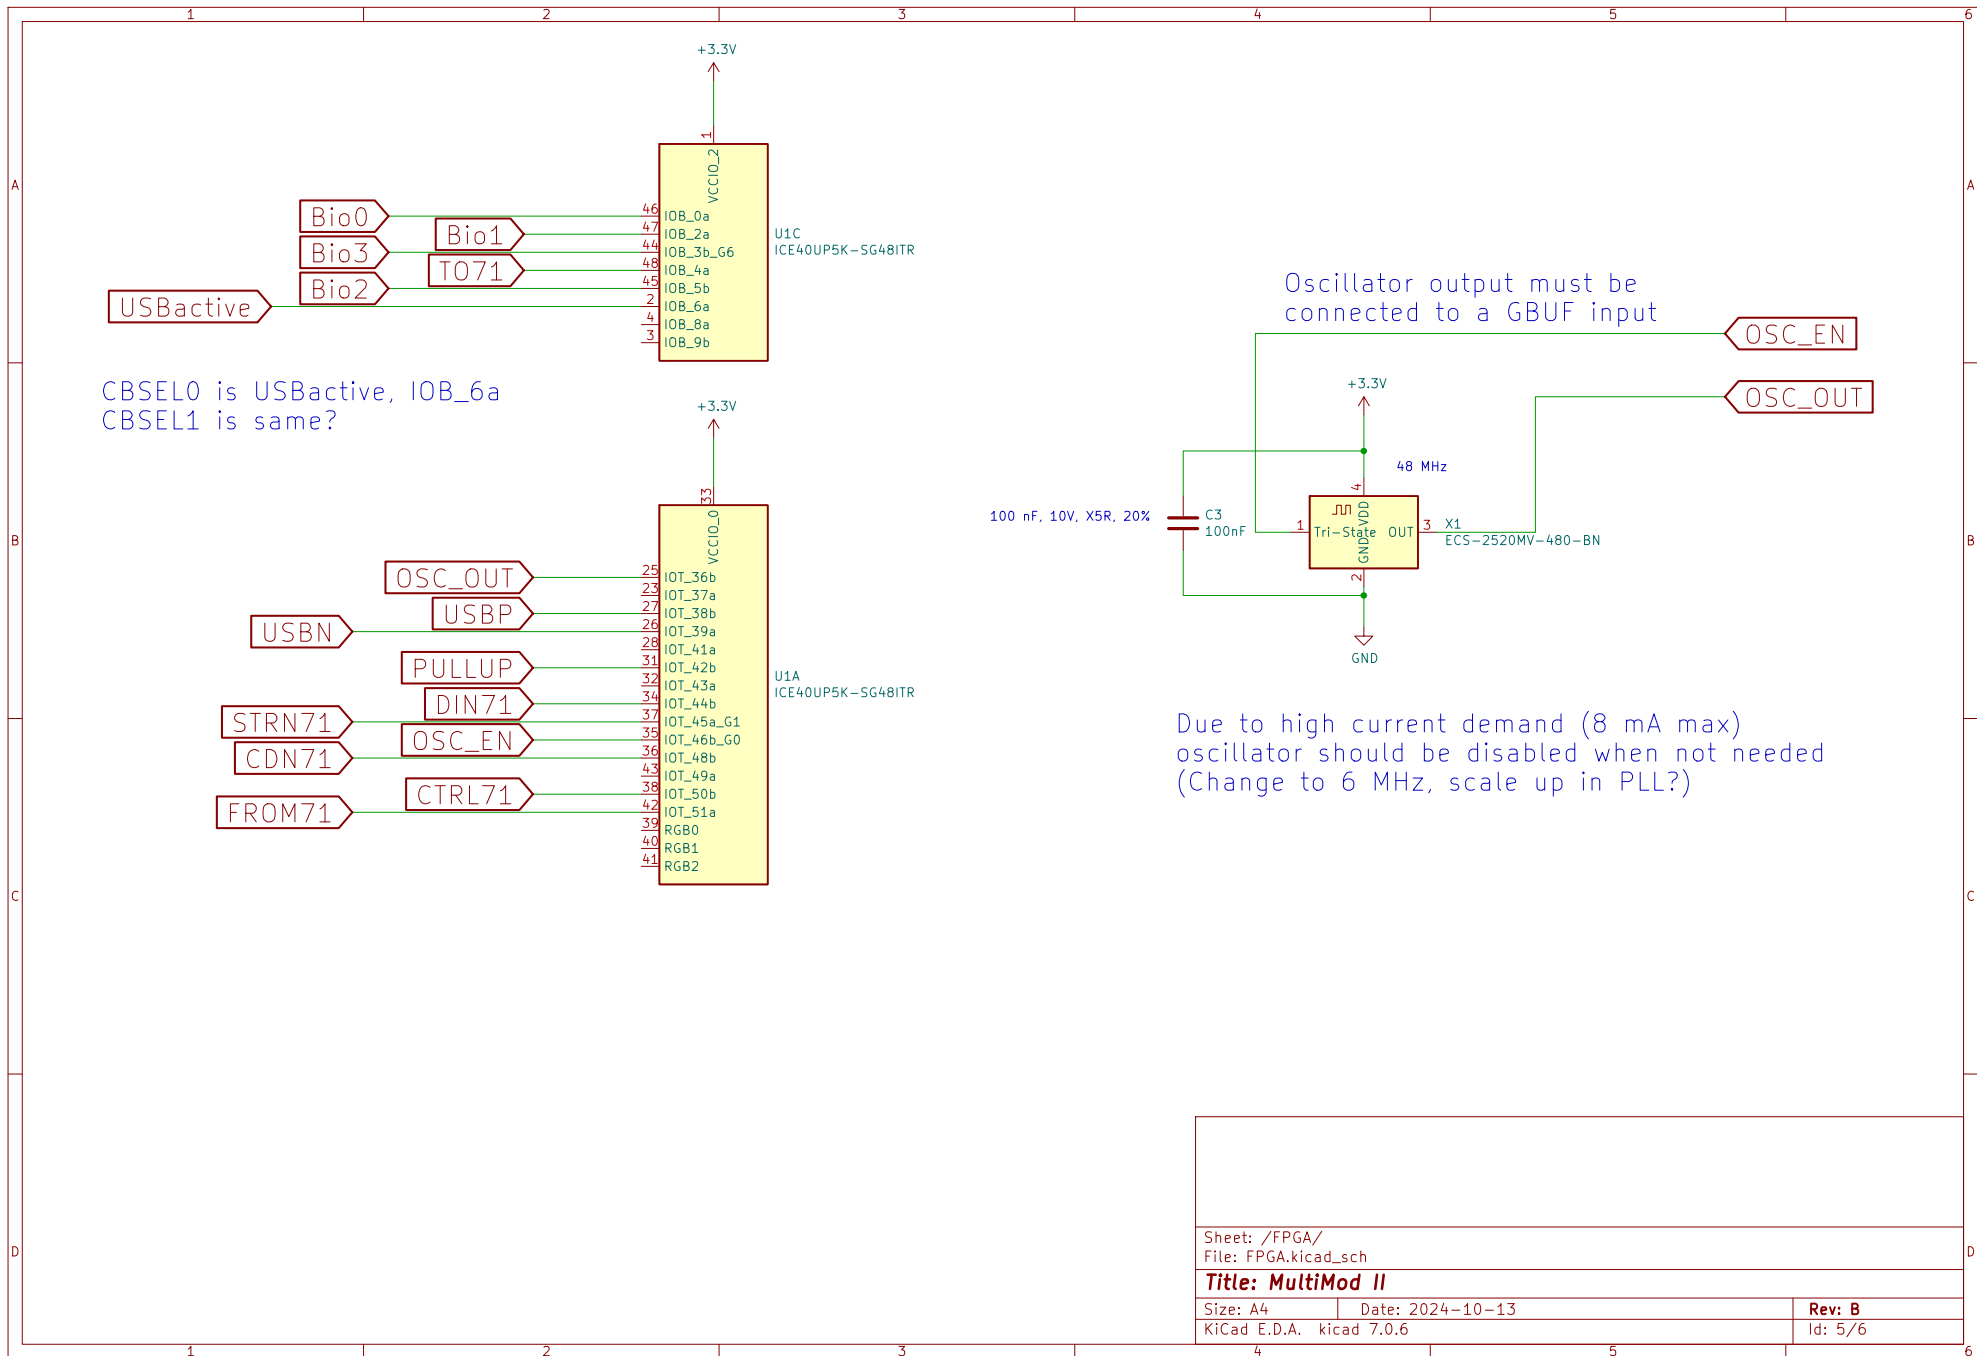

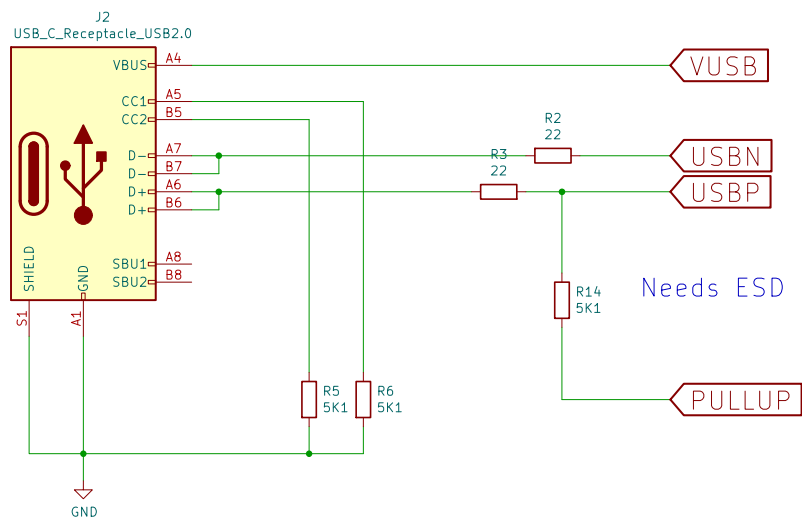

USB Interface

Sheet: /USBinterface/
File: USBinterface.kicad_sch

Title: MultiMod II

Size: A4 Date: 2024-10-13
KiCad E.D.A. kicad 7.0.6

Rev: B
Id: 6/6