


Case 1 – Normal Operation	Case 2 – Heavy Production	Case 3 – M-202 Air Compressor Offline	Case 4 – Future Expansion
BUS-02 = 0.98126 pu	BUS-02 = 0.97895 pu	BUS-02 = 0.98567 pu	BUS-02 = 0.97636 pu
BUS-03 = 0.98125 pu	BUS-03 = 0.97894 pu	BUS-03 = 0.98567 pu	BUS-03 = 0.97636 pu
BUS-04 = 0.98125 pu	BUS-04 = 0.97894 pu	BUS-04 = 0.98567 pu	BUS-04 = 0.97636 pu
BUS-05 = 0.98125 pu	BUS-05 = 0.97894 pu	BUS-05 = 0.98567 pu	BUS-05 = 0.97636 pu
T1 = 66.7%	T1 = 74.4%	T1 = 50.8%	T1 = 84.5%
FDR-01 = 75.2%	FDR-01 = 82.7%	FDR-01 = 73.7%	FDR-01 = 74.3%
FDR-02 = 81.9%	FDR-02 = 91.7%	FDR-02 = 37.9%	FDR-02 = 134.1%
FDR-03 = 69.0%	FDR-03 = 77.1%	FDR-03 = 67.9%	FDR-03 = 69.0%
Utility = 0.43 MW, 0.25 Mvar	Utility = 0.48 MW, 0.28 Mvar	Utility = 0.33 MW, 0.19 Mvar	Utility = 0.55 MW, 0.32 Mvar

Metric	Case 1 Normal	Case 2 Heavy	Case 3 M-202 Offline	Case 4 Future Expansion
BUS-02 Voltage (pu)	0.98126	0.97895	0.98567	0.97636
BUS-03 Voltage (pu)	0.98125	0.97894	0.98567	0.97636
BUS-04 Voltage (pu)	0.98125	0.97894	0.98567	0.97636
BUS-05 Voltage (pu)	0.98125	0.97894	0.98567	0.97636
T1 Loading (%)	66.7	74.4	50.8	84.5
FDR-01 Loading (%)	75.2	82.7	73.7	74.3
FDR-02 Loading (%)	81.9	91.7	37.9	134.1
FDR-03 Loading (%)	69	77.1	67.9	69
Utility MW	0.43	0.48	0.33	0.55
Utility Mvar	0.25	0.28	0.19	0.32


Case	T1 Loading	FDR-01	FDR-02	FDR-03
Case 1 Normal	66.7	75.2	81.9	69
Case 2 Heavy	74.4	82.7	91.7	77.1
Case 3 M-202 Offline	50.8	73.7	37.9	67.9
Case 4 Future Expansion	84.5	74.3	134.1	69

Case	Utility MW	Utility Mvar
Case 1 Normal	0.43	0.25
Case 2 Heavy	0.48	0.28
Case 3 M-202 Offline	0.33	0.19
Case 4 Future Expansion	0.55	0.32

Main Bus Voltage Across Operating Cases

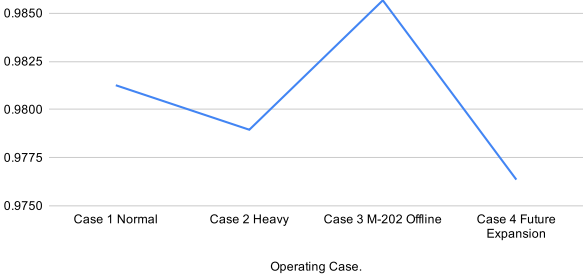

Transformer and Feeder Loading Across Operating Cases

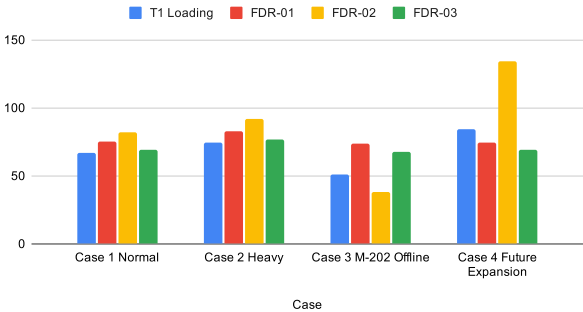

Utility Power Demand Across Operating Cases

