

Flex Battery Interrupter: Assembly Guide

Step 1: Insert 3.5mm Stereo Jack


First insert stereo jack on the Flex PCB side with the thin rectangular part outline, and press the Flex PCB strip onto the stereo jack.

Make sure the strip holes remain aligned with the jack pins.



Step 2: Solder Stereo Jack Joints

Solder all three of the stereo jack joints.

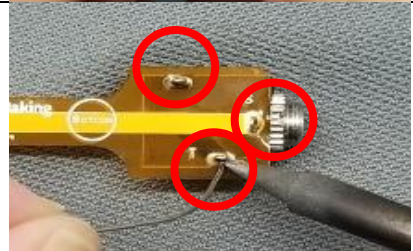


Step 3: Inspect Soldered Joints

Inspect all three solder joints, and make sure they have been properly soldered.



Step 4: Trim Stereo Jack Leads


Using flush cutters, trim the excess length off of the leads on the stereo jack.

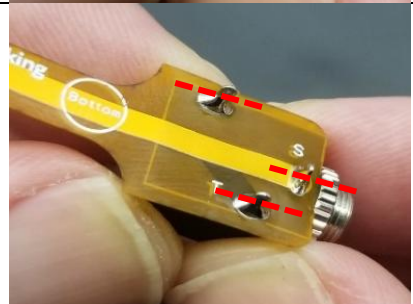

Step 5: Insert Case Spacer

Hold the case spacer against the solder joint side of the Flex PCB strip, as shown. All solder joints should go through the slots, and the spacer should rest flat against the strip.

If the spacer can't rest flat, remove any excess solder from any joint preventing a flat rest.

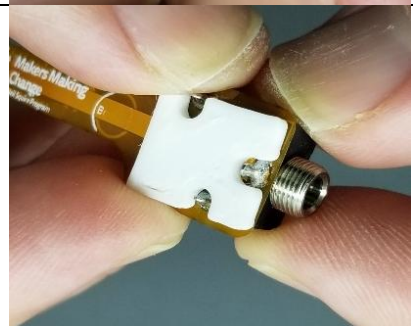


Neil Squire, 2026

© 2026 by Neil Squire. Flex Battery Interrupter Quick Guide is made available under a Creative Commons Attribution-ShareAlike 4.0 License (International): <http://creativecommons.org/licenses/by-sa/4.0>

Step 6: Align Case Spacer

Make sure the 3.5mm stereo jack and the case spacer are correctly aligned.

The case hole should be on top, and the spacer side of the jack should be on the bottom.

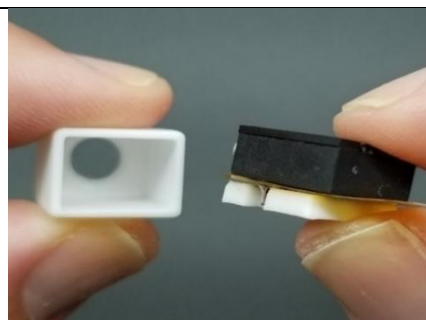


Step 7: Insert 3.5mm Stereo Jack

Slide the aligned 3.5mm stereo jack into the case.



Step 8 (Optional): Use Assembly Tools to Fully Insert Jack

- Place the tool marked "AB" on a flat surface.
- Place the partially assembled jack and case into the tool marked "AB", with the flex PCB facing up and the jack end facing down.
- Place the tool marked "AT" on top of the jack, with the flex PCB going through the slot.
- Push down on tool "AT" until the jack is all the way in the case.

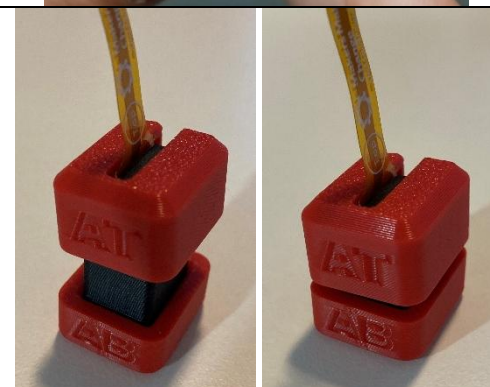

Step 9: Inspect Insertion of 3.5mm Stereo Jack

Make sure the 3.5mm stereo jack is fully inserted, and the jack end protrudes out of the case.



Step 10: Completion

The Flex Battery Interrupter is now fully assembled and is ready for usage. Happy Making!

