

LipSync

ASSEMBLY MANUAL

Version 1.4.6.1

CONTENTS

- 2 Part 0a - Obtaining Components and Files
- 3 Part 0b - Component Checklist
- 8 Part 0c - Equipment Checklist
- 9 Electrical Assembly
- 30 Joystick Assembly
- 51 Setting Up the Device

PART 0a

OBTAINING COMPONENTS AND FILES

Components should be ordered at least 2 weeks in advance to allow for sufficient shipping time. See Part 0b for the full list of components and its purchase links.

All components can be purchased through the links listed under each item. Required parts from Digikey can be purchased here:

Canada: <http://www.digikey.ca/short/jb9vm5>

United States: <http://www.digikey.com/short/jb9vm5>

Download all the necessary files and directories to assemble a LipSync:

<https://github.com/makersmakingchange/LipSync/blob/master/README.md>

LipSync-master\Hardware\Housing_design: Contains all 3D printing files in STL format and its respective print settings

LipSync-master\Hardware\PCB_design: Contains schematic and layout for the LipSync printed circuit boards

LipSync-master\Software\LipSync_Firmware: Contains microcontroller code


LipSync-master\LipSync_BOM.csv: Contains LipSync Components in CSV format

PART 0b

COMPONENT CHECKLIST


- 1** (1) LipSync Circuit Board Package (3 boards)
- 2** (1) Arduino Micro **OR**
(1) Genuino Micro
- 3** (2) Right Angle Push Buttons
- 4** (2) 300 Ohm 1/4W T/H Resistors
- 5** (4) 10k Ohm Mini 1/4W T/H Resistors
- 6** (1) NXP Semiconductors Pressure Sensor
- 7** (1) 0.01uF Ceramic T/H Radial Capacitor
- 8** (1) 1.0uF Ceramic T/H Radial Capacitor
- 9** (1) 470pF Ceramic T/H Capacitor

<input type="checkbox"/> 10	(2) 17-Position Straight Female T/H Headers	<input type="checkbox"/> 22	(1) Joystick Rocker	<input type="checkbox"/> 34	(1) Luer Lock Nut
<input type="checkbox"/> 11	(2) 3-Position Right Angle Male Headers	<input type="checkbox"/> 23	(1) Joystick Baseplate	<input type="checkbox"/> 35	(4) Bumpers
<input type="checkbox"/> 12	(2) 3-Position Straight Female Header	<input type="checkbox"/> 24	(1) Rear Housing	<input type="checkbox"/> 36	(4) Nuts M3
<input type="checkbox"/> 13	(2) 4-Position Straight Female T/H Headers	<input type="checkbox"/> 25	(2) Buttons	<input type="checkbox"/> 37	(1) Tubing 3/32" ID x 45mm
<input type="checkbox"/> 14	(1) Break Away Male Headers	<input type="checkbox"/> 26	(1) Mouthpiece	<input type="checkbox"/> 38	(1) Light Pipe
<input type="checkbox"/> 15	(1) 5mm Bi-Color T/H LED	<input type="checkbox"/> 27	(1) Filter	<input type="checkbox"/> 39	(1) Threaded Insert 5/8"-27
<input type="checkbox"/> 16	(1) Shunt Connector	<input type="checkbox"/> 28	(1) Luer Lock Fitting	<input type="checkbox"/> 40	(1) Threaded Adapter 5/8"-27
<input type="checkbox"/> 17	(1) 2N3906 PNP-Type T/H Transistor	<input type="checkbox"/> 29	(4) Force Resistive Sensor	<input type="checkbox"/> 41	(1) USB Cable
<input type="checkbox"/> 18	(1) 6-Position Straight Female T/H Header	<input type="checkbox"/> 30	(4) Screws Phillips Head M3	<input type="checkbox"/> 42	(1) USB Adapter
<input type="checkbox"/> 19	OPTIONAL (1) 1-Position Straight Female T/H Header	<input type="checkbox"/> 31	(6) Compression Springs	<input type="checkbox"/> 43	(1) Cable Tie
<input type="checkbox"/> 20	(1) Front Housing	<input type="checkbox"/> 32	(2) Standoffs M3 10mm	<input type="checkbox"/> 44	(10) Velcro Strap 0.5" x 6"
<input type="checkbox"/> 21	(1) Joystick Front Plate	<input type="checkbox"/> 33	(2) Standoffs M3 15mm	<input type="checkbox"/> 45	OPTIONAL (1) Magic Arm 11" and Clamp

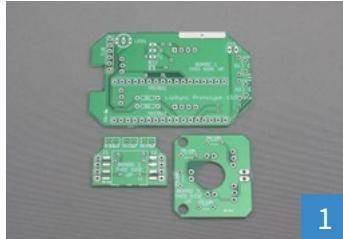


LipSync Circuit Board Pack:
(1) Main Interface Board
(1) Pressure Sensor Board
(1) Joystick Board
[LipSync GitHub](#)

1

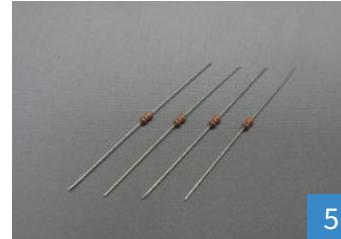

(4) 10k Ohm Mini Axis
Through Hole Resistors
[Digikey.ca](#)
[Digikey.com](#)
*or from any electronics shop

5

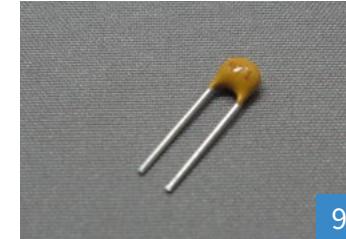


(1) 470pF Ceramic Through
Hole Radial Capacitor
[capacitor label: 471]
[Digikey.ca](#)
[Digikey.com](#)
*or from any electronics shop

9




(1) Arduino Micro/ Genuino
Micro microcontroller
[Arduino](#) [Digikey](#) [Robotshop](#)
[Adafruit](#) [Pololu](#)
COMPATIBILITY NOTE: The
"Arduino Micro" or "Genuino
Micro" **MUST** be used.

2

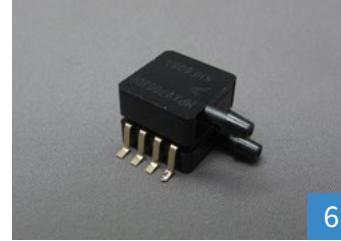

(1) NXP Pressure Sensor
[component label:
MPXV7002DP]
[Digikey.ca](#)
[Digikey.com](#)

6

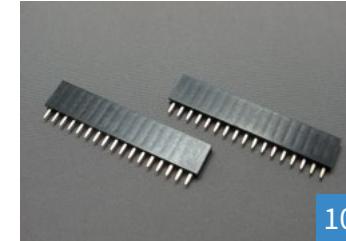


(2) 17-Position Straight
Female Through Hole
Headers
[Digikey.ca](#)
[Digikey.com](#)
*or from any electronics shop

10




(2) Right Angle Push Buttons
[Digikey.ca](#)
[Digikey.com](#)

3

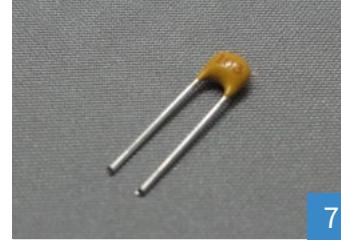


(1) 0.01uF Ceramic Capacitor
[capacitor label: 103]
[Digikey.ca](#)
[Digikey.com](#)
*or from any electronics shop

7

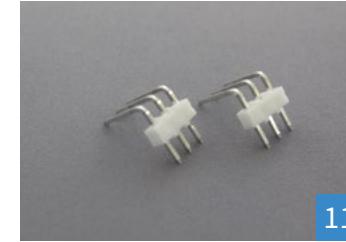

(2) 3-Position Right Angle
Male Header
[Digikey.ca](#)
[Digikey.com](#)
*or from any electronics shop


11

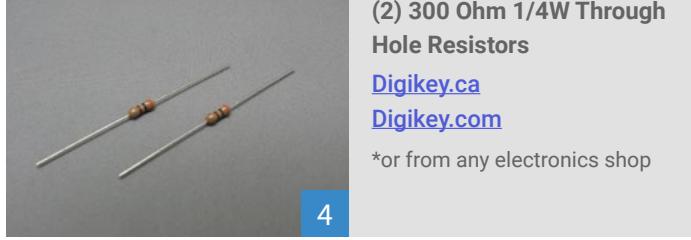

(2) 300 Ohm 1/4W Through
Hole Resistors
[Digikey.ca](#)
[Digikey.com](#)

*or from any electronics shop

4

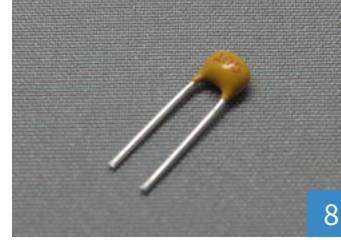


(1) 1.0uF Ceramic Capacitor
[capacitor label: 105]
[Digikey.ca](#)
[Digikey.com](#)
*or from any electronics shop

8



(2) 3-Position Straight
Female Header
[Digikey.ca](#)
[Digikey.com](#)
***ONLY from the above source**


12

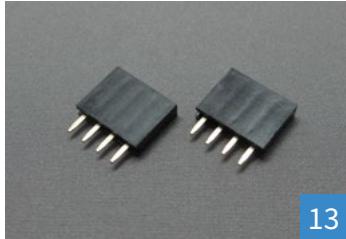

(2) 4-Position Straight Female Header
[Digikey.ca](#)
[Digikey.com](#)

*or from any electronics shop

13

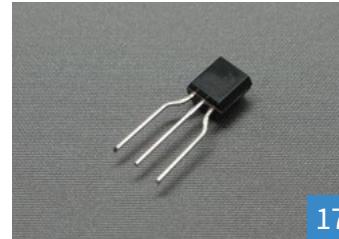

(1) 2N3906 PNP-Type T/H Transistor
[Digikey.ca](#)
[Digikey.com](#)

*or from any electronics shop


17



(1) Joystick Base Plate
[LipSync GitHub](#)

NOTE: 3D printed files and print settings can be found in "Housing_design.zip"


21

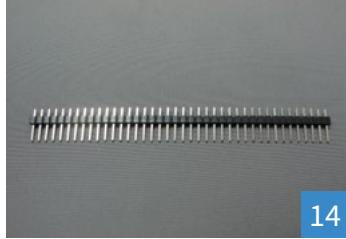

(1) Break Away Male Headers
[Digikey.ca](#)
[Digikey.com](#)

*or from any electronics shop

14

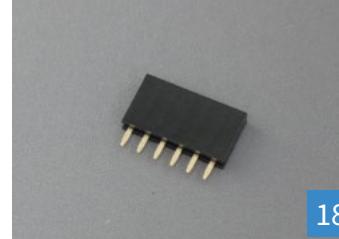

(1) 6-Position Straight Female T/H Headers
[Digikey.ca](#)
[Digikey.com](#)

*or from any electronics shop


18



(1) Joystick Rocker
[LipSync GitHub](#)

NOTE: 3D printed files and print settings can be found in "Housing_design.zip"

22

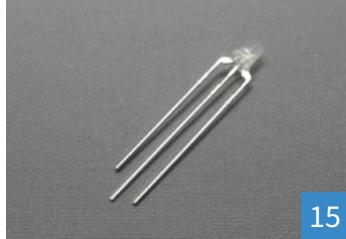

(1) 5mm Bi-Color T/H LED
[Digikey.ca](#)
[Digikey.com](#)

*or from any electronics shop

15



(OPTIONAL) (1) 1-Position Straight Female T/H Header
[Digikey.ca](#)
[Digikey.com](#)

*or from any electronics shop

19



(1) Joystick Top Plate
[LipSync GitHub](#)

NOTE: 3D printed files and print settings can be found in "Housing_design.zip"

23



(1) Shunt Connector
[Digikey.ca](#)
[Digikey.com](#)

*or from any electronics shop

16



(1) Front Housing
[LipSync GitHub](#)

NOTE: 3D printed files and print settings can be found in "Housing_design.zip"

20



(1) Rear Housing
[LipSync GitHub](#)

NOTE: 3D printed files and print settings can be found in "Housing_design.zip"

24



(2) Buttons
[LipSync Page](#)

25




(4) Force Resistive Sensor
[Digikey.ca](#)
[Digikey.com](#)

29




(2) Standoffs M3 15mm
[Digikey.ca](#)
[Digikey.com](#)

33

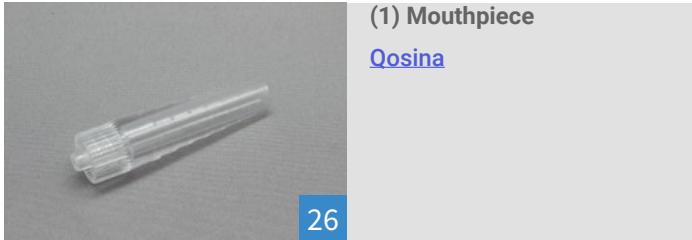

(1) Mouthpiece
[Qosina](#)

26

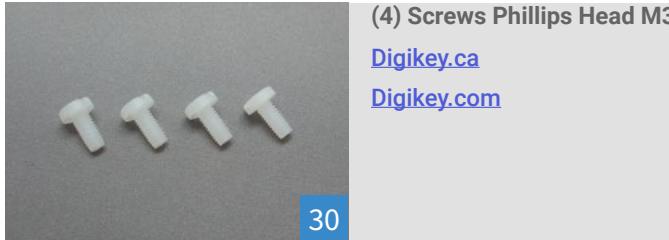


(4) Screws Phillips Head M3
[Digikey.ca](#)
[Digikey.com](#)

30




(1) Luer Lock Nut
[Cole-Parmer](#)

34

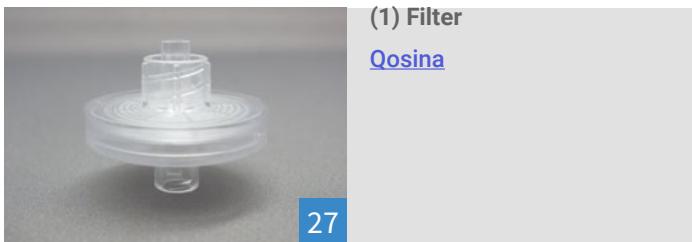

(1) Filter
[Qosina](#)

27

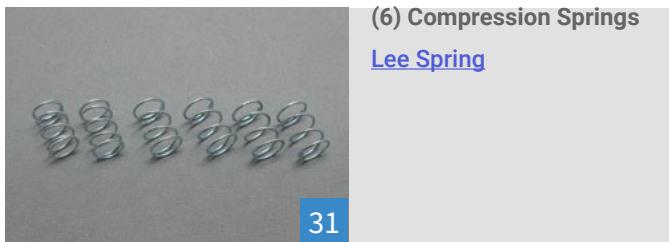

(6) Compression Springs
[Lee Spring](#)

31



(4) Bumpers
[Mouser \(CA\)](#)
[Mouser \(US\)](#)

35



(1) Luer Lock Fitting
[Cole-Parmer](#)

28



(2) Standoffs M3 10mm
[Digikey.ca](#)
[Digikey.com](#)

32



(4) Nuts M3
[Digikey.ca](#)
[Digikey.com](#)

36



37

(1) Tubing 3/32" ID x 45mm
[US Plastic](#)



41

(1) USB Cable
[Amazon.ca](#)
[Amazon.com](#)

NOTE: The rear shell can only accommodate the listed USB or equivalent cable width and micro USB head size



45

(OPTIONAL) (1) Magic Arm
11" and Clamp
[Amazon.com](#)



38

(1) Light pipe
[Mouser](#)



42

(1) USB Adapter
[Amazon.ca](#)
[Amazon.com](#)



39

(1) Threaded Insert 5/8"-27
[B&H Photo Video](#)
[Adorama](#)



43

(1) Cable Tie
[Mouser \(CA\)](#)
[Mouser \(US\)](#)



40

(1) Threaded Adapter 5/8"-27
[Amazon.com](#)
[Camvate](#)



44

(10) Velcro Strap 0.5" x 6"
[B&H Photo](#)

PART 0c

EQUIPMENT CHECKLIST

- Small spool of 60Pb/40Tn solder wire
- (1) Adjustable tabletop vise
(if possible, PANAVISE Junior Vise with Base)
- Temperature adjustable soldering iron (350°C)
- Safety glasses
- Needle nose pliers
- Small fan (if possible, fume extractor)
- Fine file or sandpaper (150-220 grit)
- Hobby knife
- Baby powder
- Flush cutters
- Super glue
- ABS or high strength PLA filament 100g
- Desolder pump (or "solder sucker")



= Solder the part outlined in the white outline



= Component number






= Name of plated through-hole



CAUTION

- Safety glasses should be worn at all times during the assembly.
- Be aware of electrostatic discharge when soldering
- Be aware that too much heat can damage component



PART 1

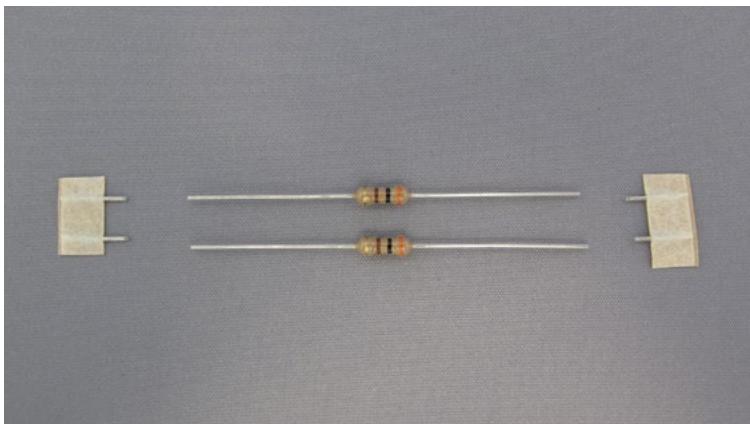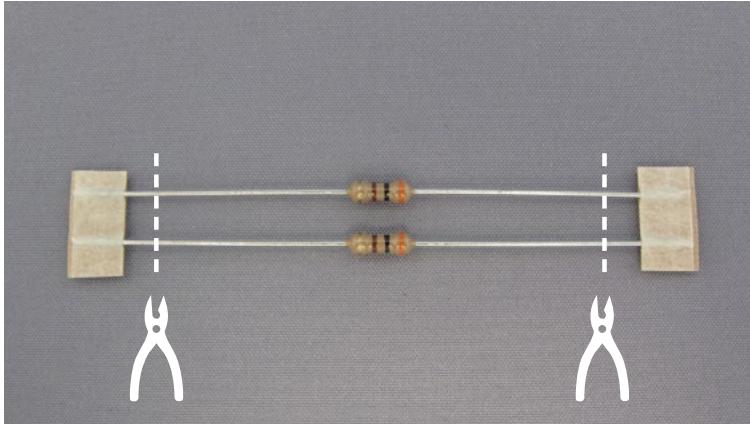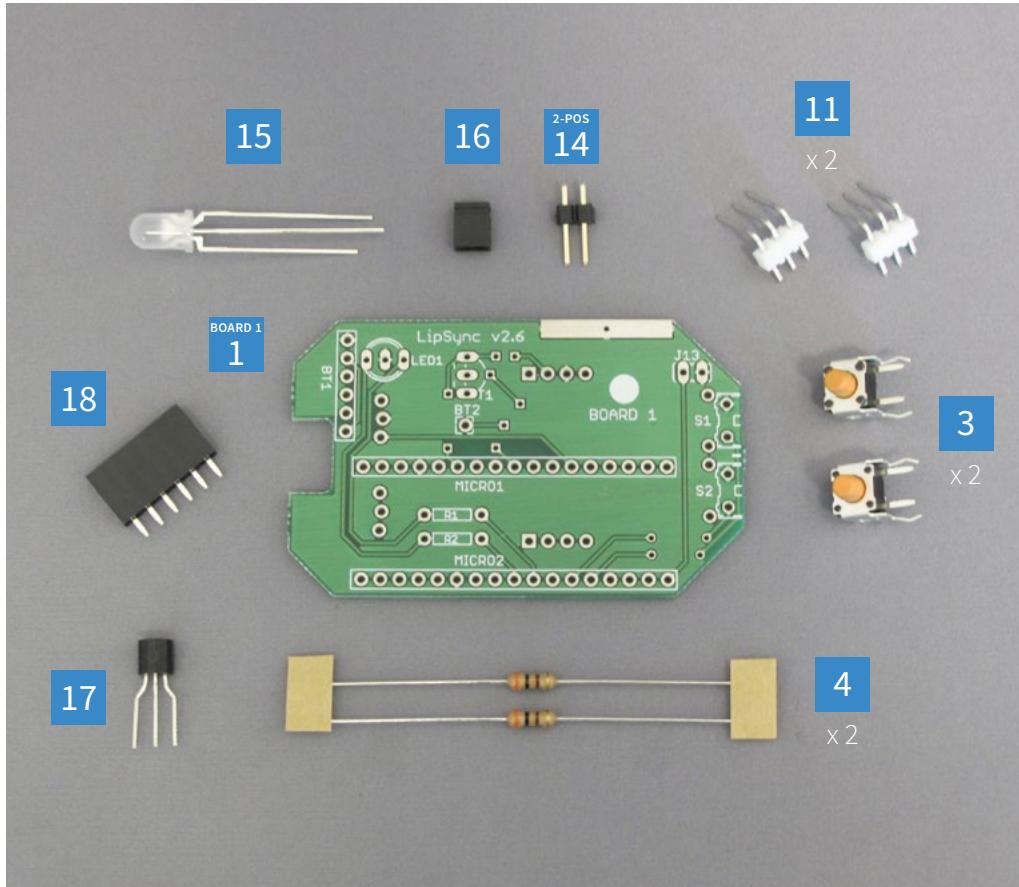


01.

4
x 2

02.

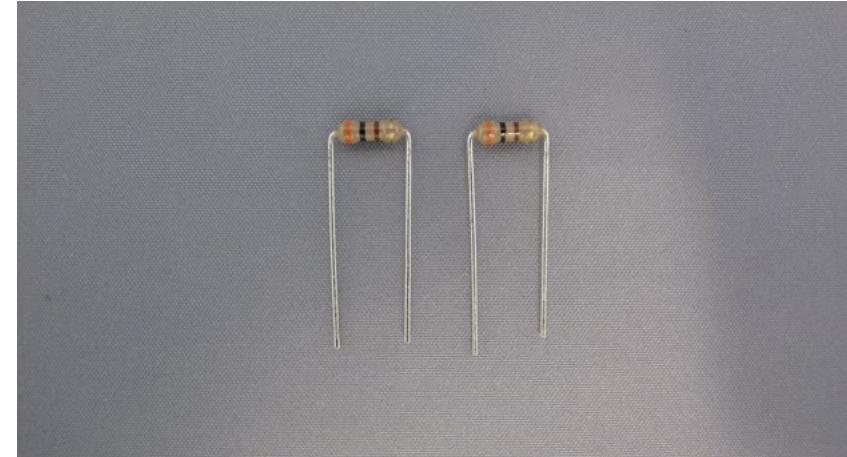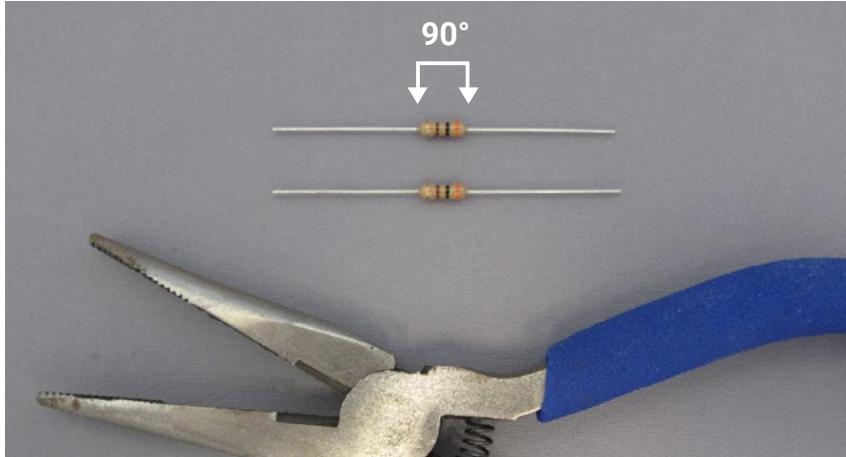

03.

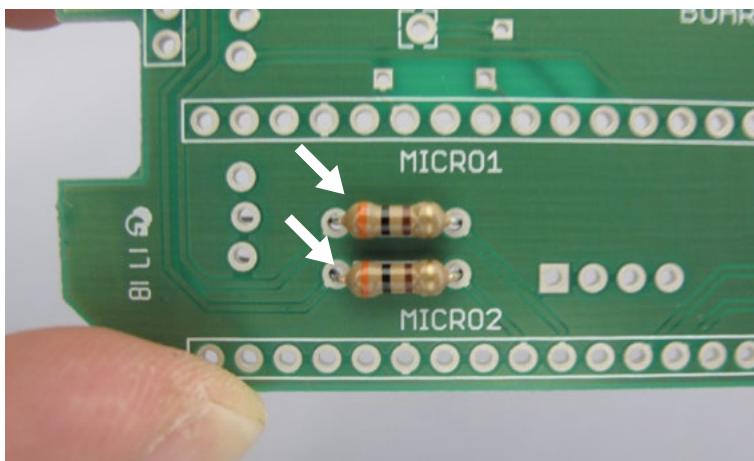

BOARD 1

1


HOLE

R1


HOLE

R2


04.

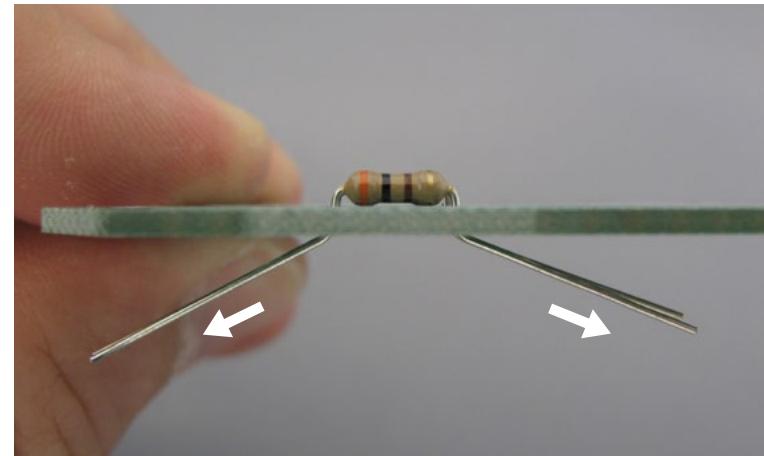



05.

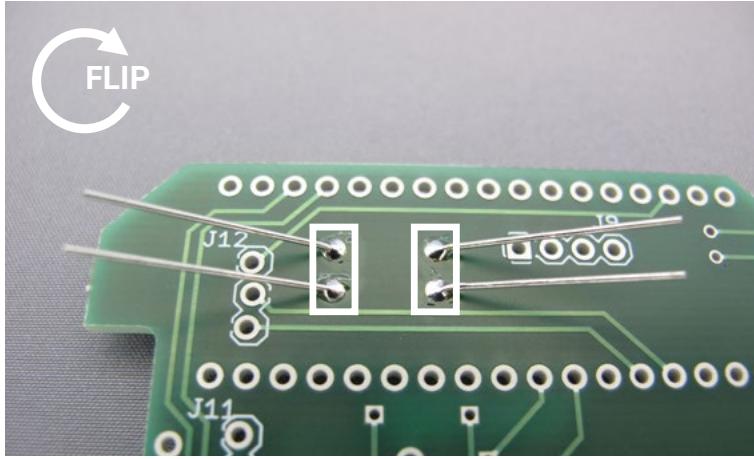


06.

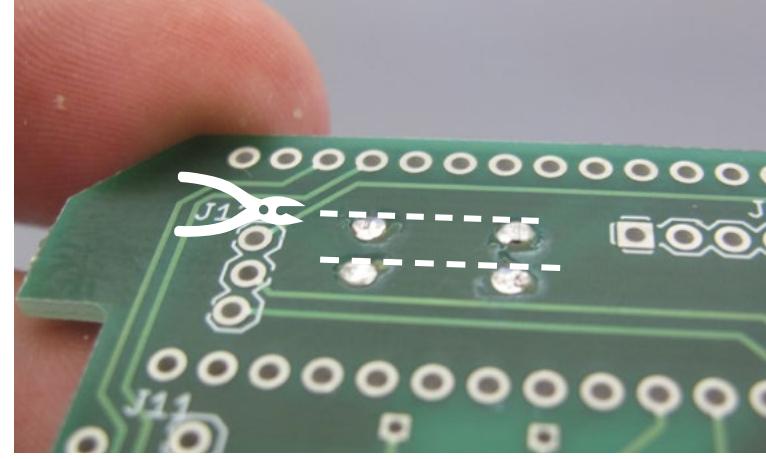

07.

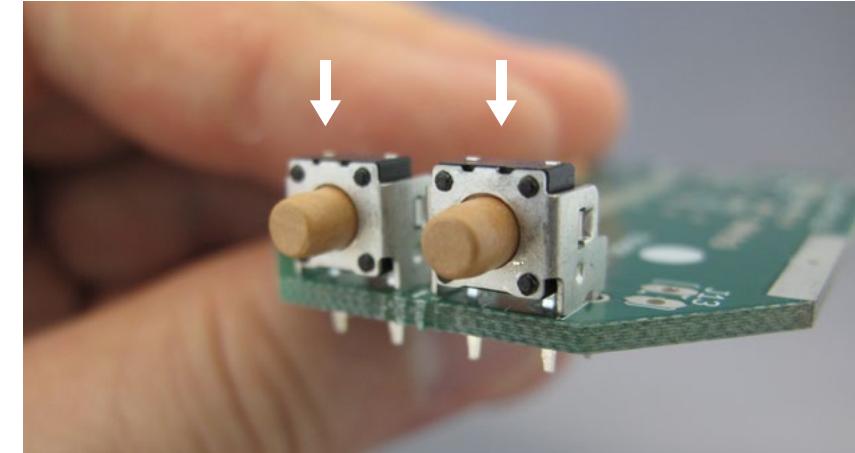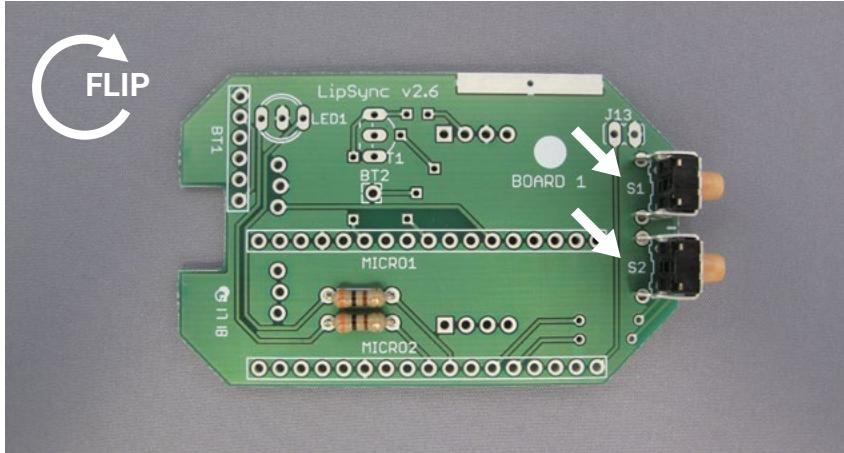


08.

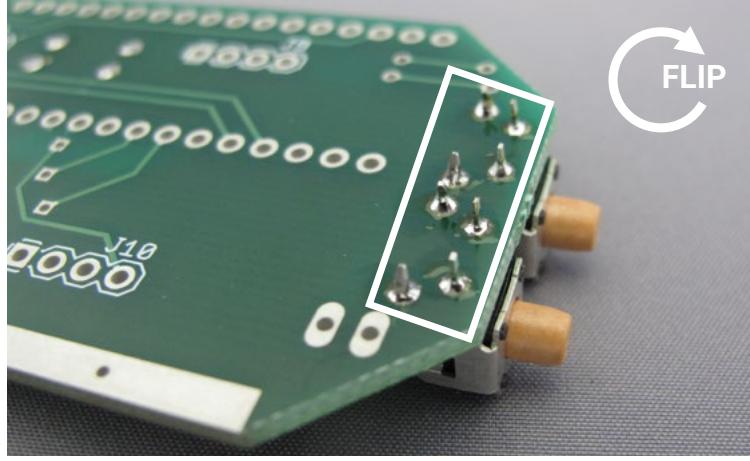


14

09.

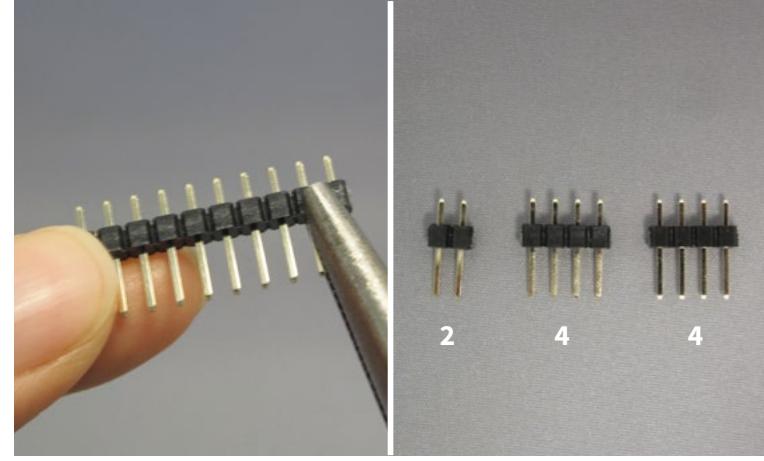


10.

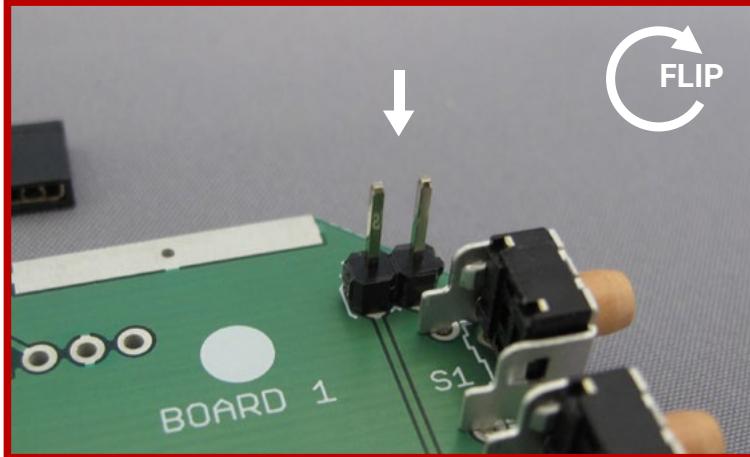

x 2


11.

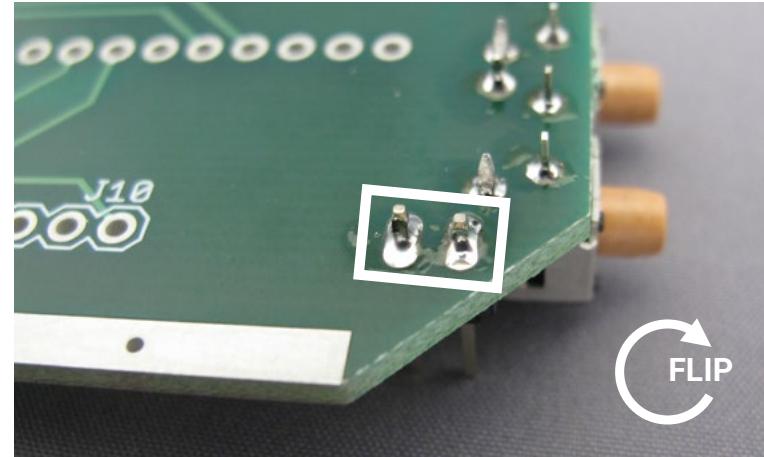

IMPORTANT: The **SHORT** leads are inserted.


12

12.

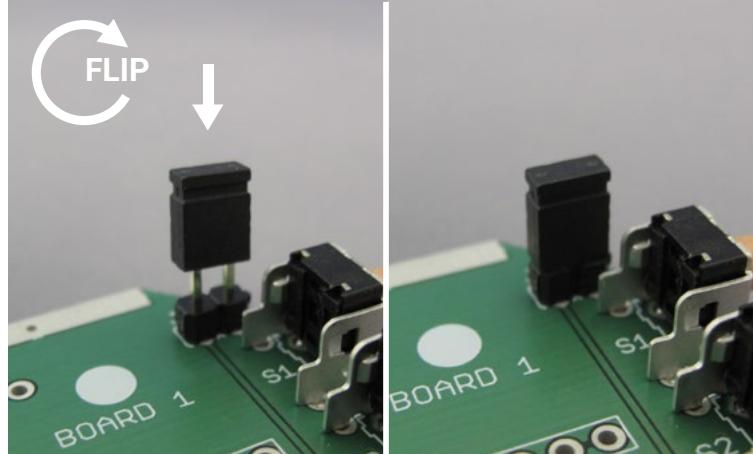



16

13.

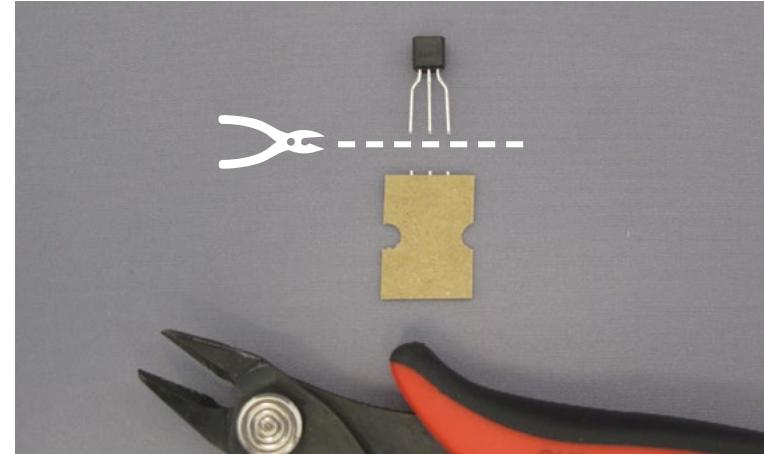

17


14.

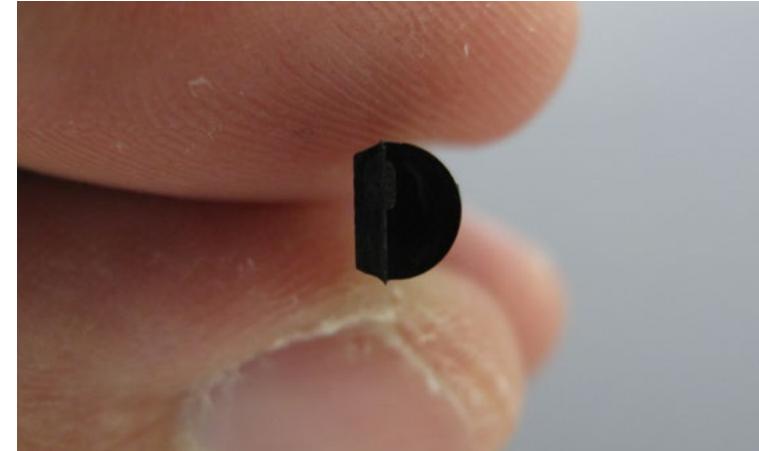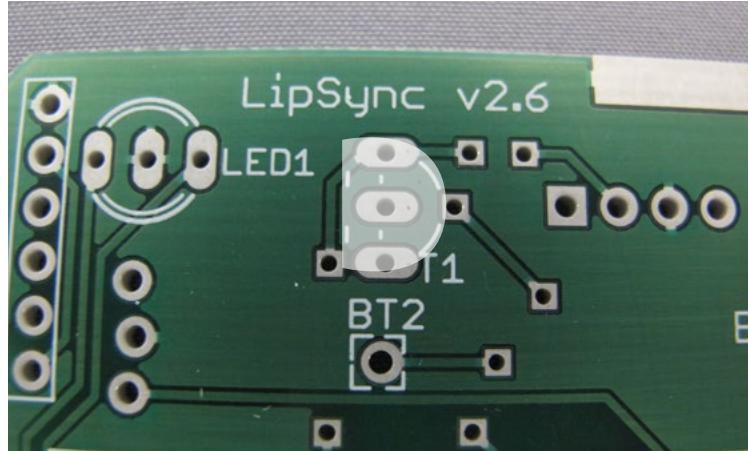

HOLE
T1


NOTE: The silkscreen outline for hole T1 on Board 1 matches the orientation of which the transistor is inserted.

15.

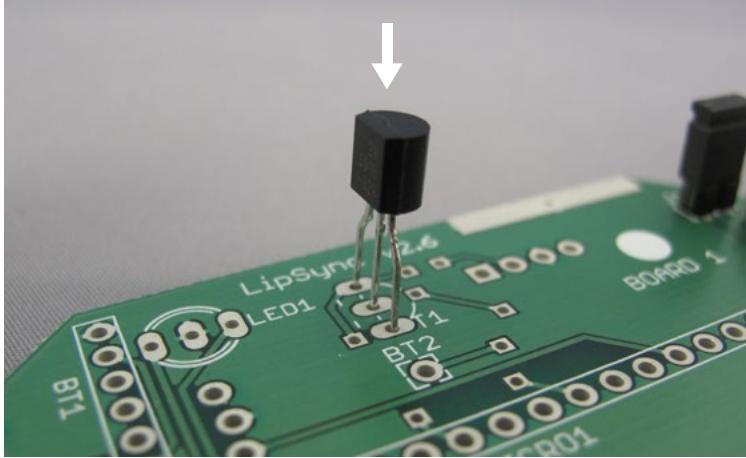


NOTE: After inserting the transistor, there will be a gap between the transistor and Board 1

16.

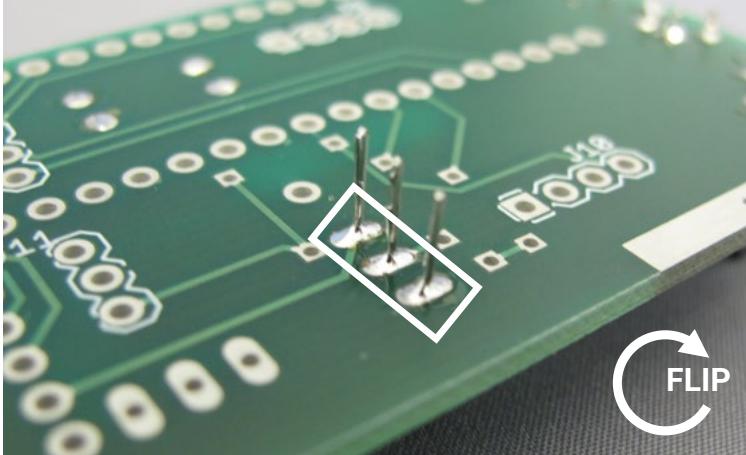


x 3

17.

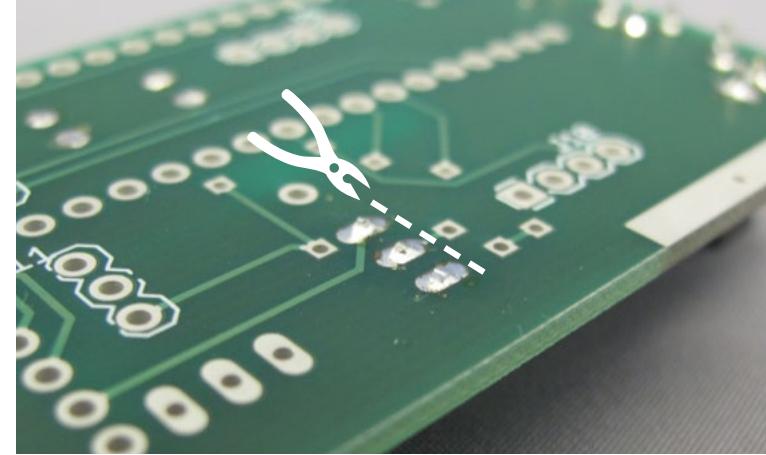


18.

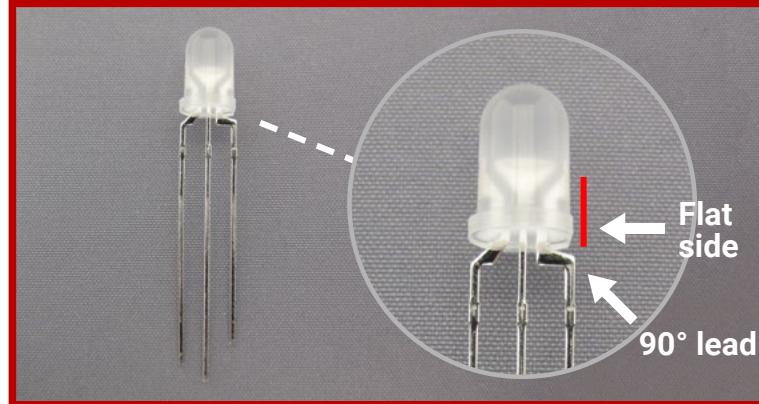

IMPORTANT: The flat side of the LED head and the 90° lead should be on the **RIGHT** when installed.



15

19.

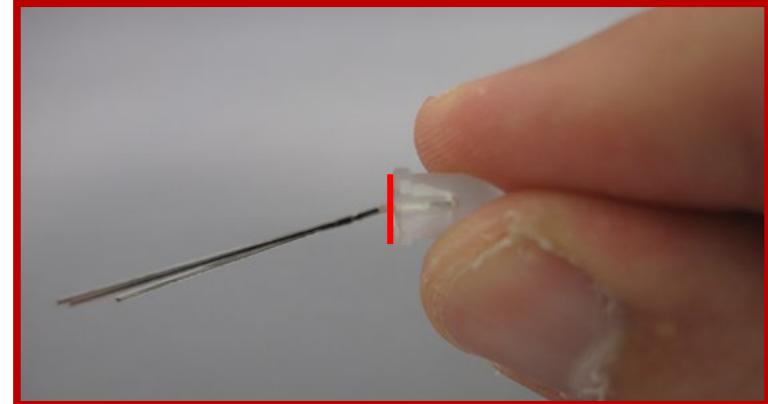


IMPORTANT: Hold the LED so that the flat side and the 90° lead is facing **TOWARDS** you.

20.

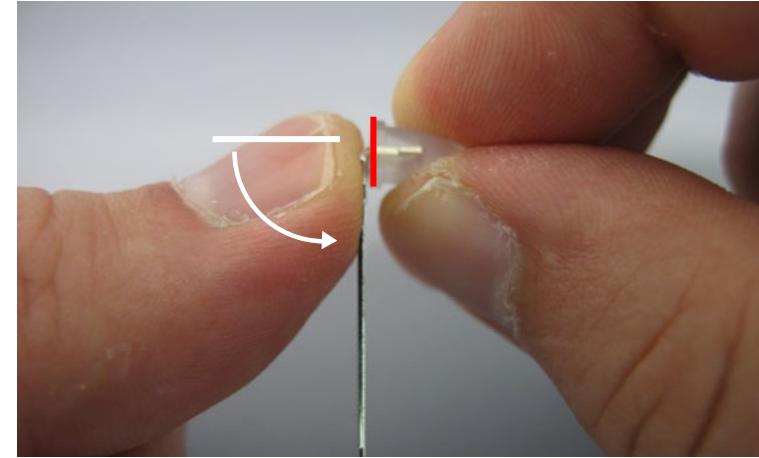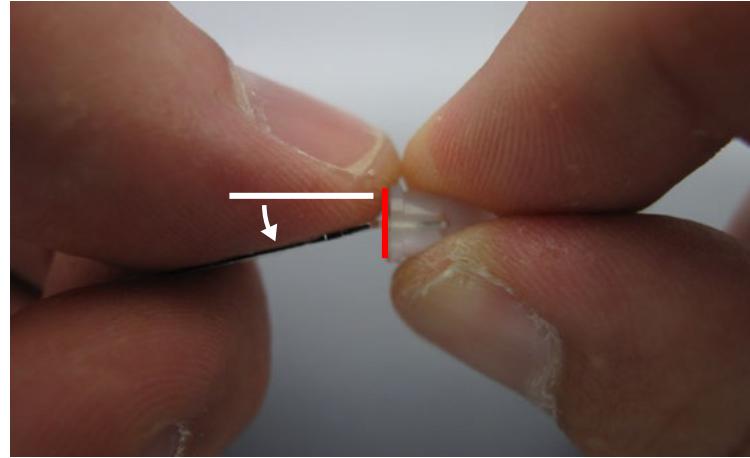


NOTE: Using a finger, bend the leads by 90° right at the base.

21.

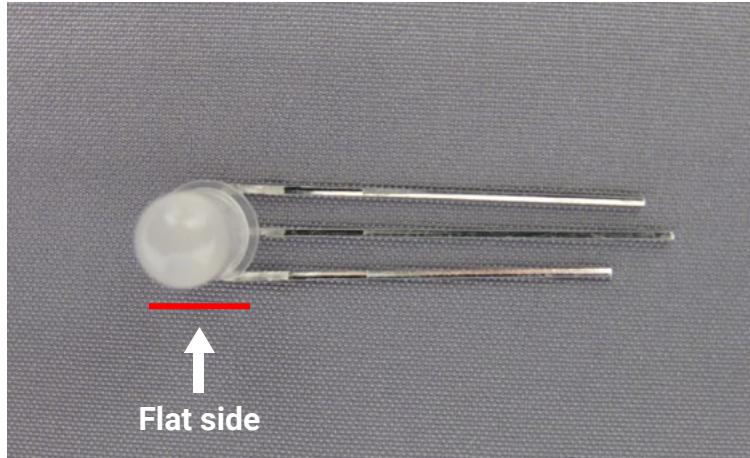


HOLE
LED1

22.

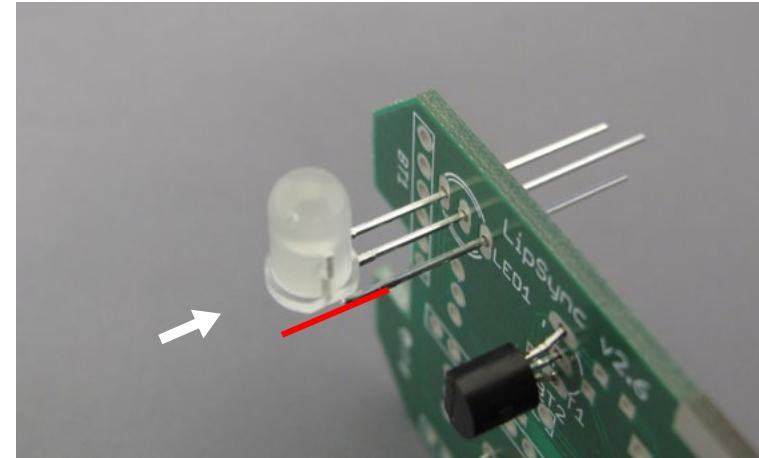






23.

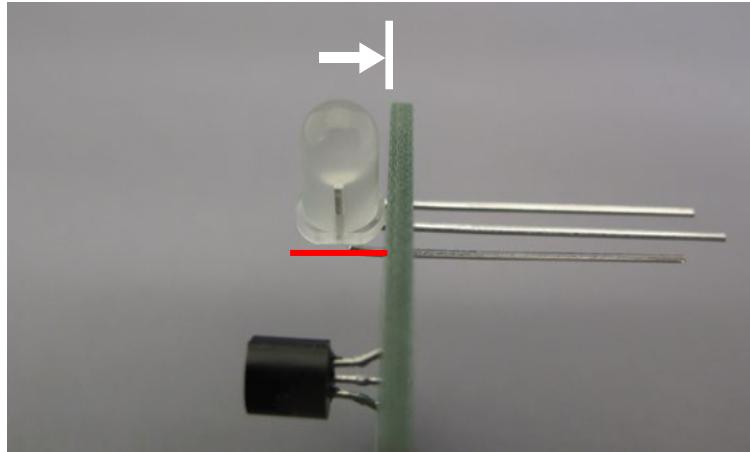

x 3


24.

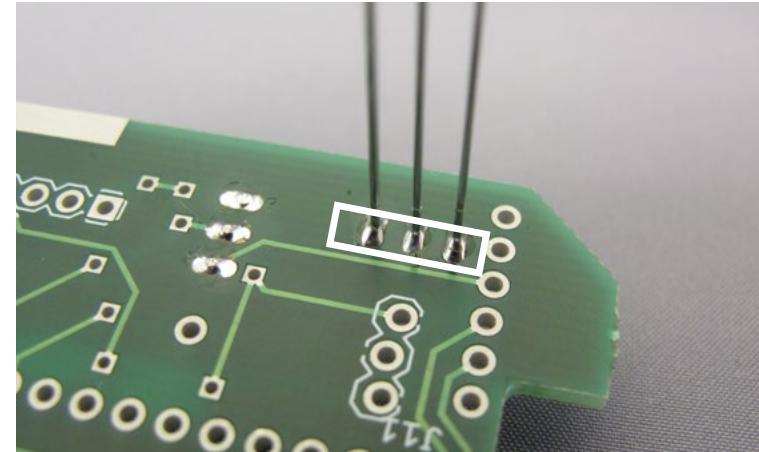

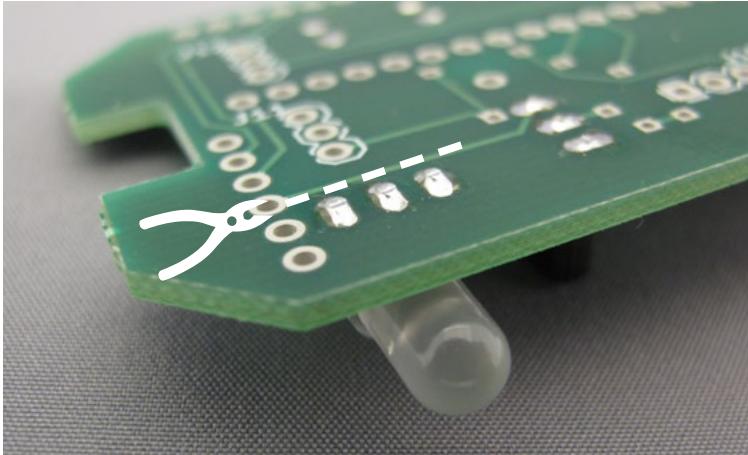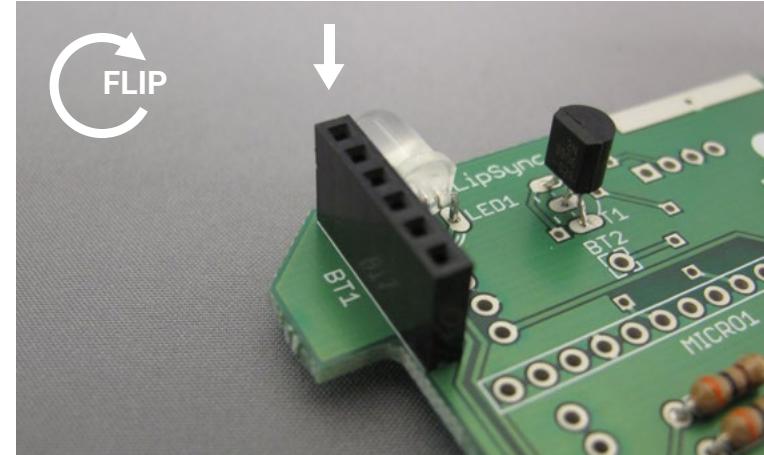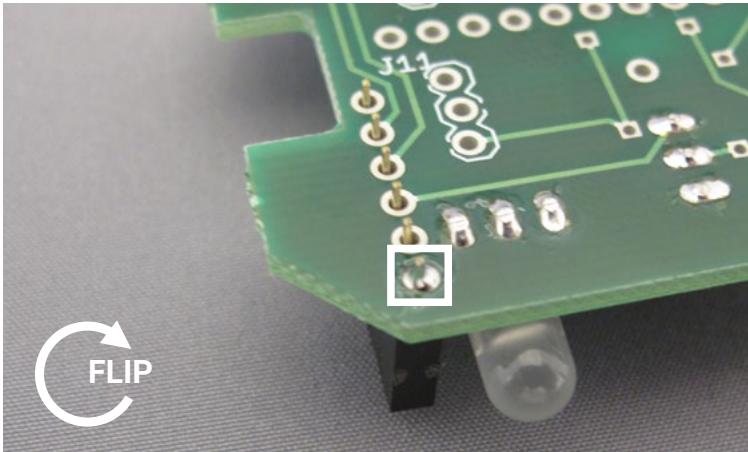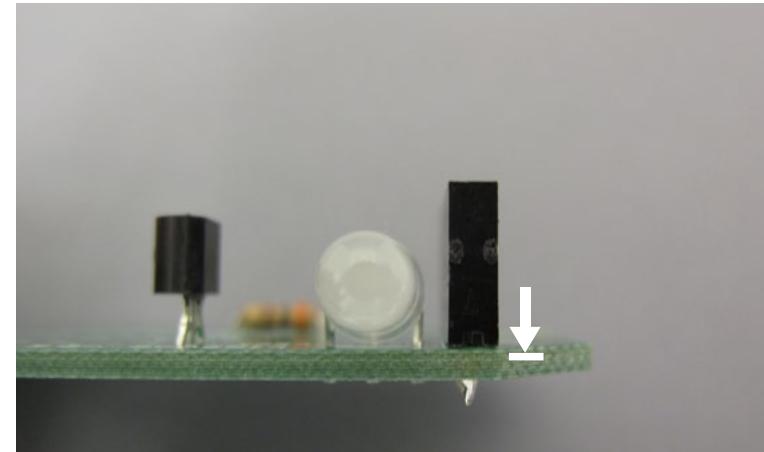25.**26.****27.****28.**

NOTE: Check that component is flush to the board


29.

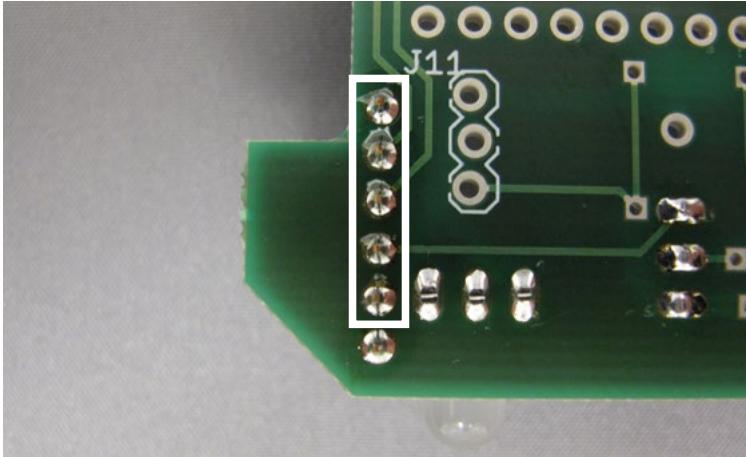


11
x 2

SECTION
J11
SECTION
J12


30.

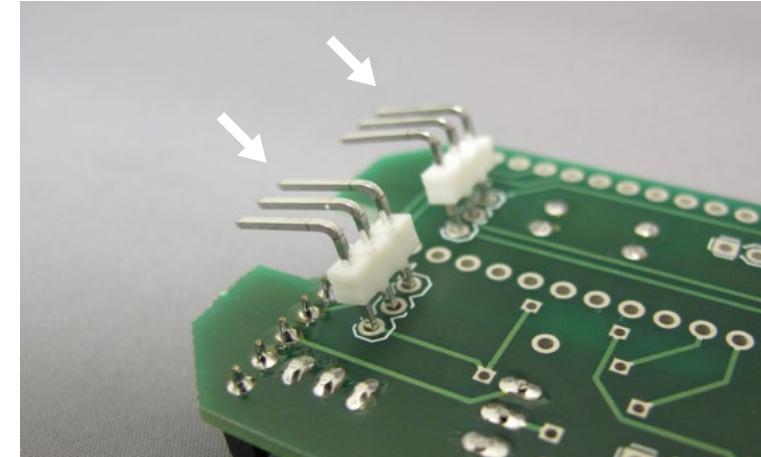

31.

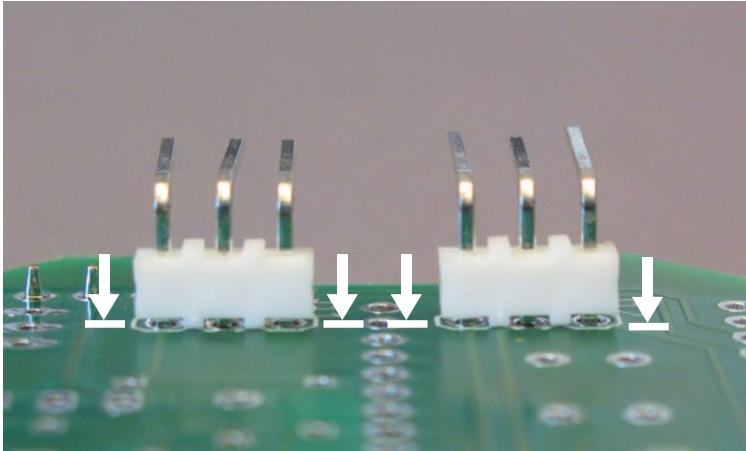


32.

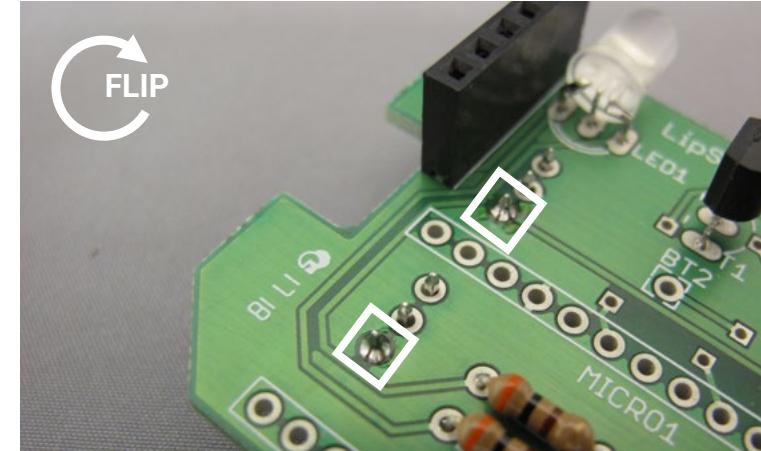


PART 2

33.

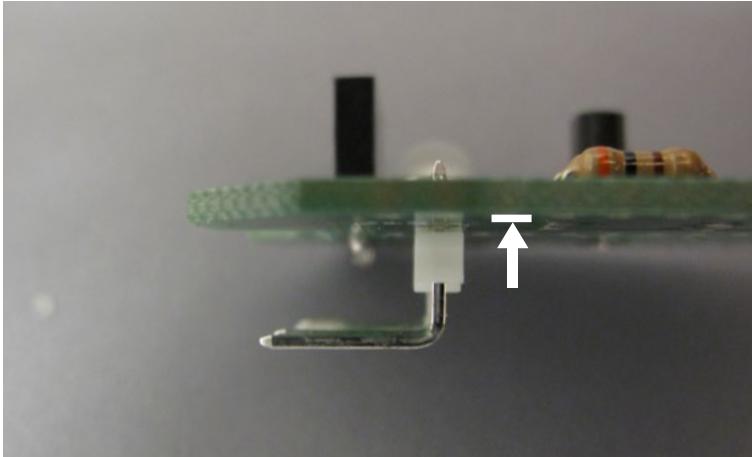


i NOTE: Check that component is flush to the board

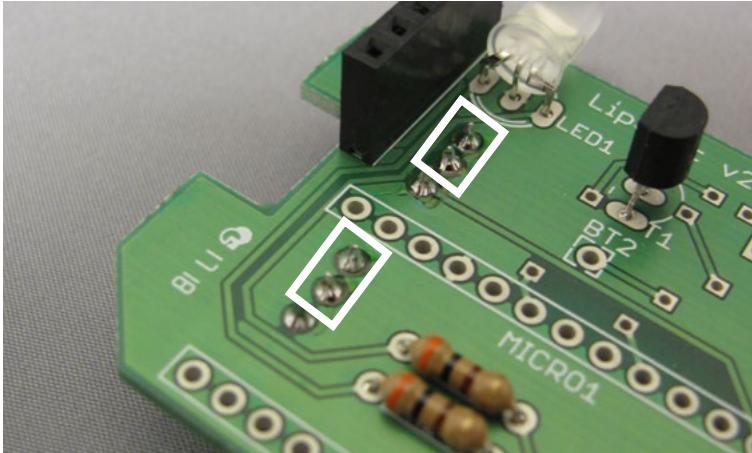


x 4

34.

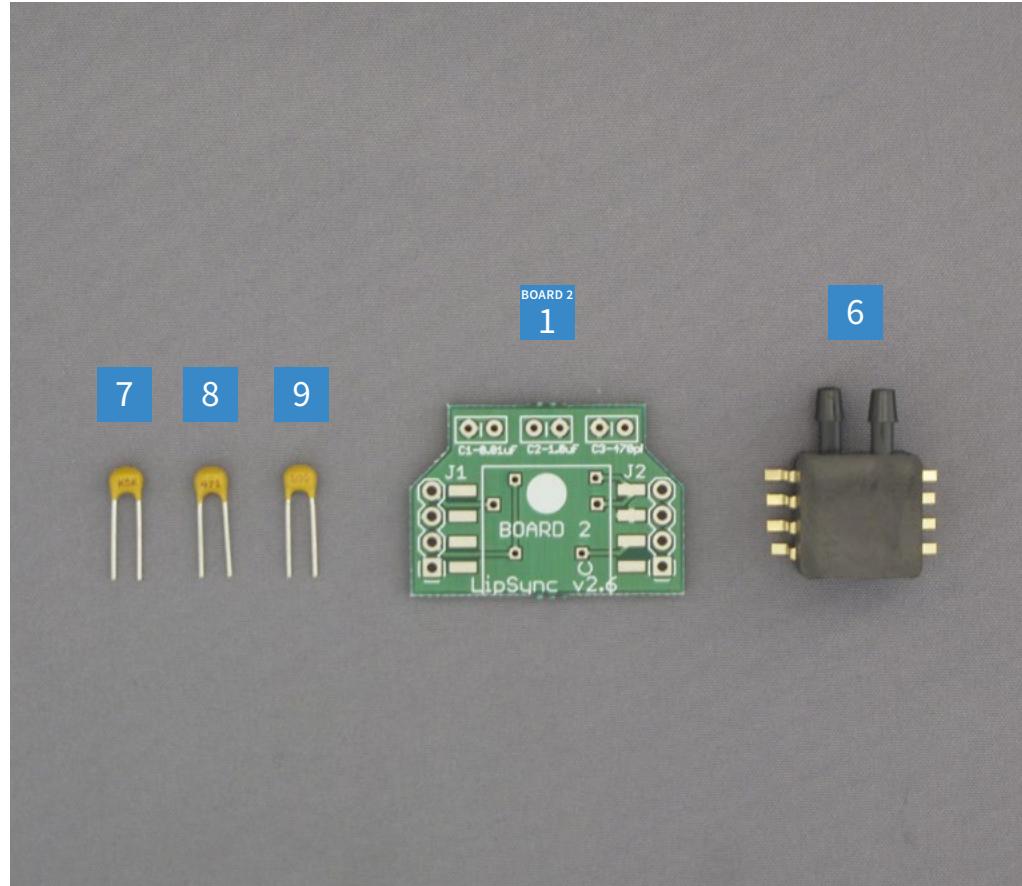

01.

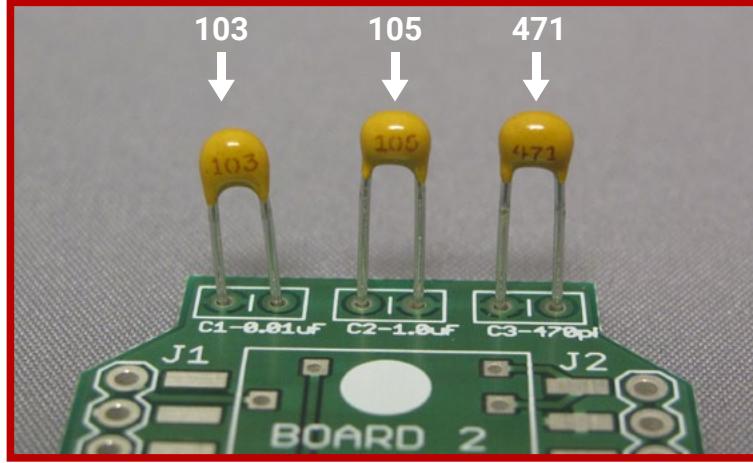


BOARD 2
1
7
8
9

x 3

NOTE: The capacitors **MUST** be inserted in the order shown.


03.

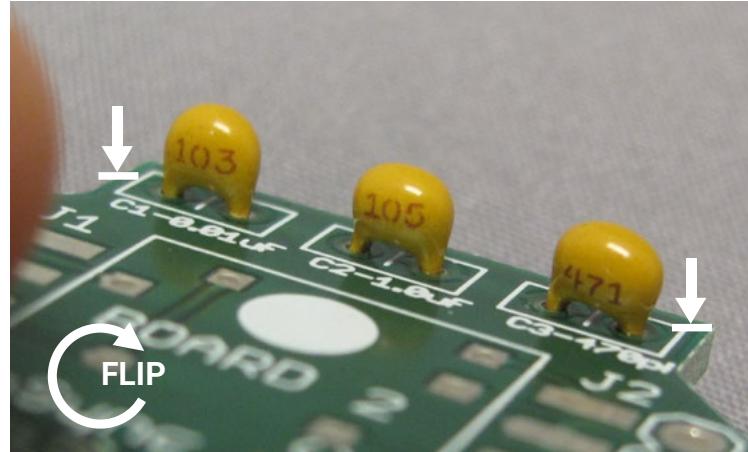


NOTE: Check that component is flush to the board

20

02.

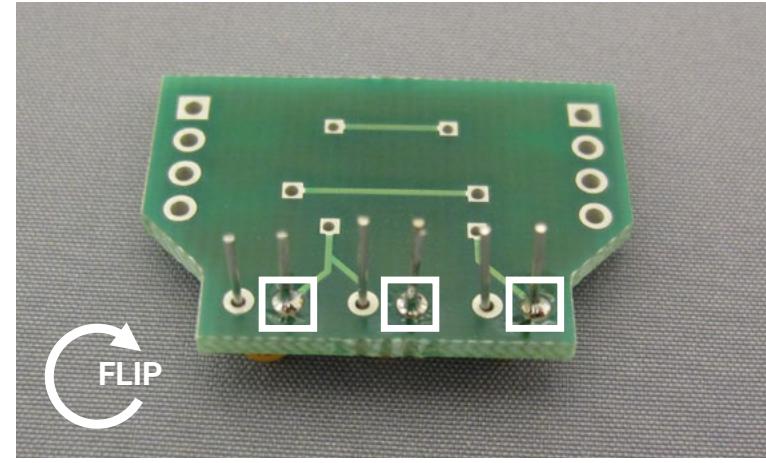

04.

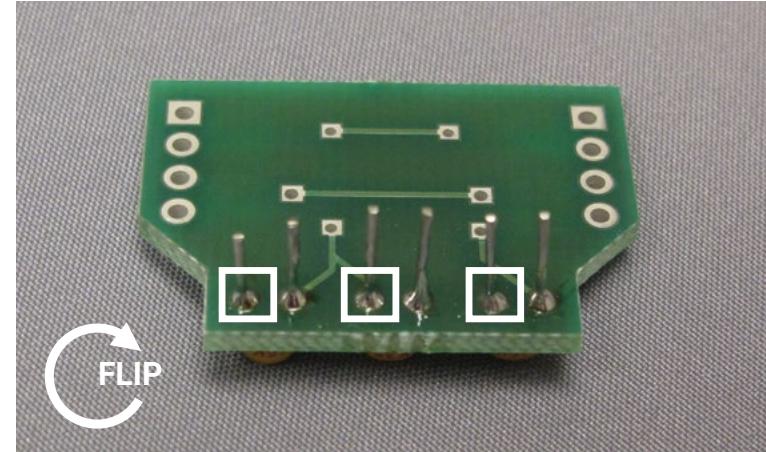


x 3

6




x 1

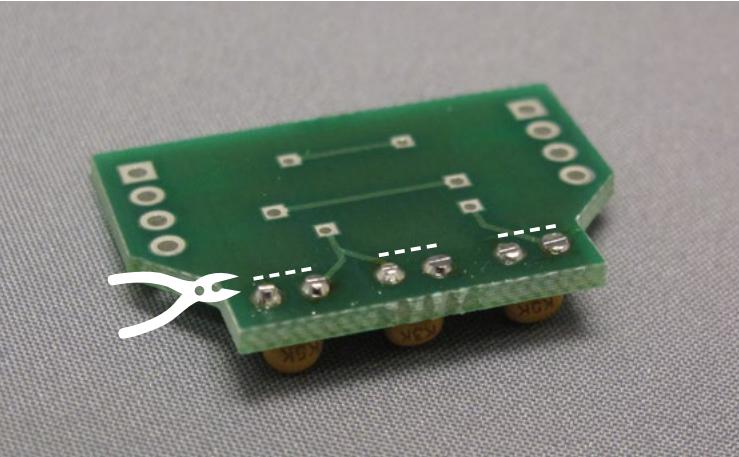


05.

06.

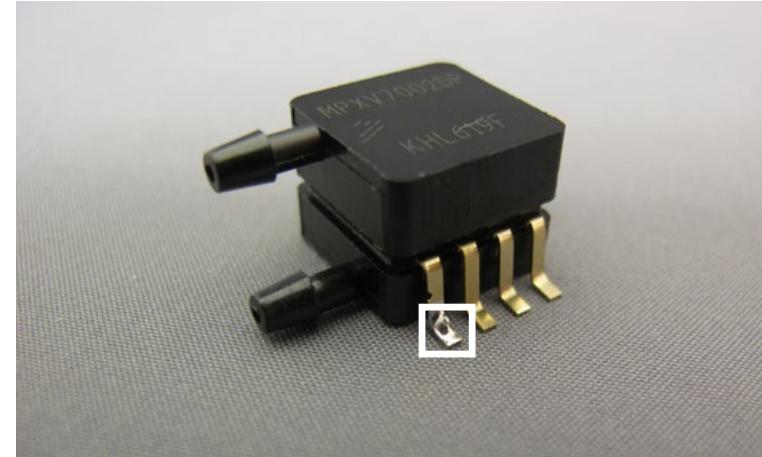


x 1


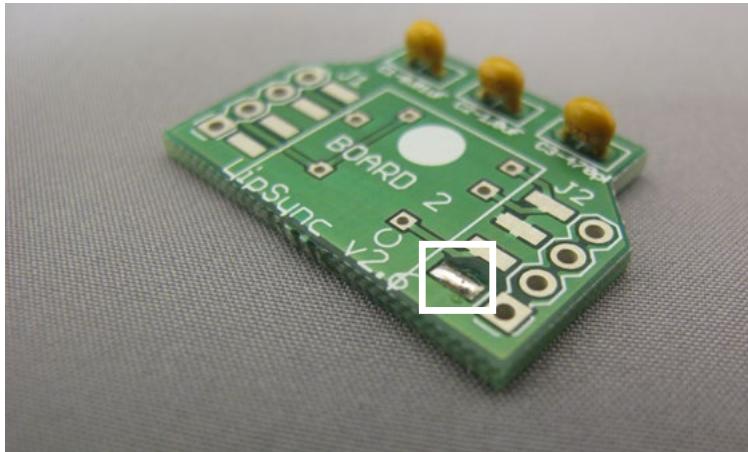


07.

08.

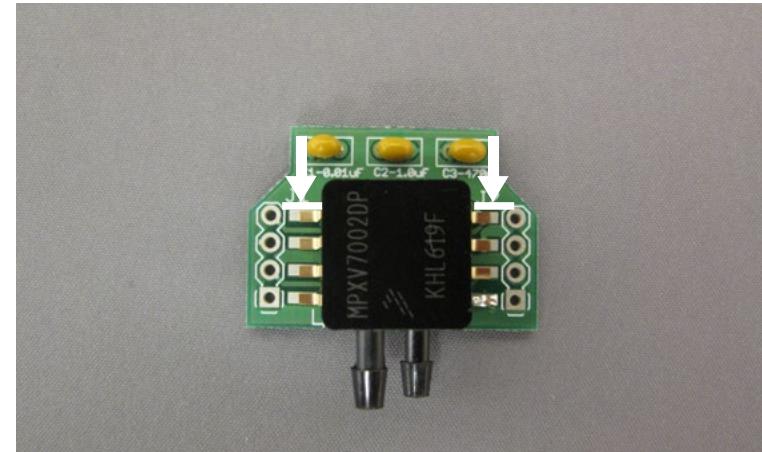


09.

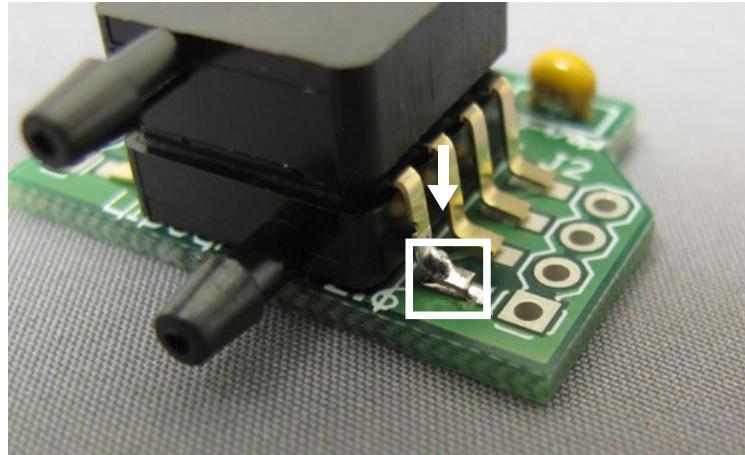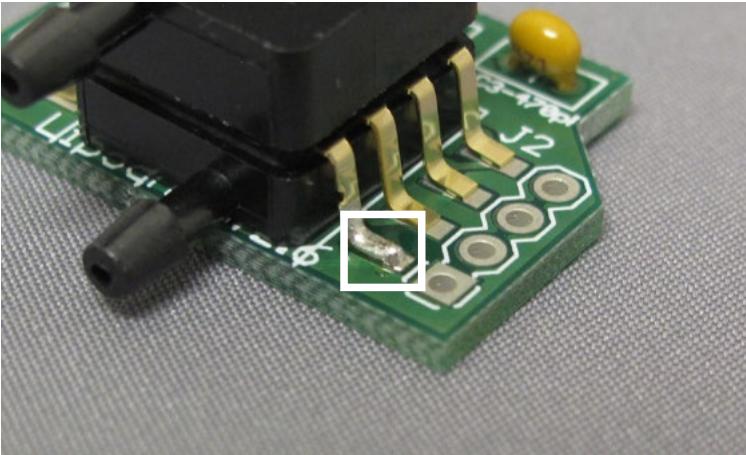


NOTE: Place the solder tip on the lead to reflow the solder on the two components. The pressure sensor should "drop" onto Board 2.

10.



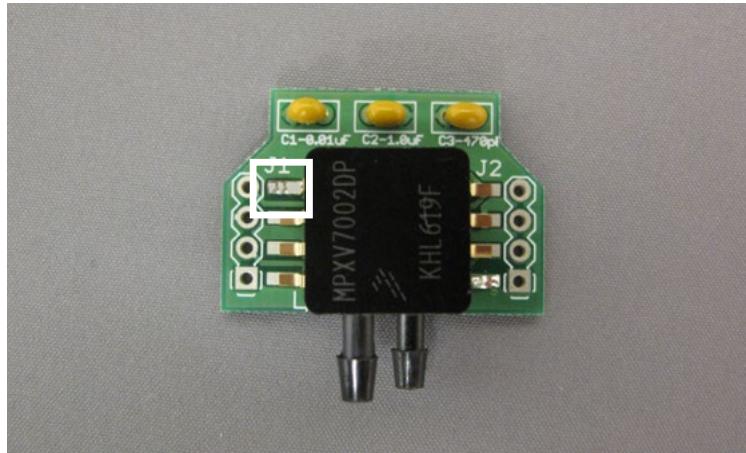


x 7

11.

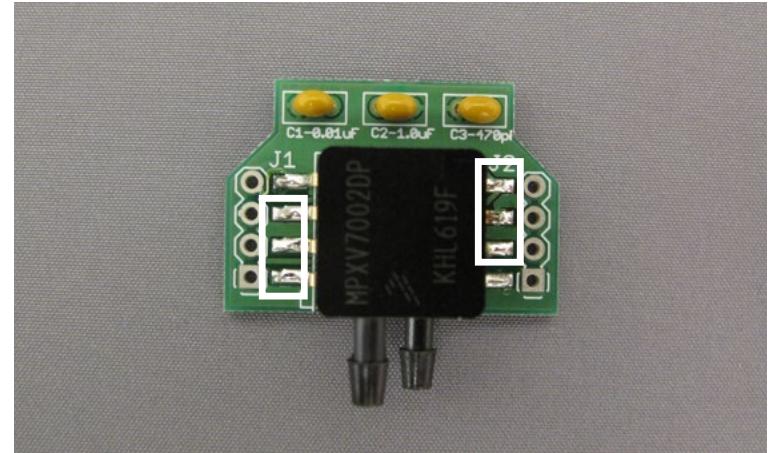


PART 3

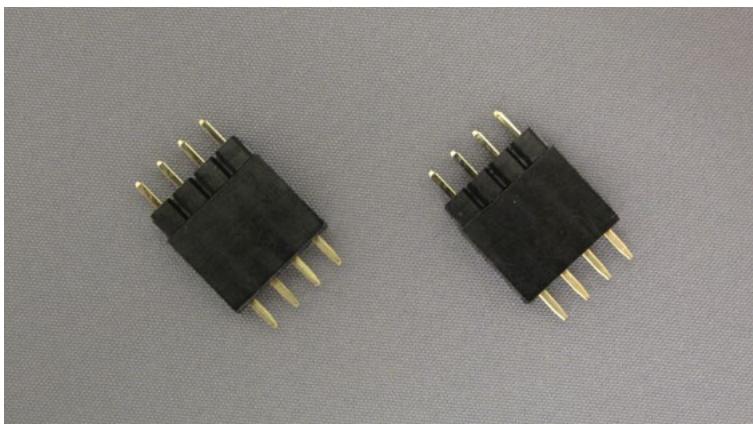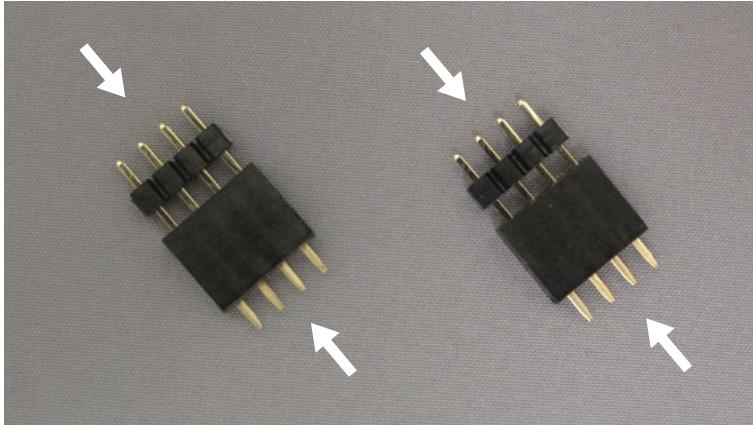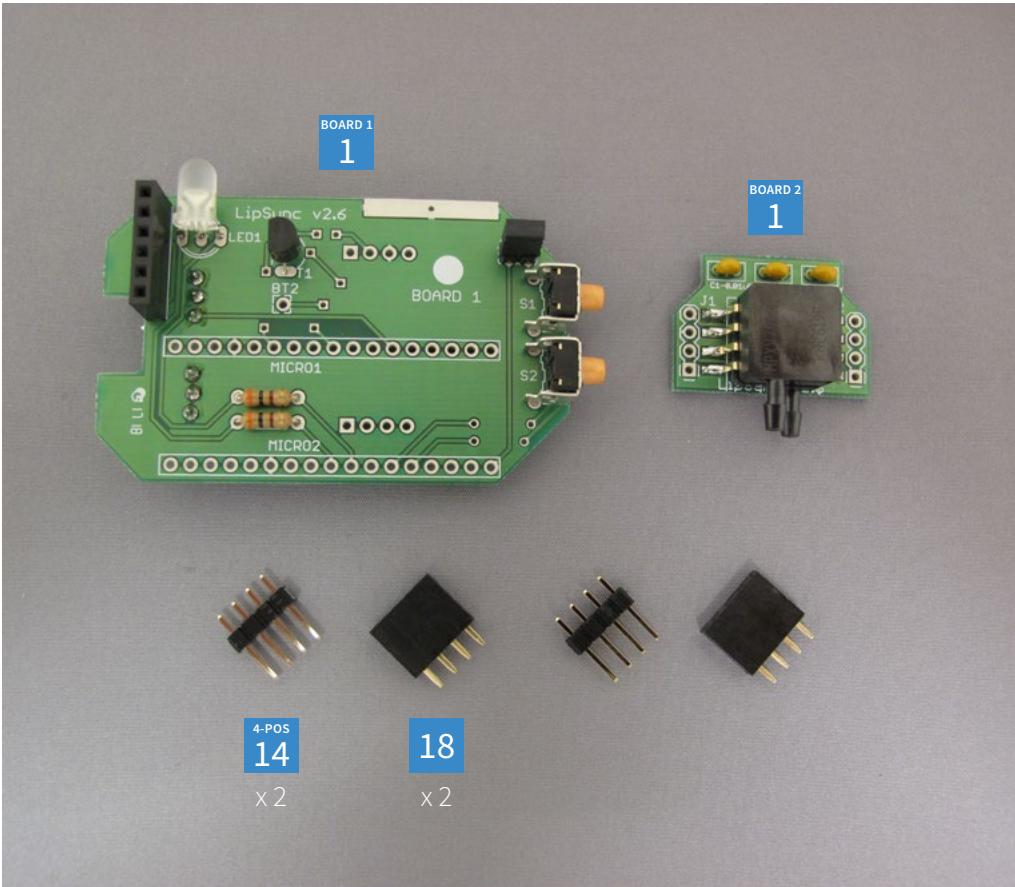

01.


4-POS
14
x 2
18
x 2

02.


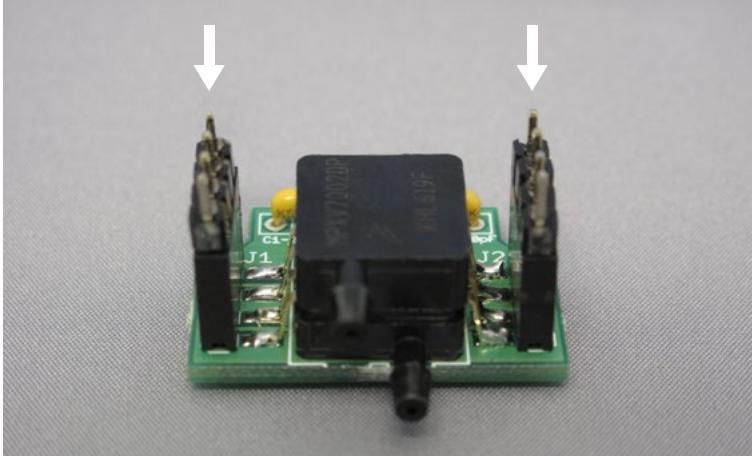


NOTE: The 4-position female headers are inserted


03.

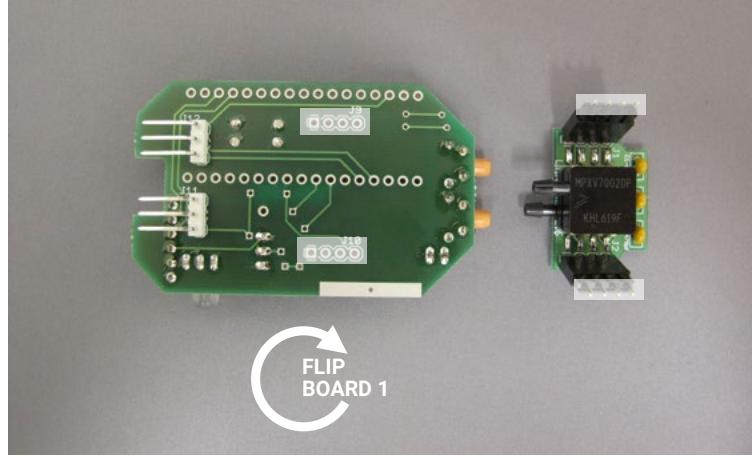


04.

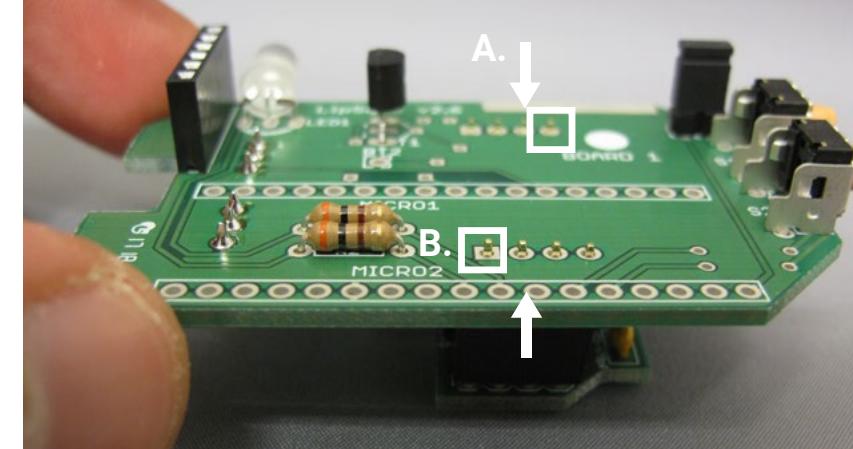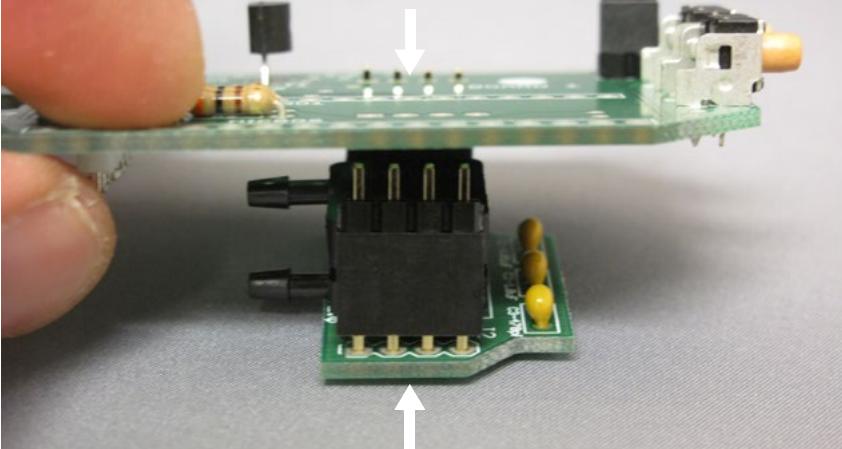

05.

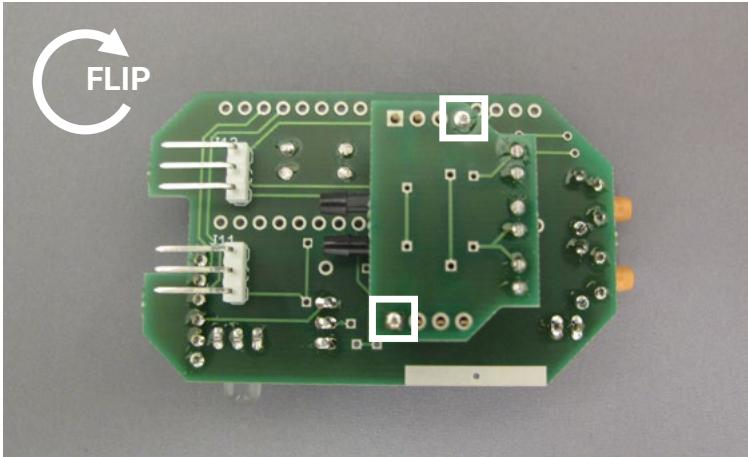


06.

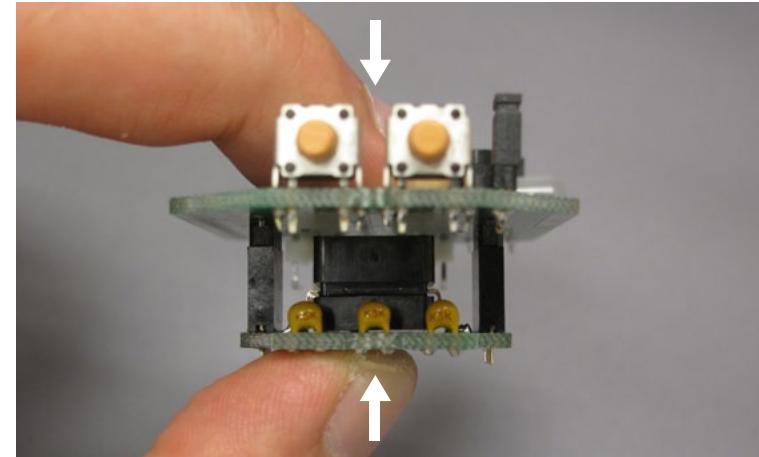


NOTE: Check that component is flush to the board




07.

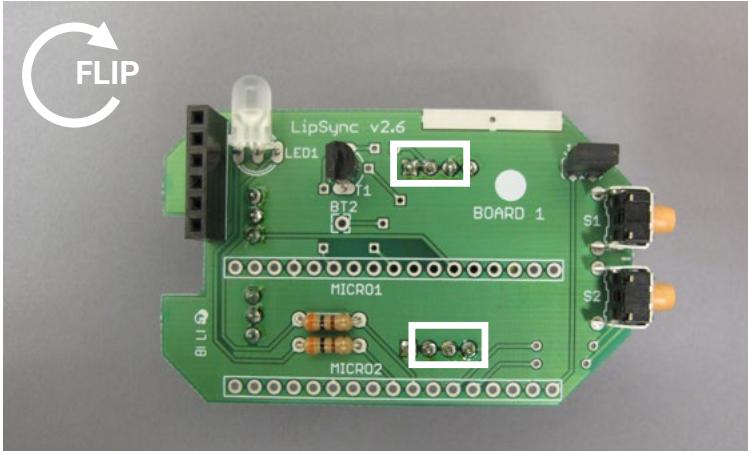

08.

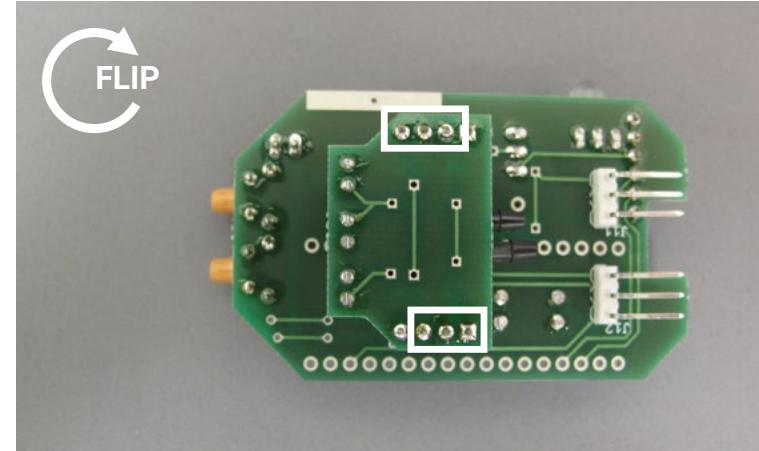

PART 4

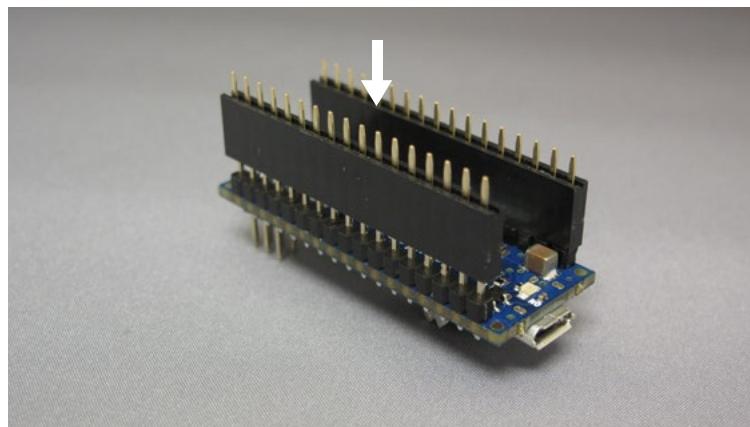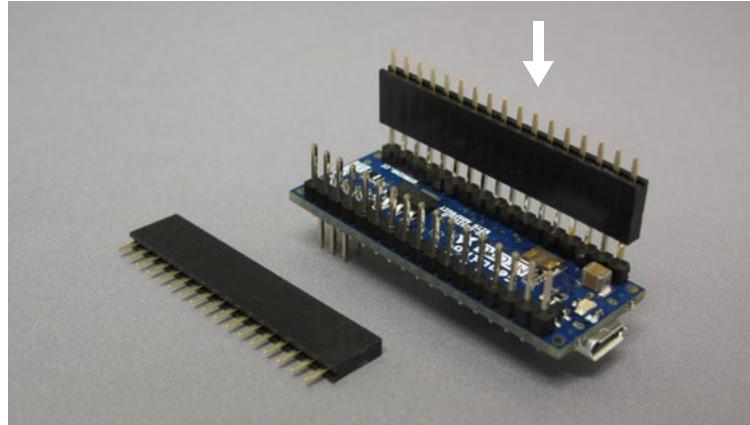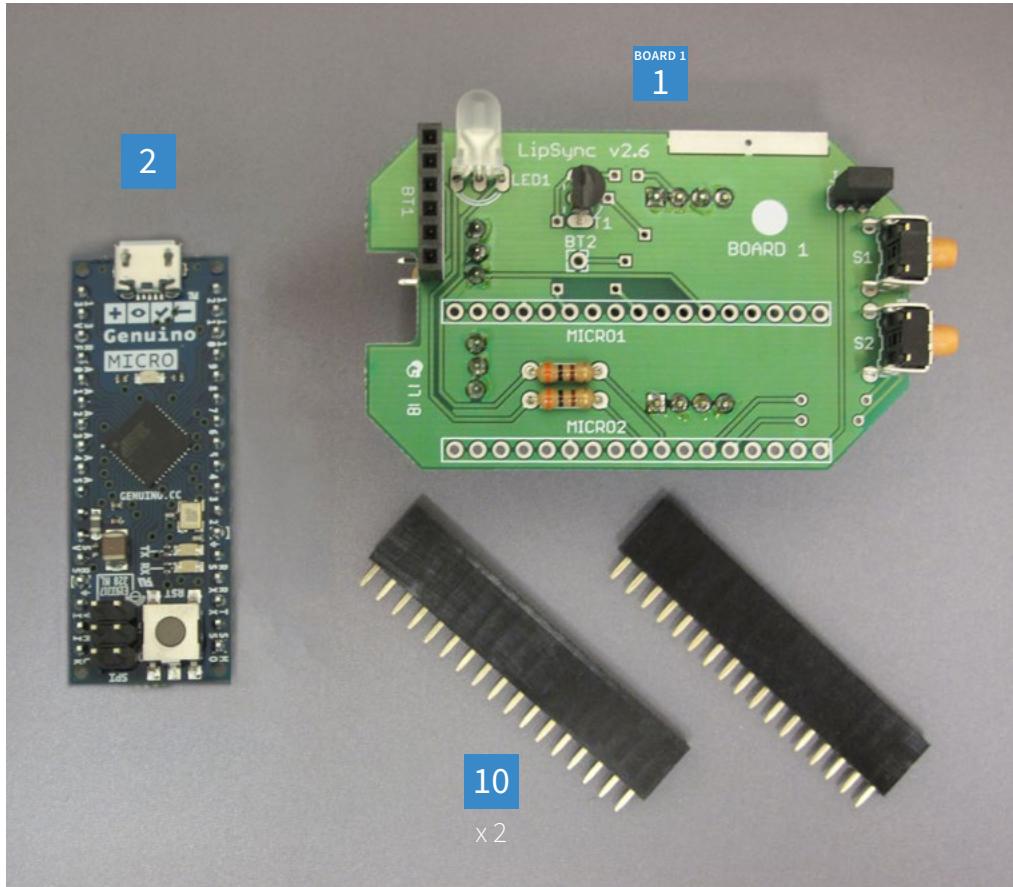


01.

2


10

x2



02.

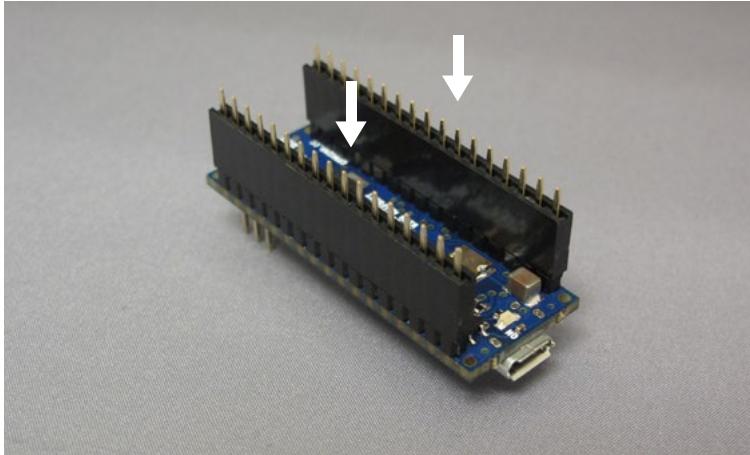

03.


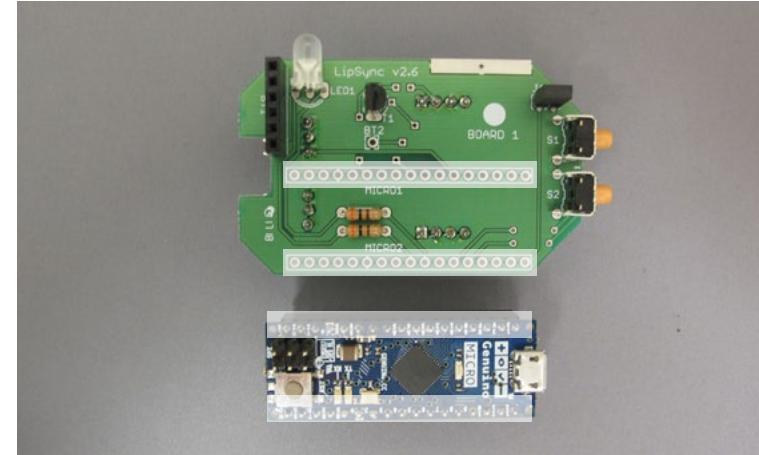


04.

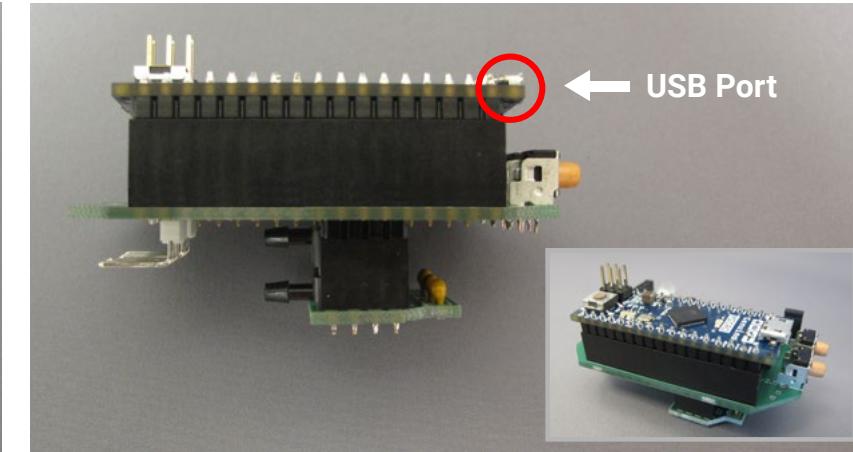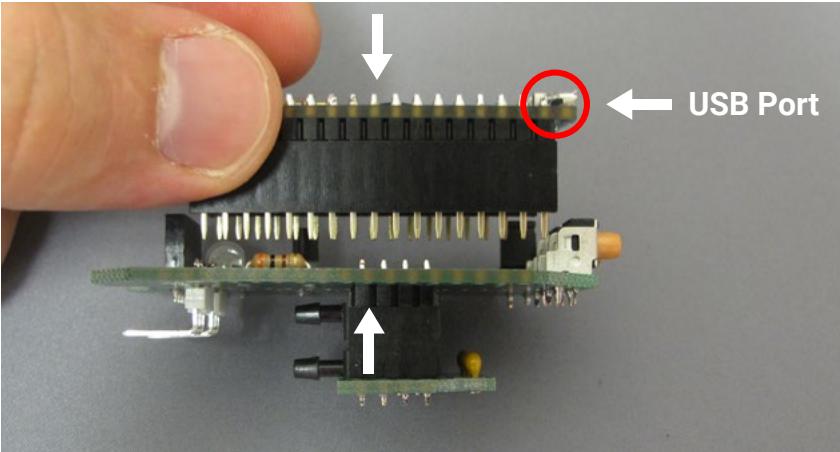


i NOTE: USB Port should be on the right side during installation

05.

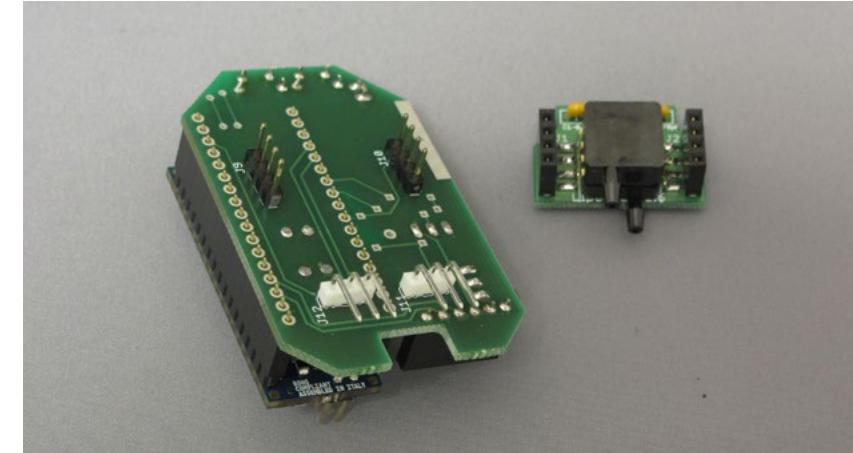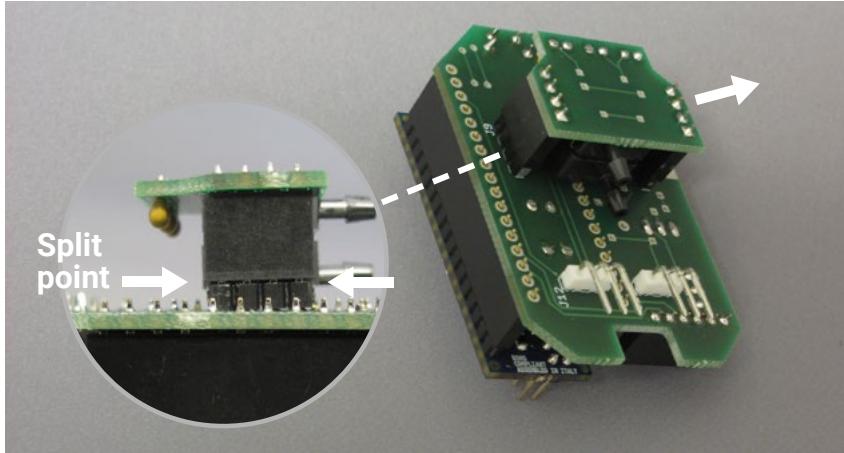


06.

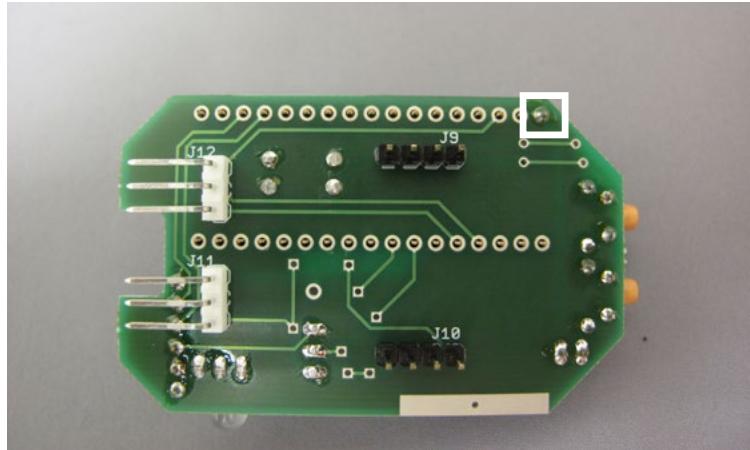


x 1

07.

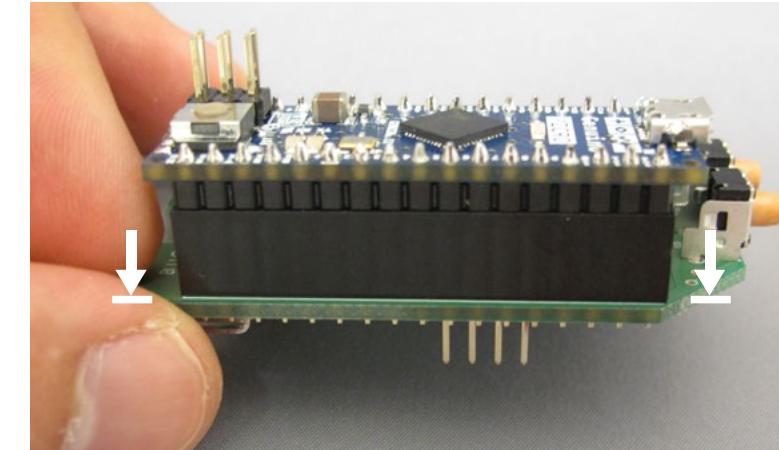


NOTE: Check that component is flush to the board

08.

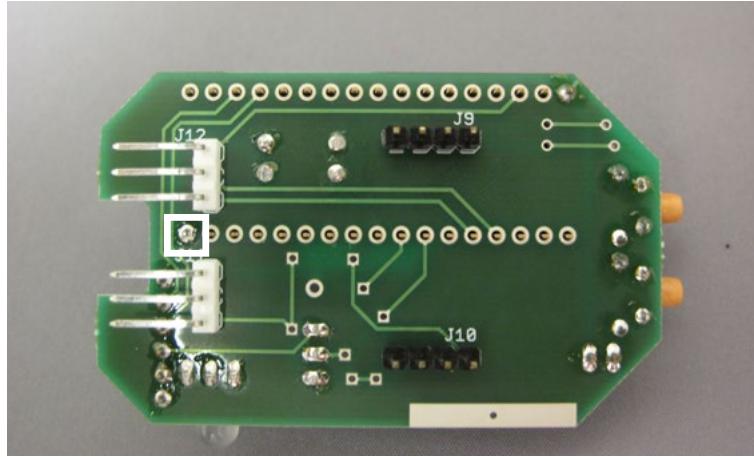


x 1

09.

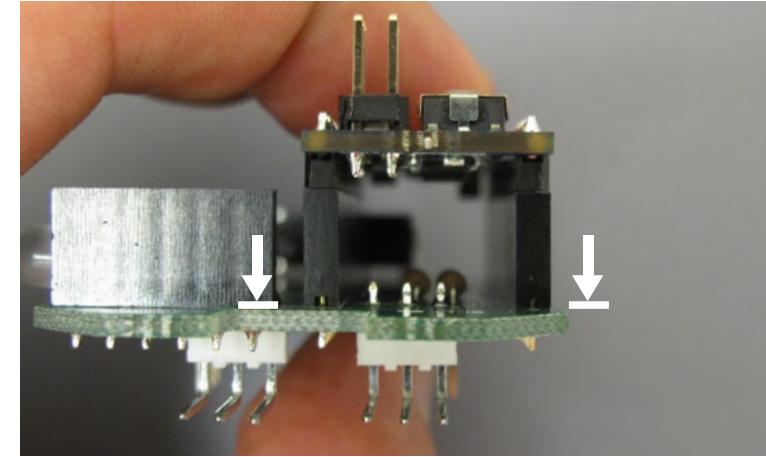


NOTE: Check that component is flush to the board

10.


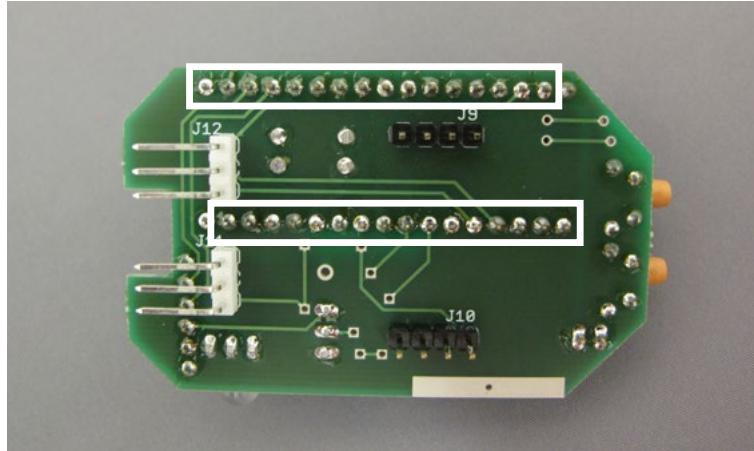


x 32


11.

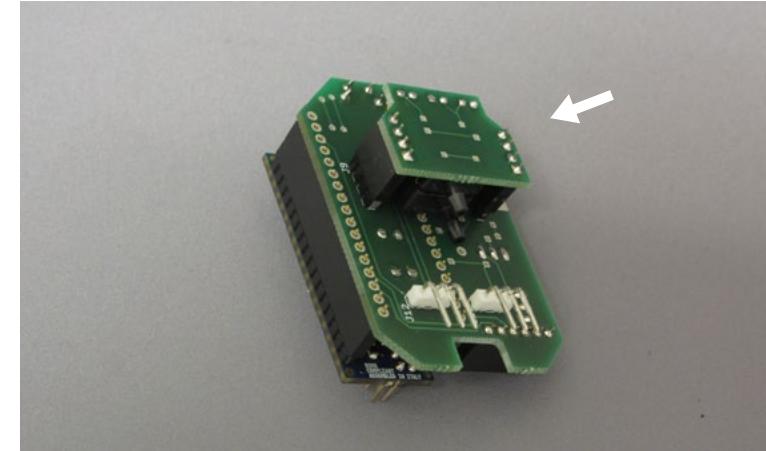

PART 5

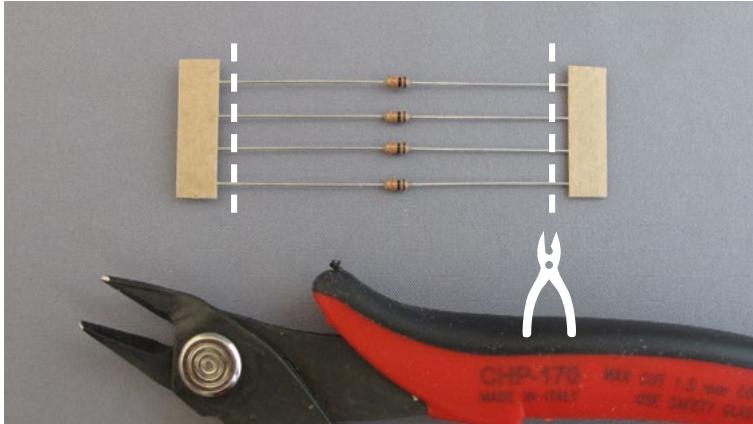
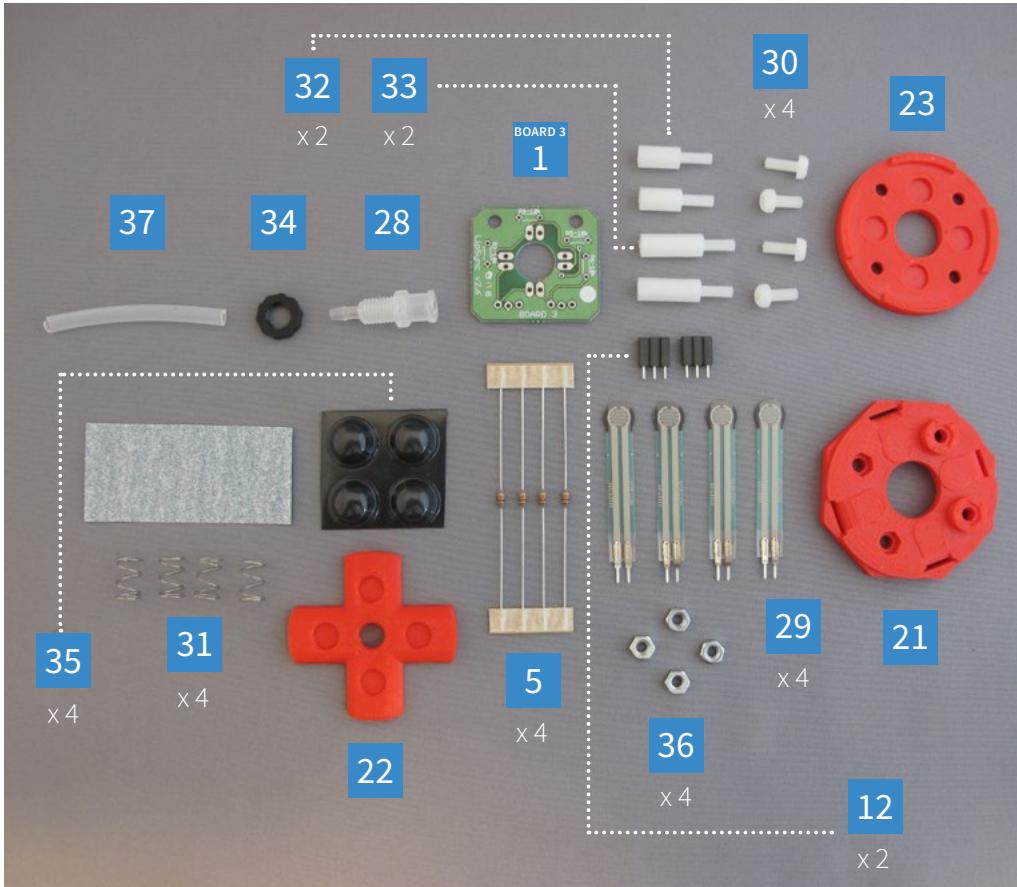


5
x 4

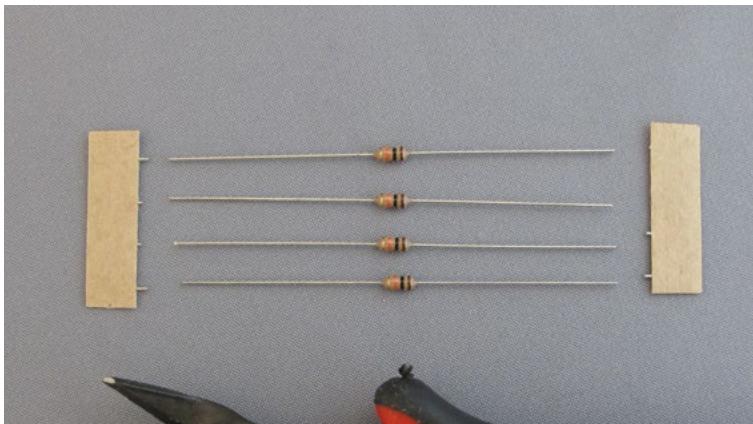


01.

02.

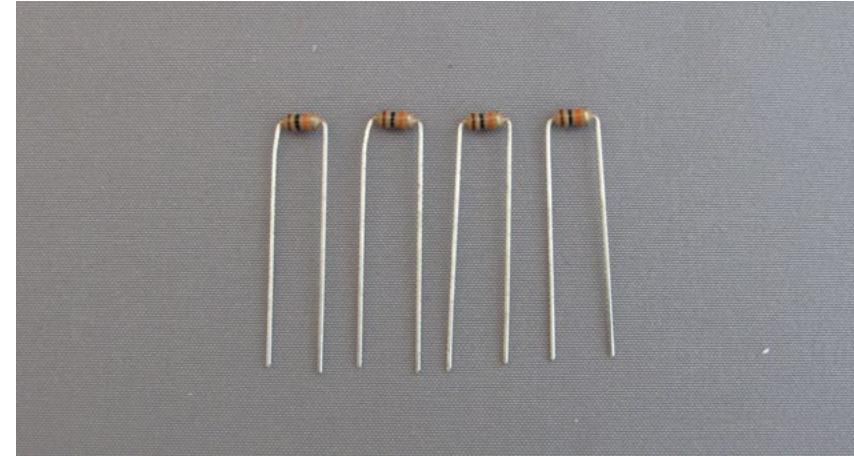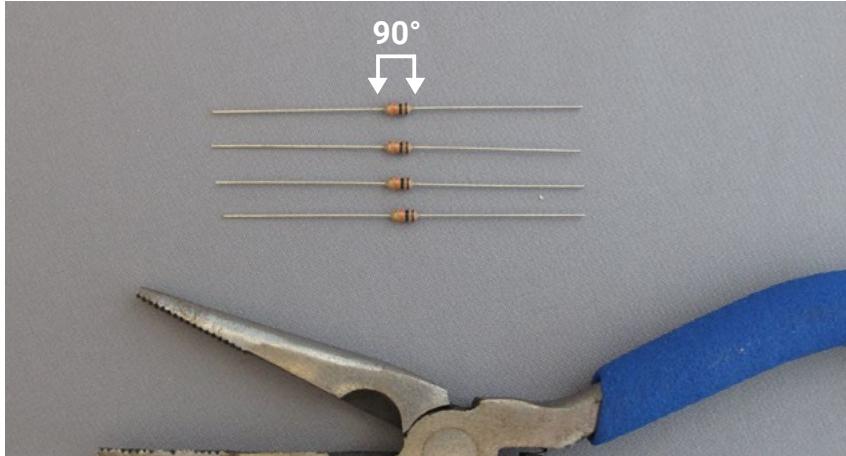

03.

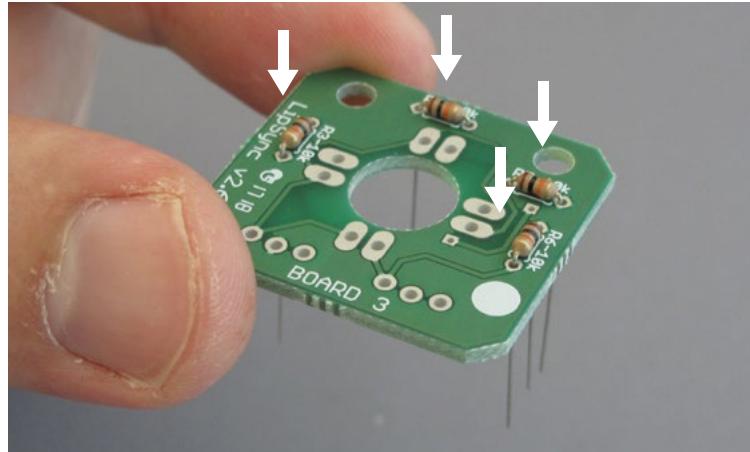

BOARD 3

1
x 4


HOLE
R3

HOLE
R4


HOLE
R5

HOLE
R6

04.

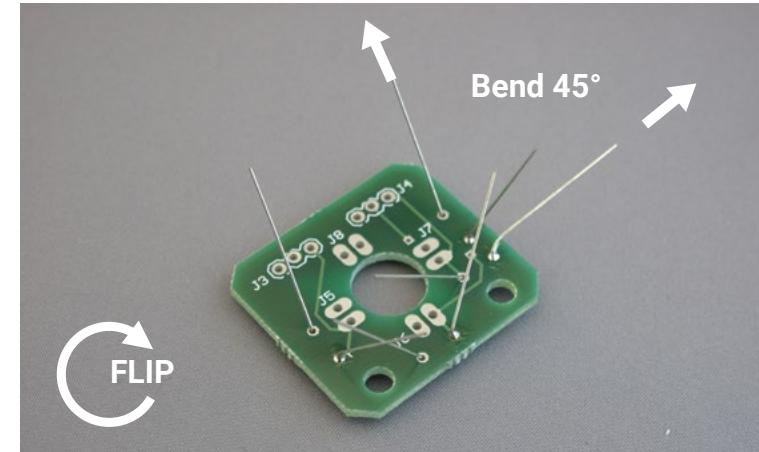


05.

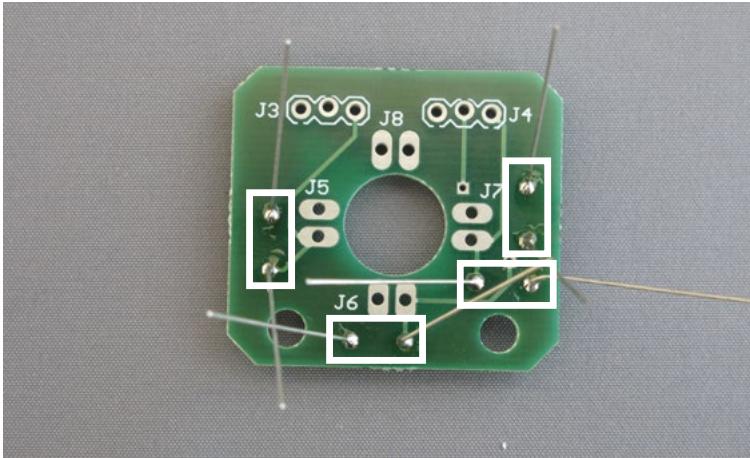


x 8

06.

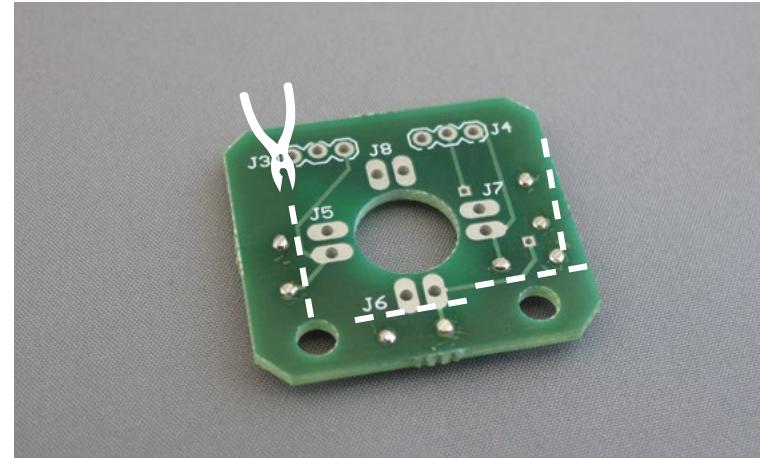


07.

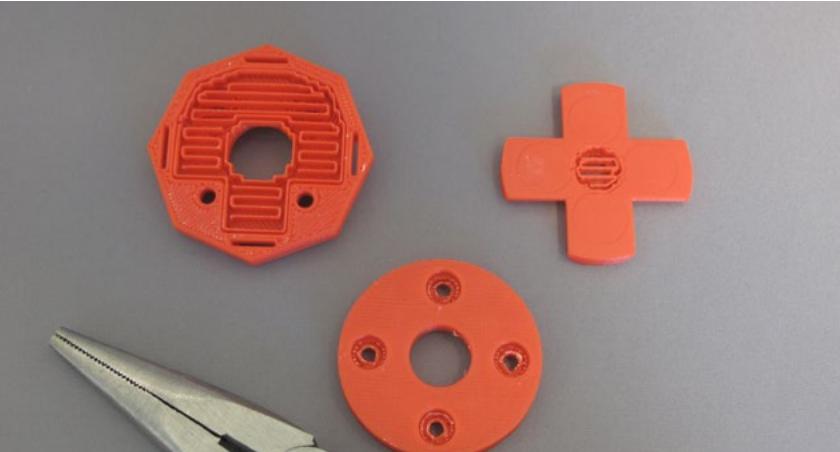


21

22

23

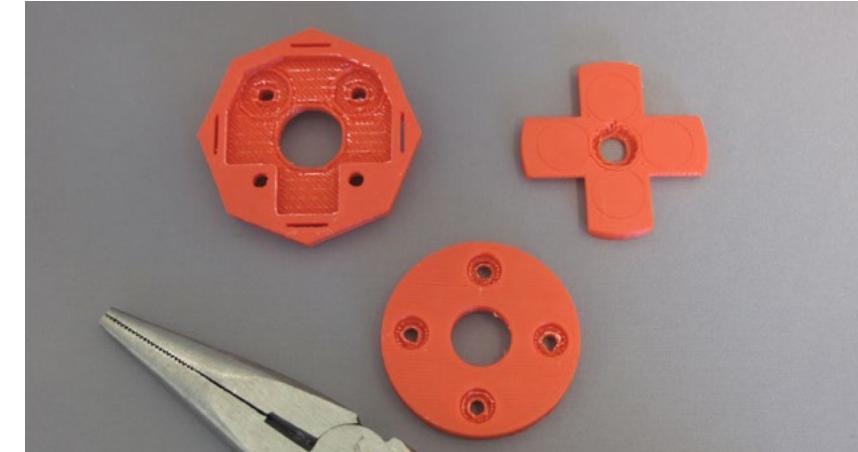

08.

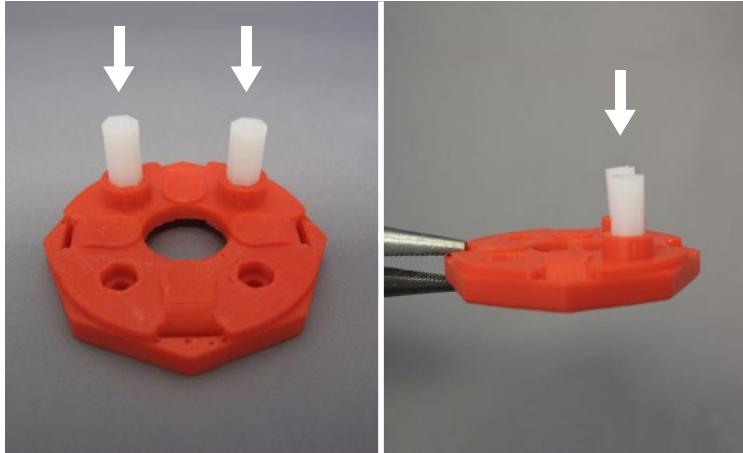

NOTE: Insert the 10mm standoffs

32

x 2

09.




36

x 2

10.




11.

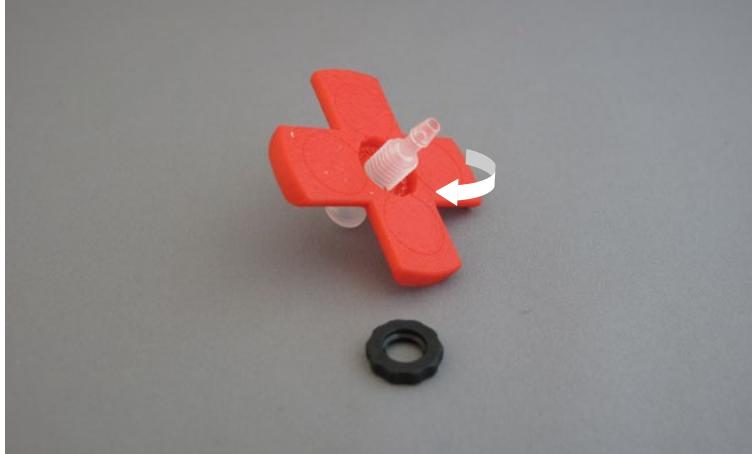


22
28
34


12.

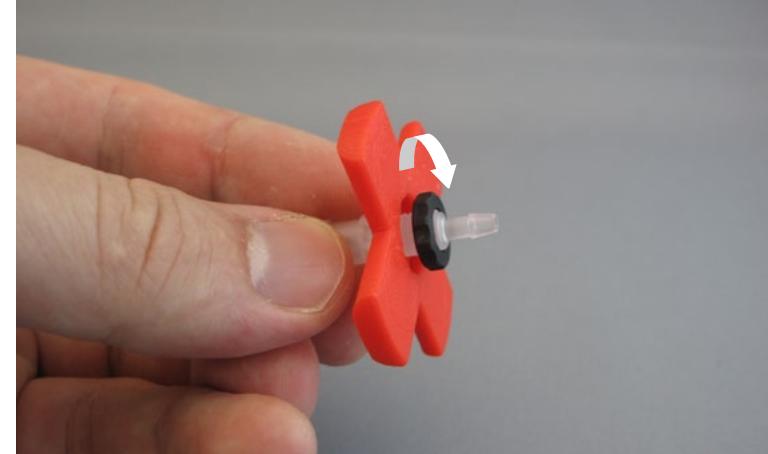

13.

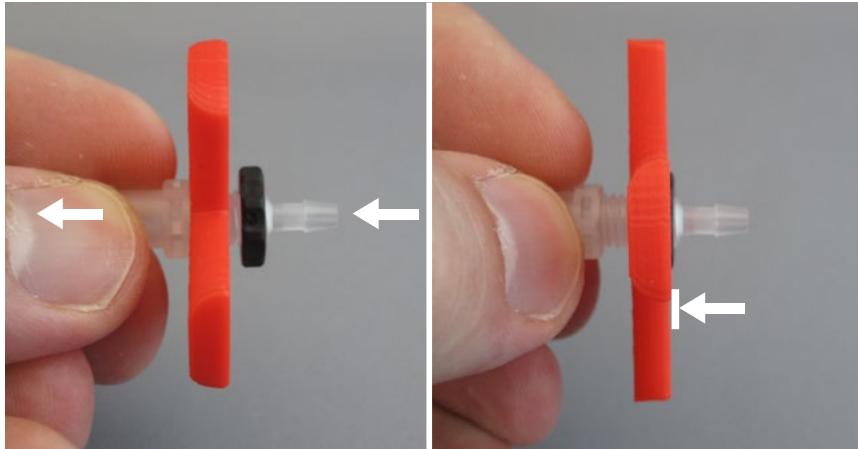


34

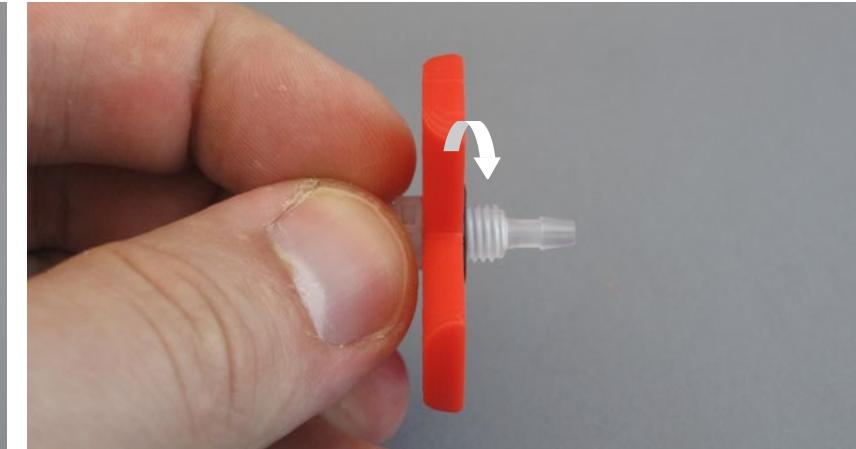


NOTE: The luer lock nut should sit flush to the rocker. Once flushed, twist the luer lock fitting the rest of the way.

14.

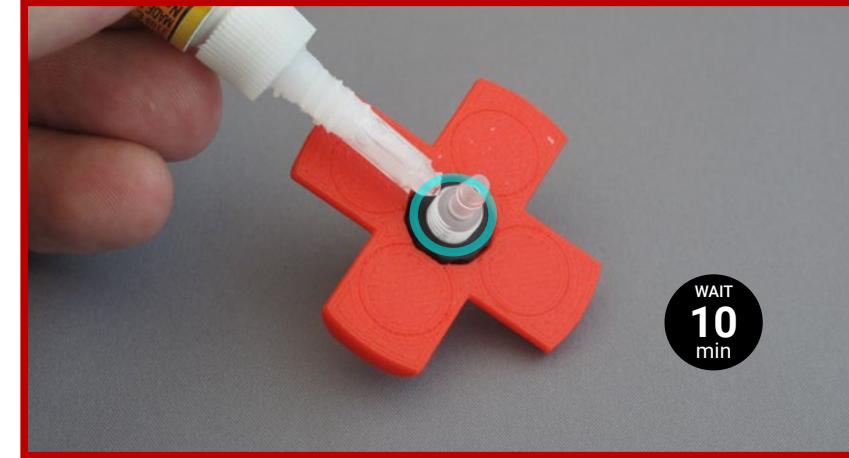

⚠️ IMPORTANT:
Apply just enough
superglue
between where the
transparent luer
lock filter and black
luer lock nut meet.

15.

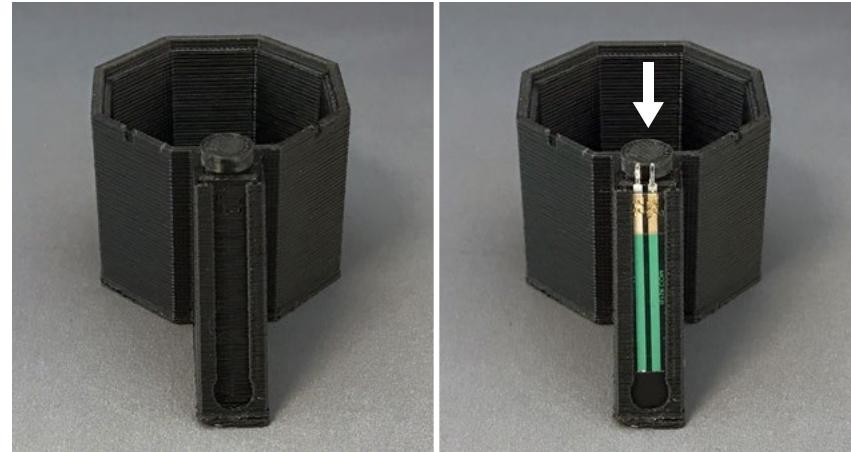


Use the joystick
stand holder
to assist with
Steps 15-19

29


⚠️ IMPORTANT:
Orient the FSR with
the metallic side
facing down

16.

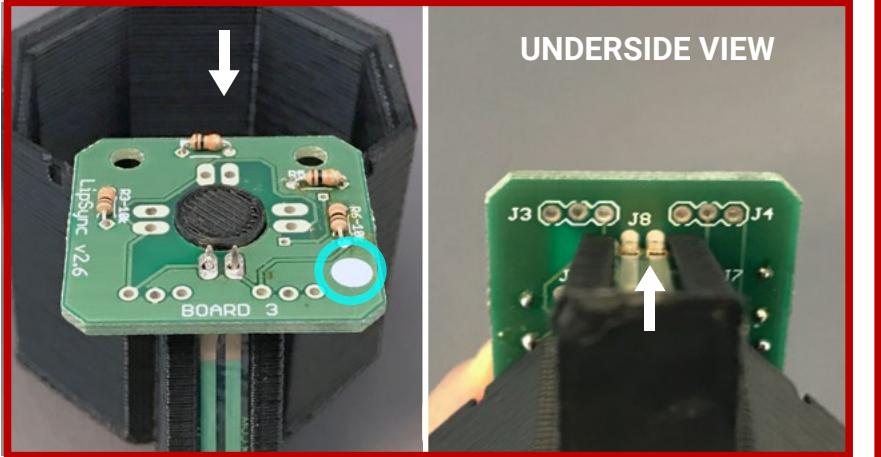

HOLE
J5

⚠️ IMPORTANT:
Place Board 3 onto the holder with the FSR leads inserted into Hole J8 with the **white circle facing up**.

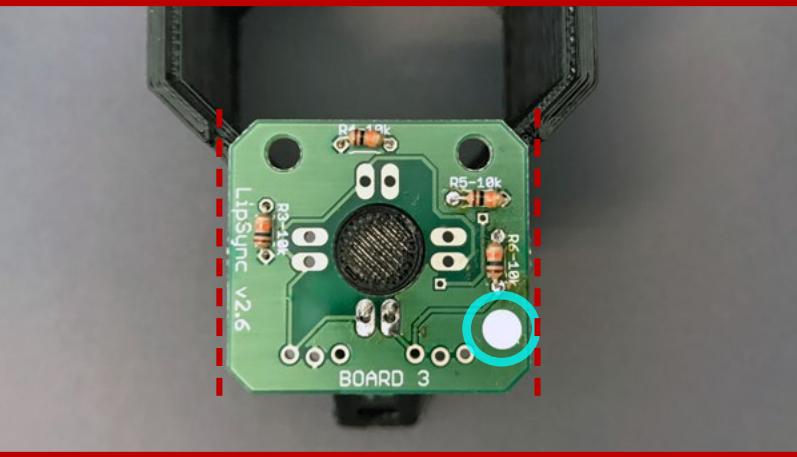


17.



x 2

18.

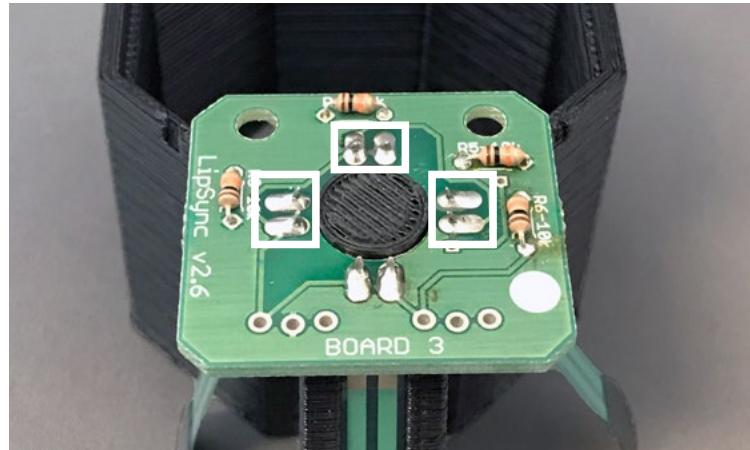

29

x 3


HOLE
J6

HOLE
J7

HOLE
J8

Repeat steps 15-17 for the 3 remaining FSRs

19.

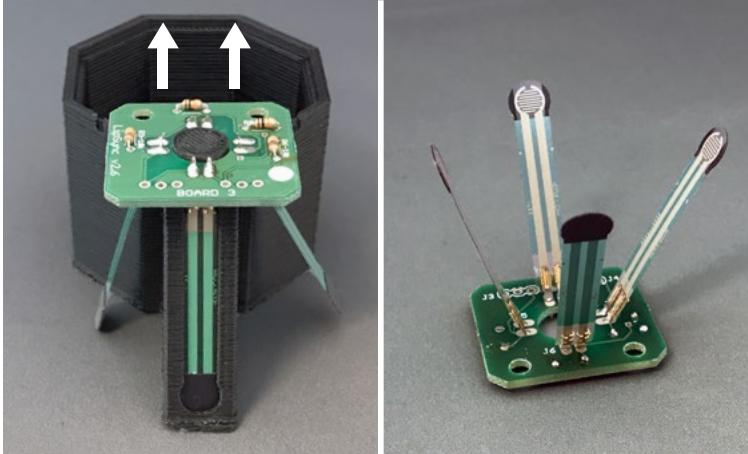


12

x 2


HOLE
J3

HOLE
J4

20.

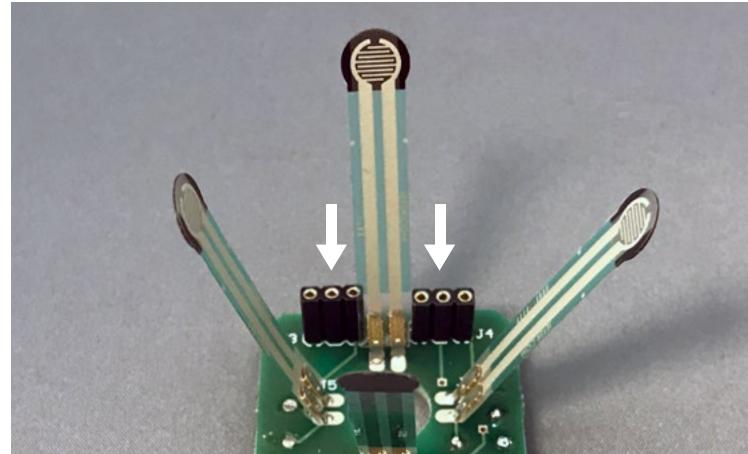


21.

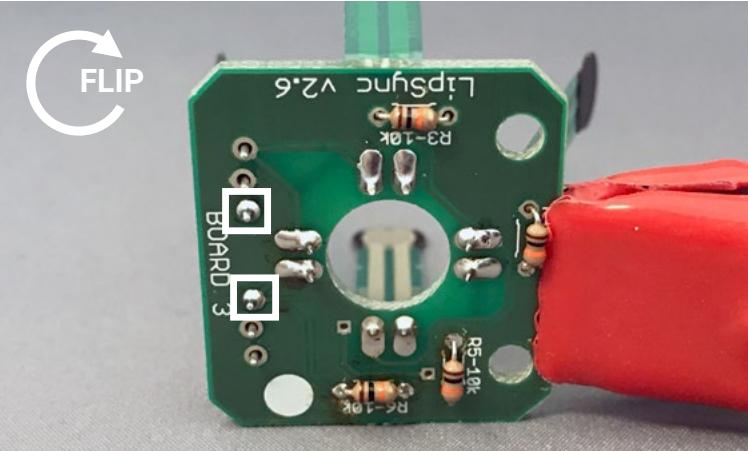


x 2

22.

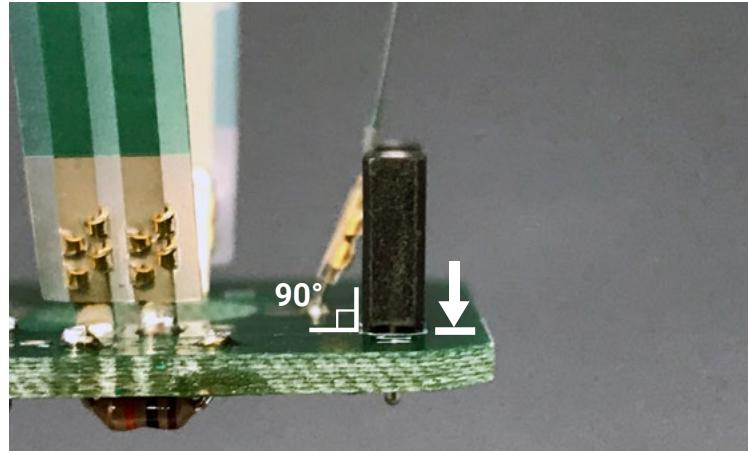

NOTE: Check that component is flush to the board

23.

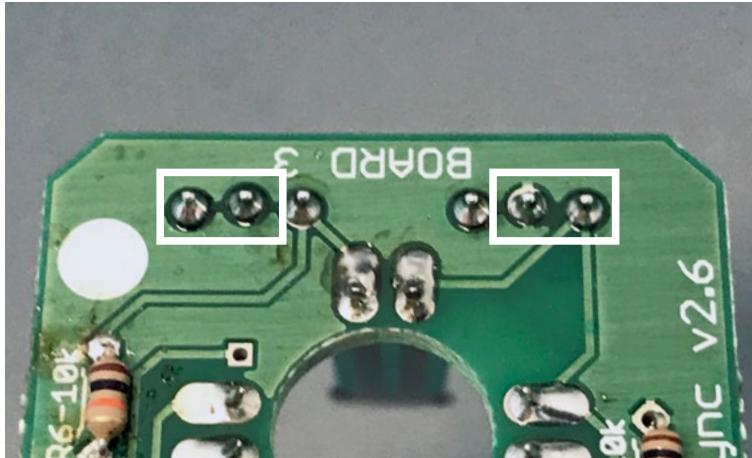


x 4

33


x 2

24.

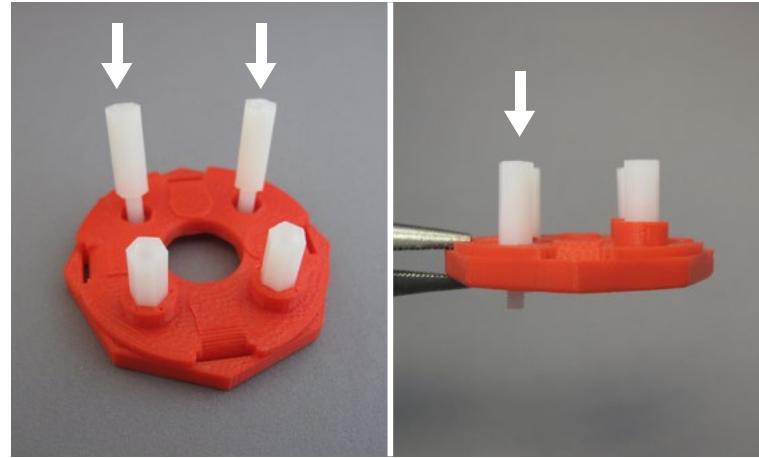


NOTE: Insert the 15mm standoffs


25.

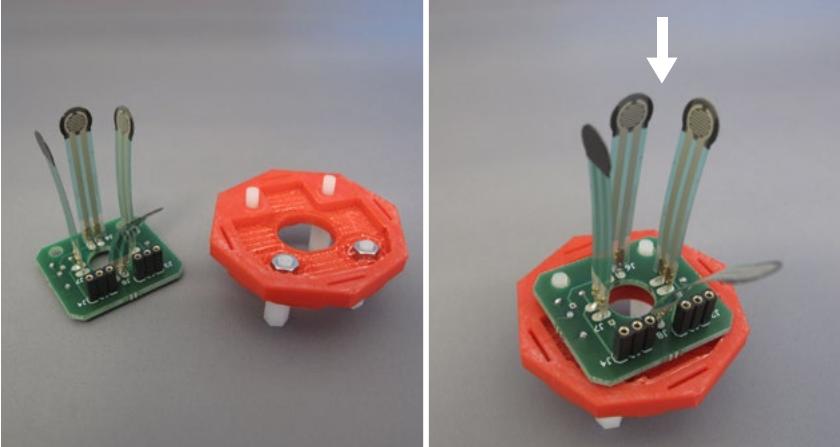

26.

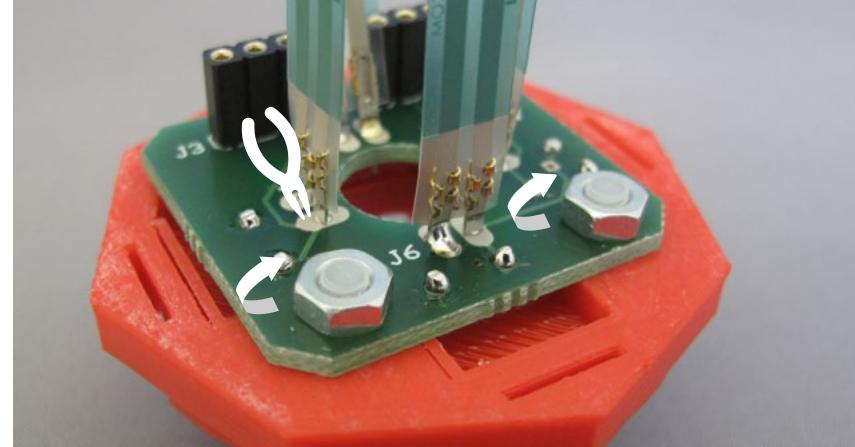

27.

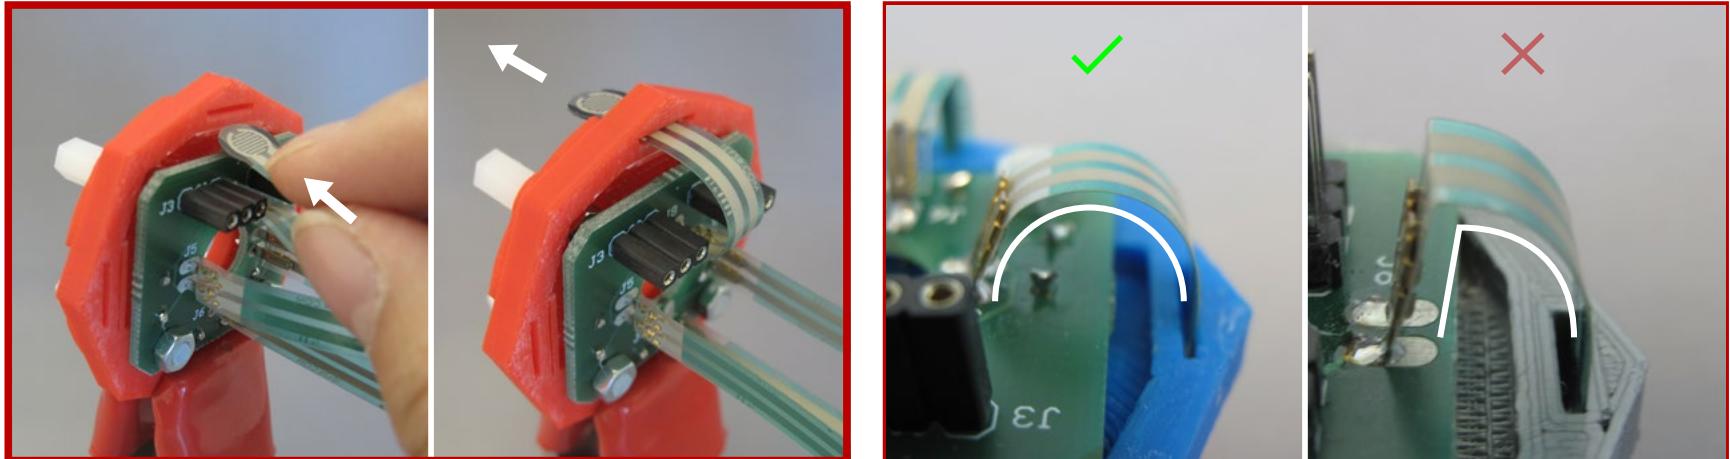


CAUTION:

Bend the FSR so it arcs

GRADUALLY. Do not fold or bend it abruptly as the ribbon breaks easily.



28.

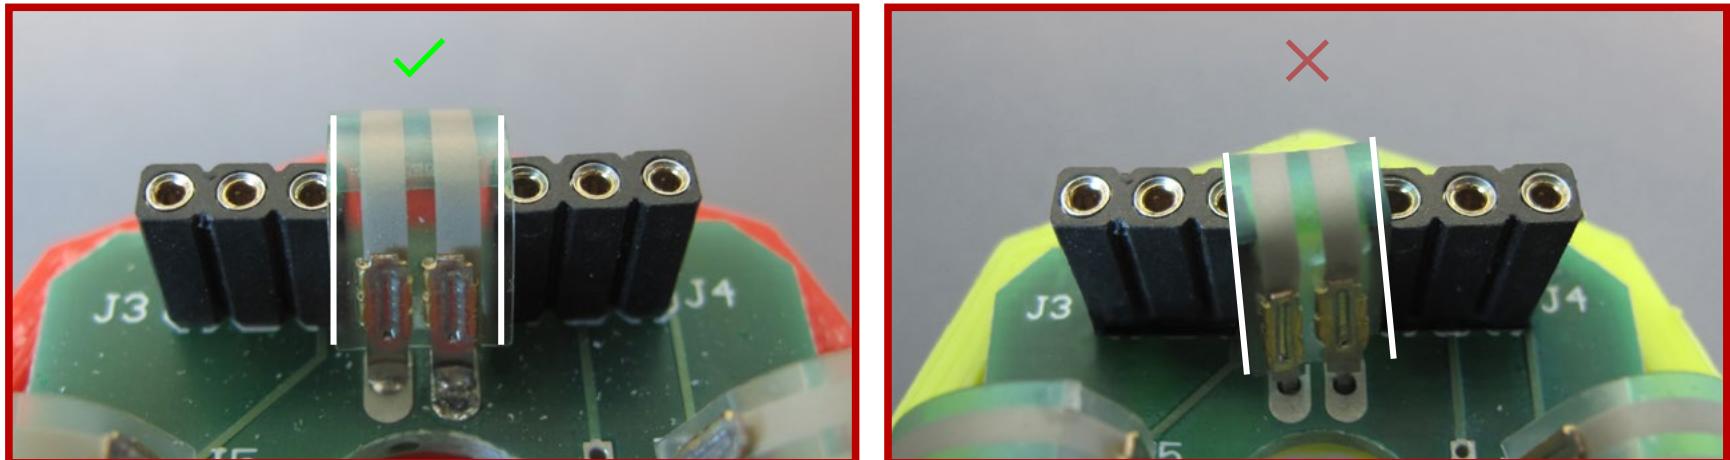



CAUTION:

One FSR ribbon will slightly overlap the 3-position female headers. The ribbon should not cover the through hole if soldered straight.

29.

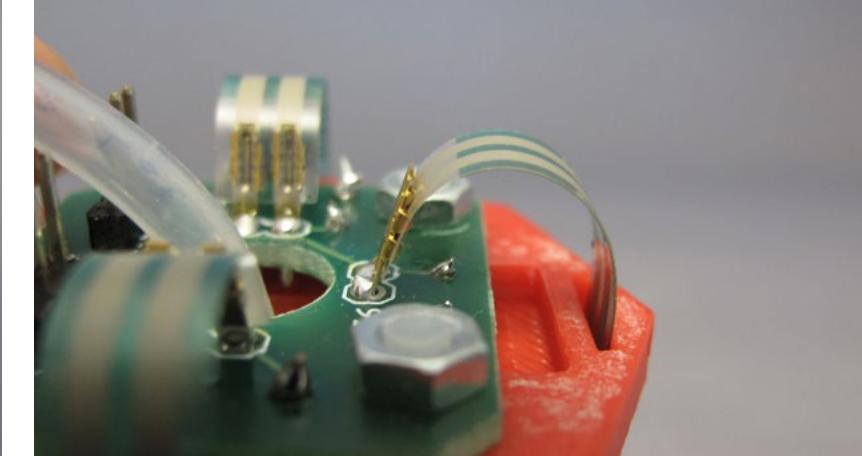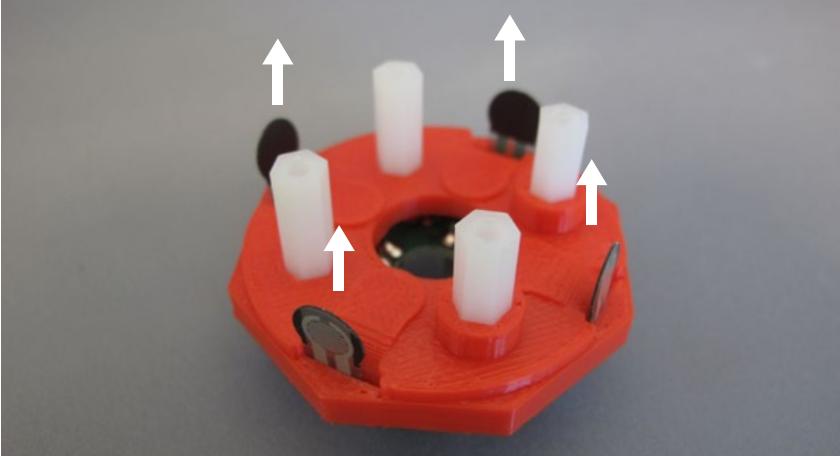

30.

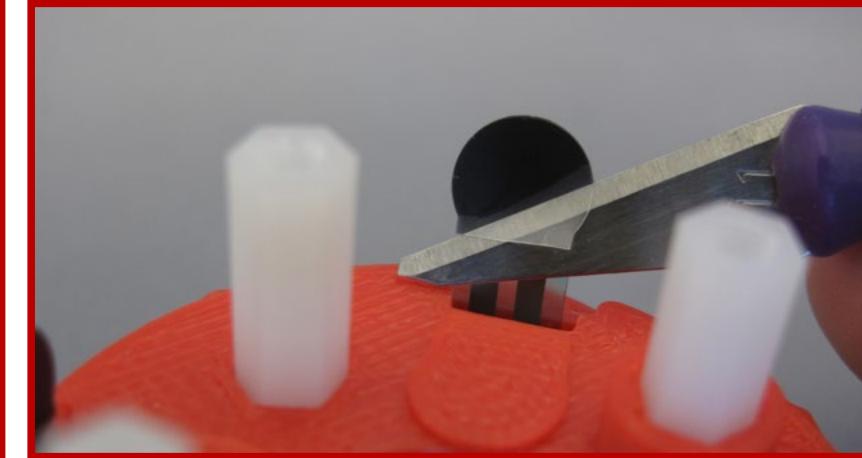
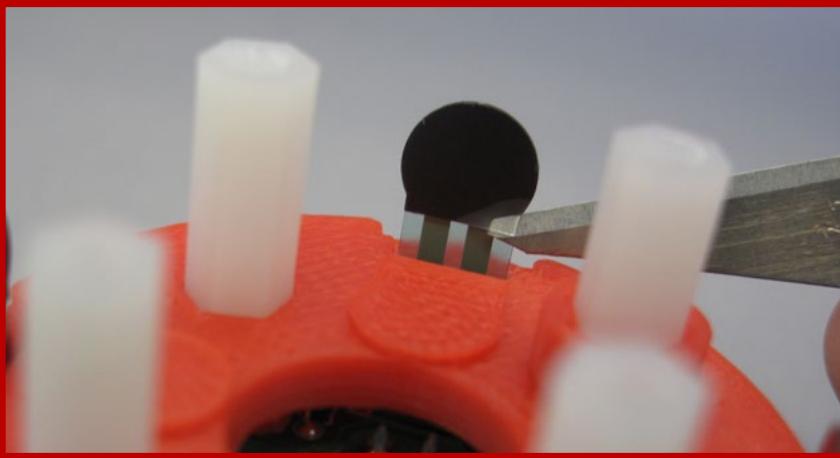


⚠ CAUTION:


On the back of each FSR is a clear adhesive lining over the black pad.

CAREFULLY
remove the lining with a hobby knife from the bottom corner.
Do not remove the black pad.


31.

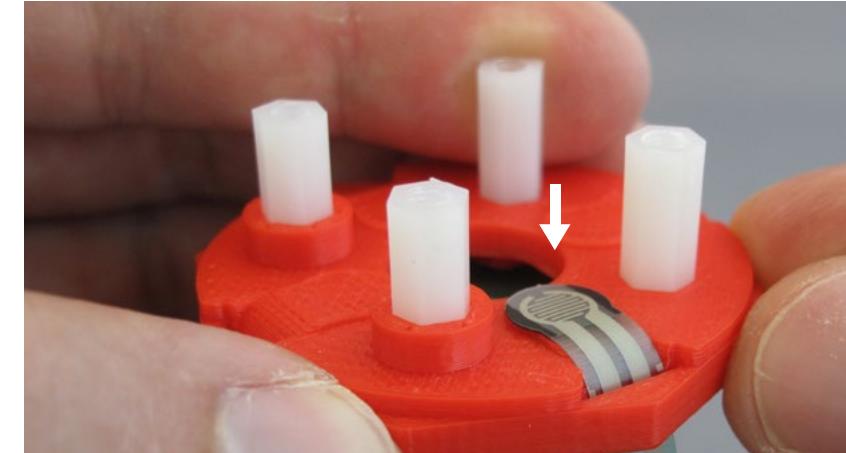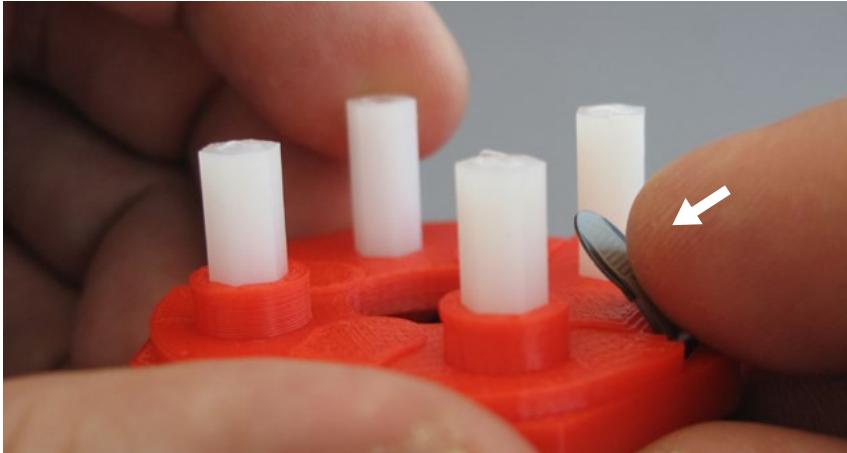

32.


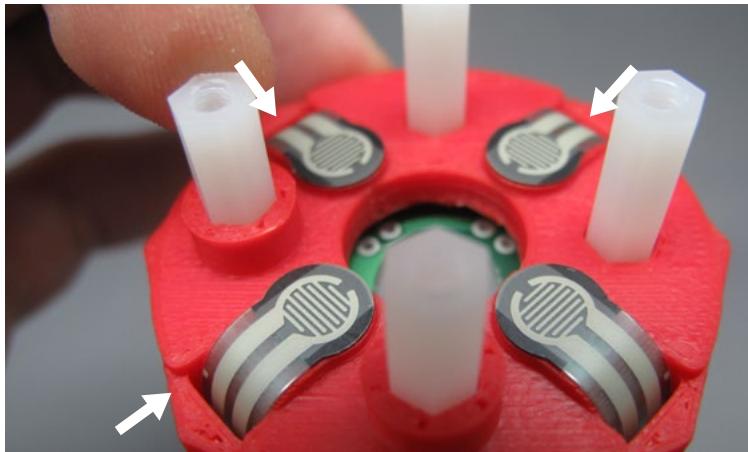


33.

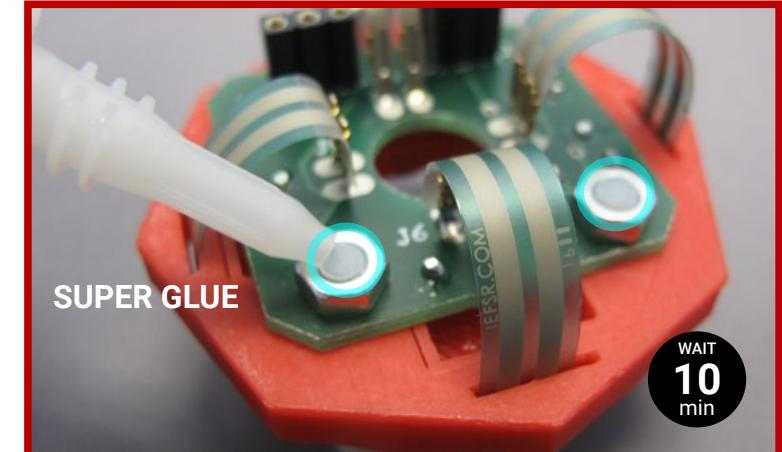


IMPORTANT: Only add a small **DROP** of superglue

34.

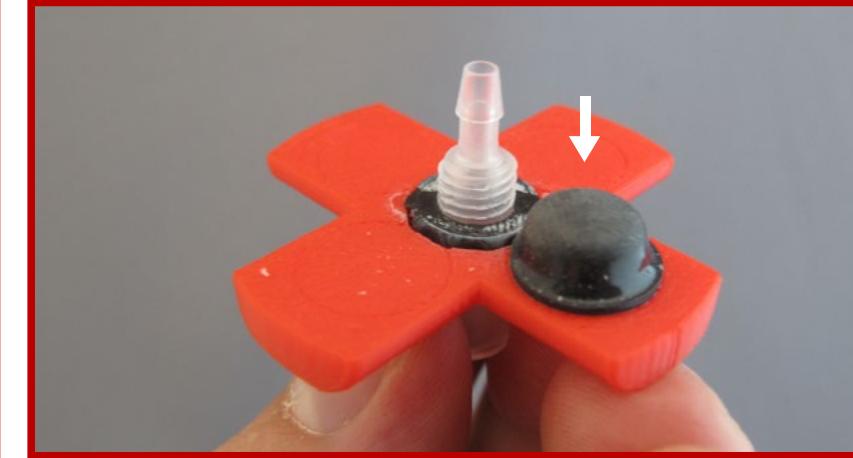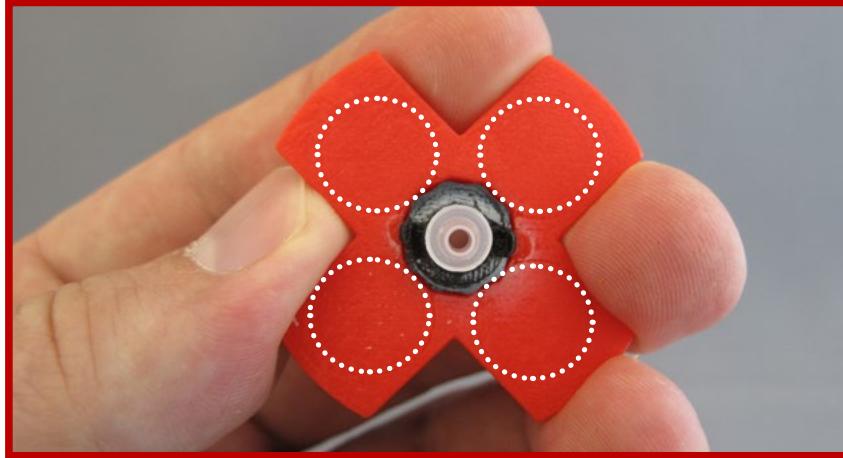


IMPORTANT:
On the flat side of
the rocker are 4
circular outlines.
Place a bumper
directly on each
outline.

35.

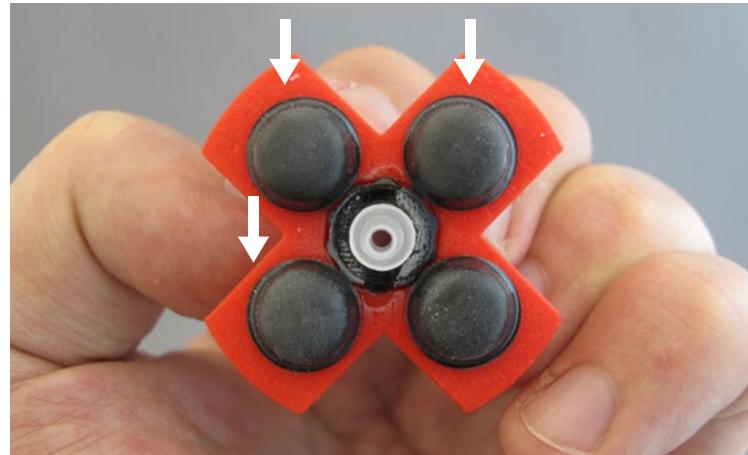


36.

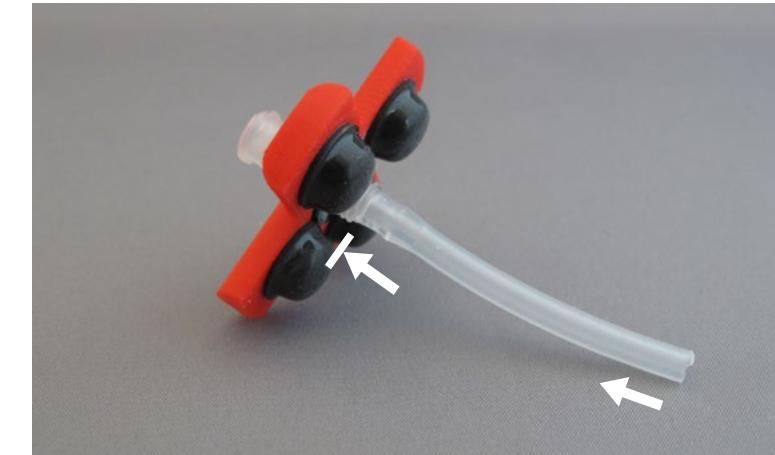

37

37.

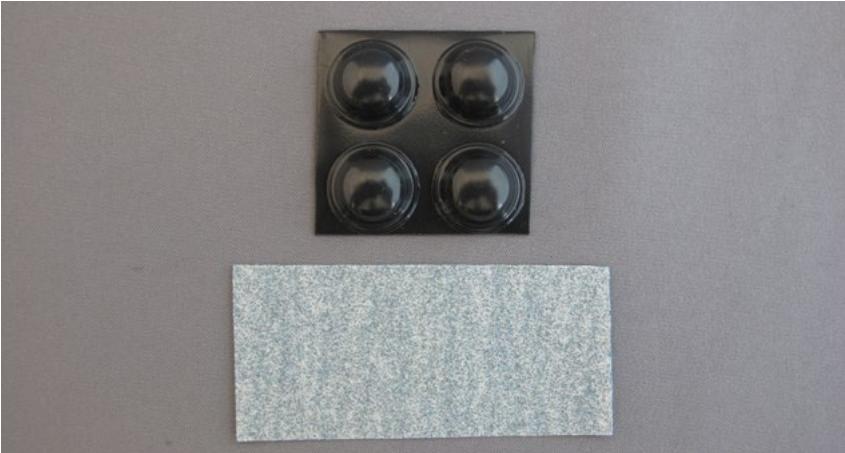


35

x4

i NOTE: Sand the top surface and around the bumpers




38.

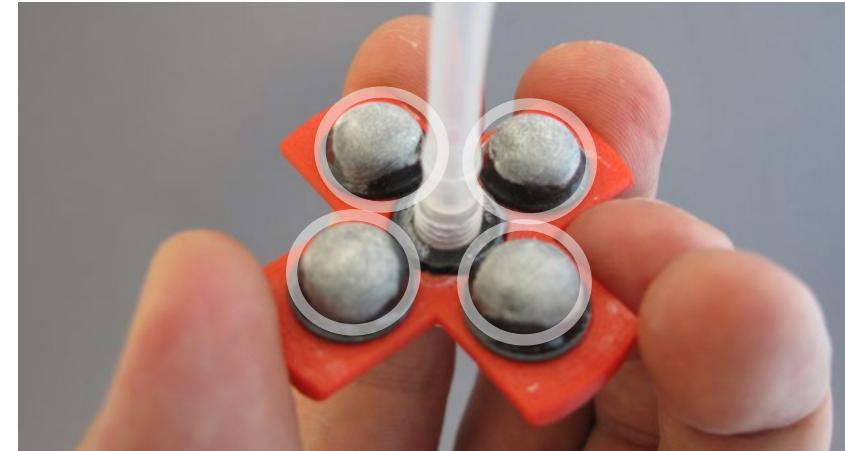

i NOTE: Apply baby powder with your finger


39.

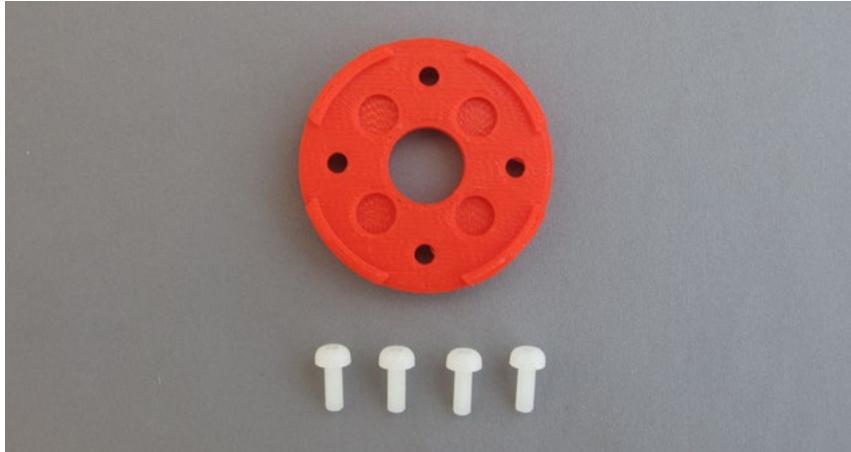



23

30


x 4

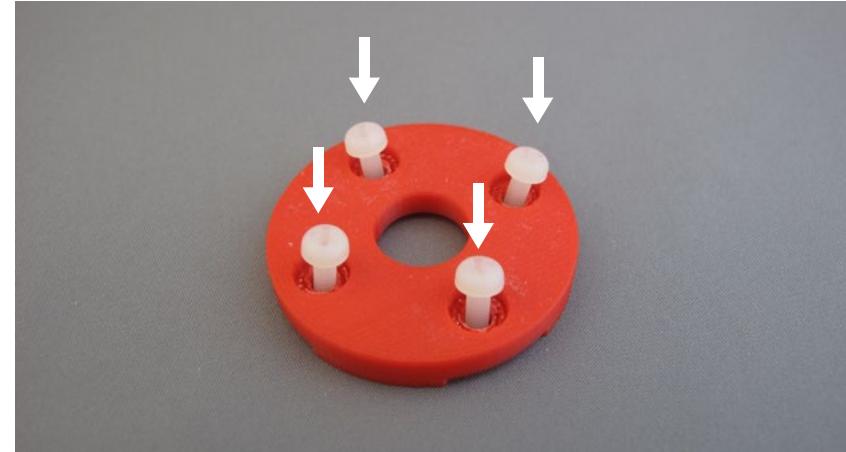


40.

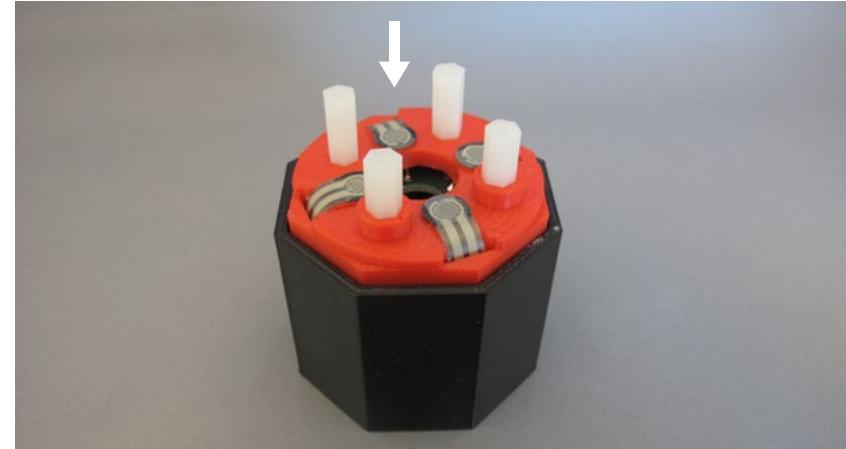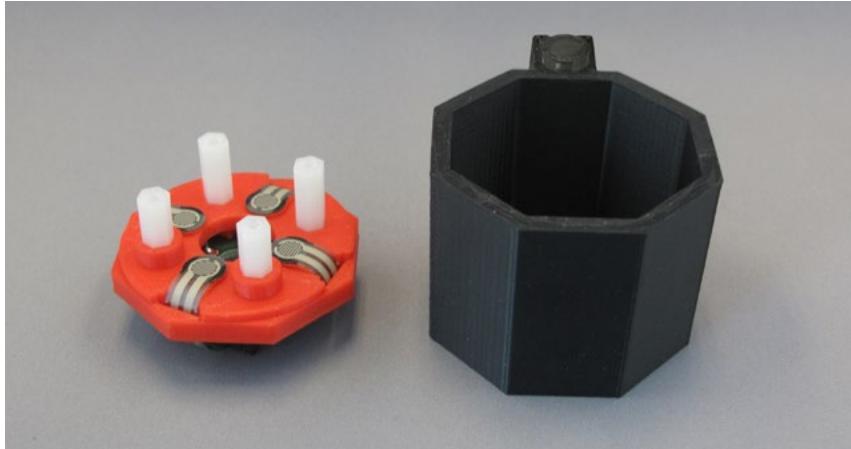


41.

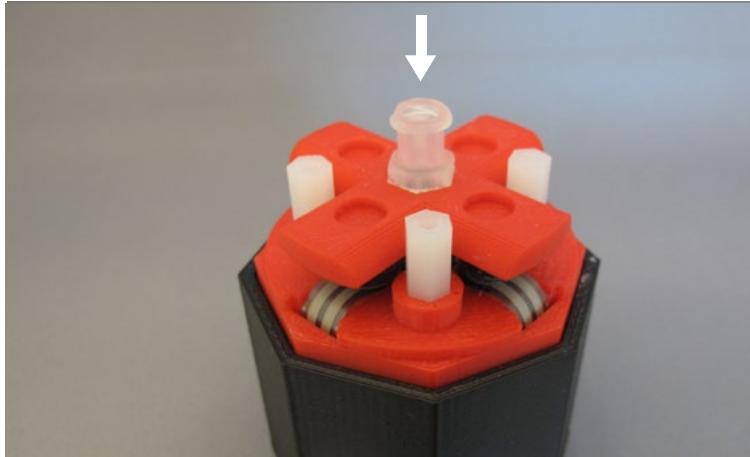


42.

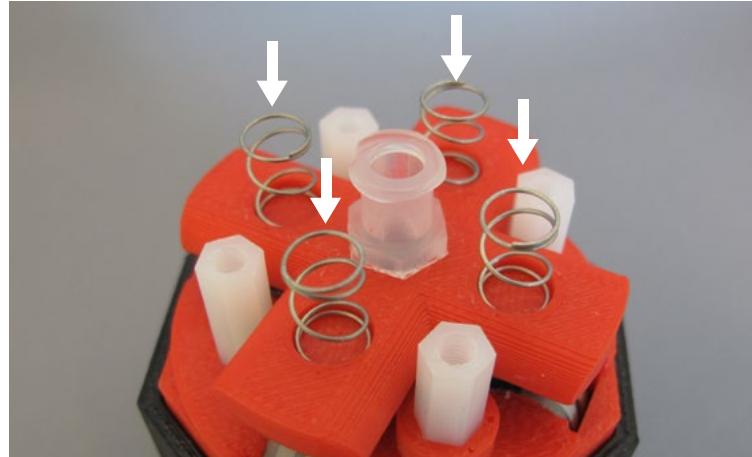



43.

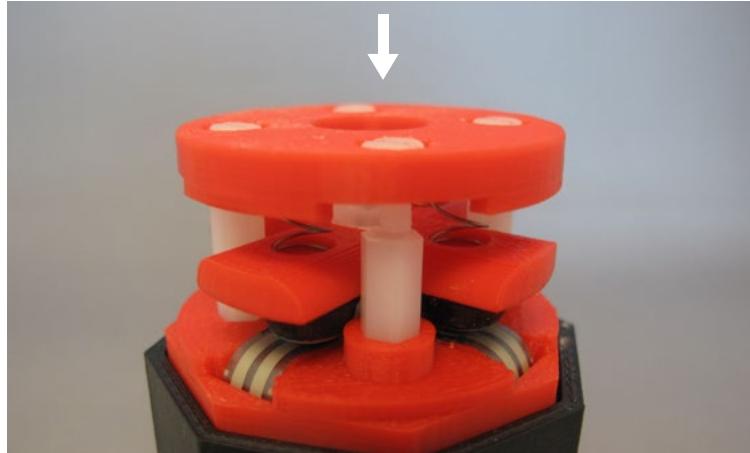



44.

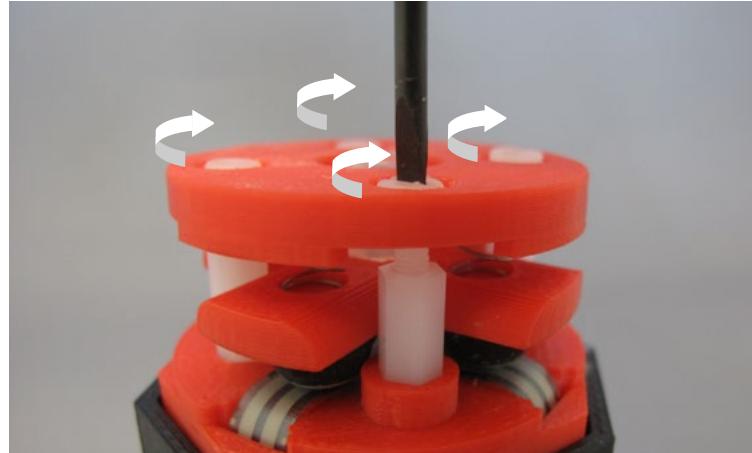

45.

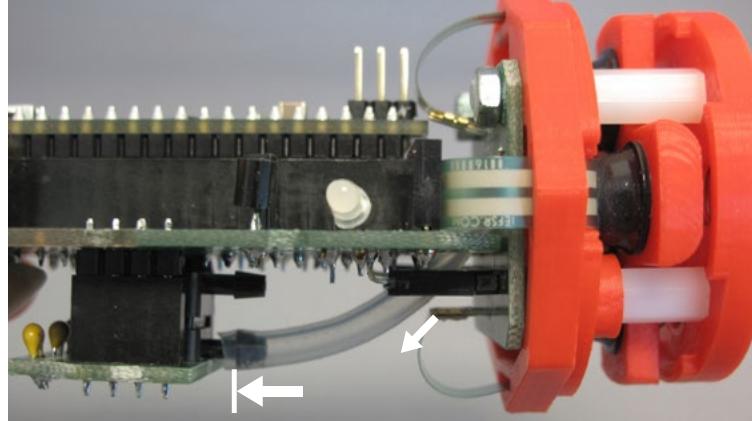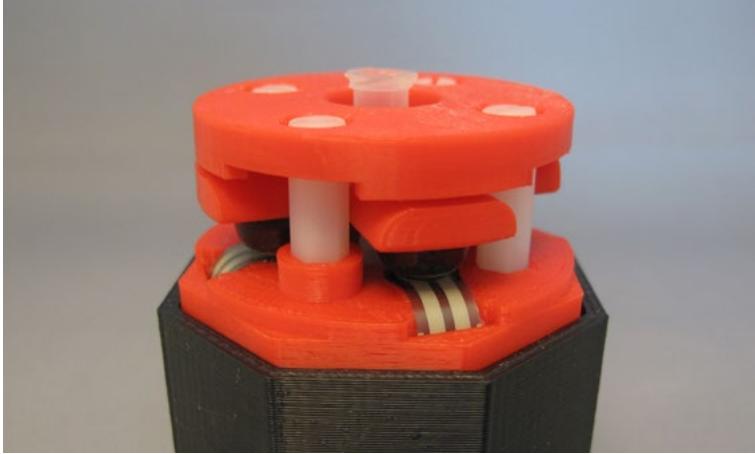

46.

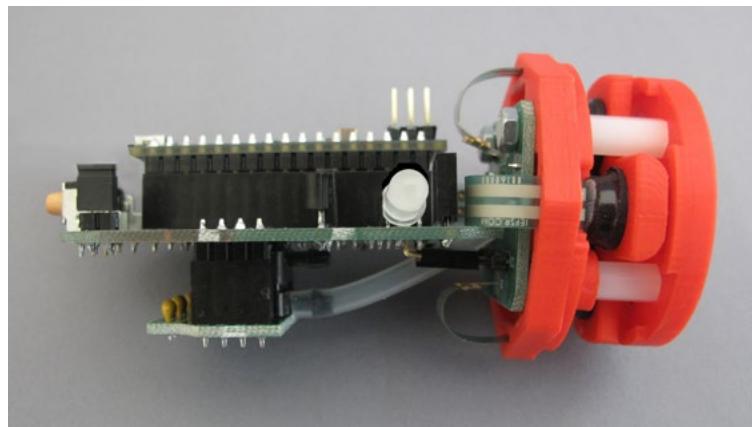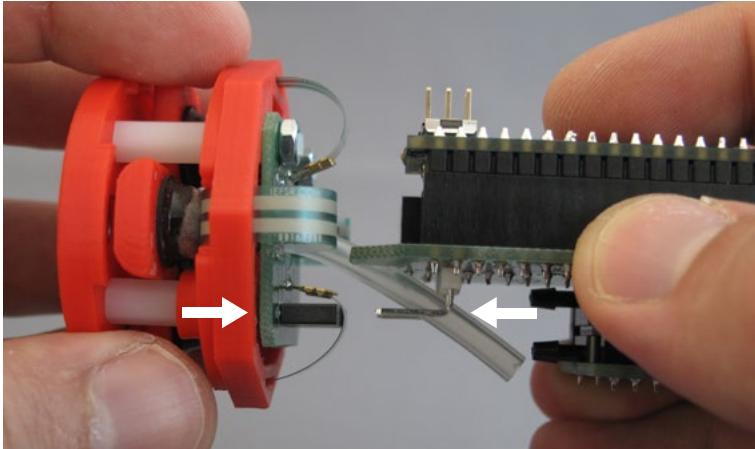


47.

PART 6



24
38

01.


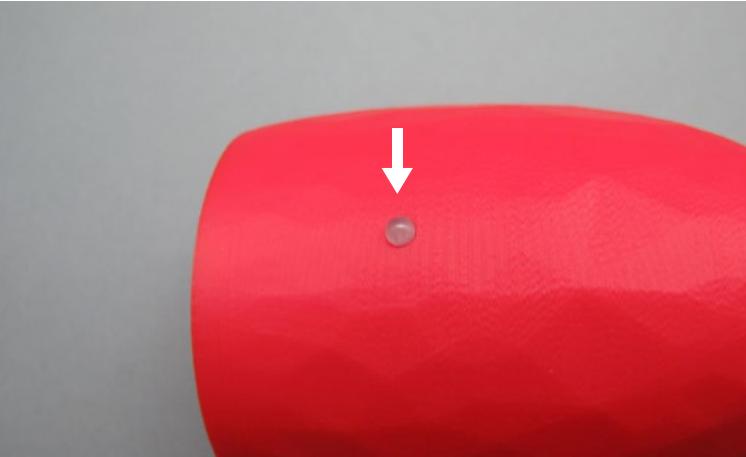


41
43

02.



NOTE: Tighten the cable tie until snug

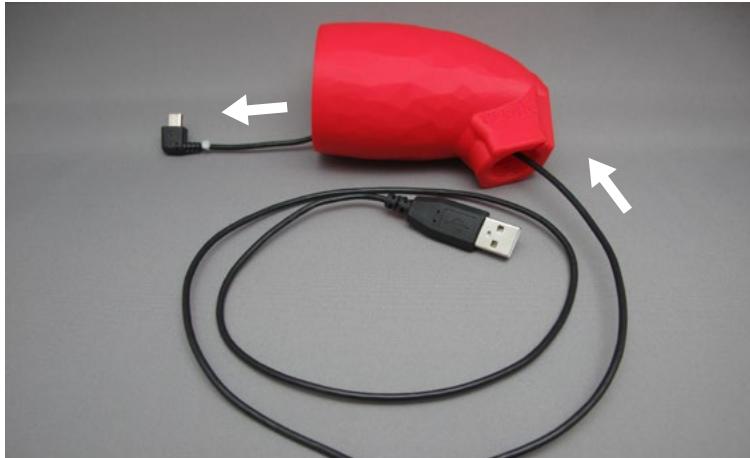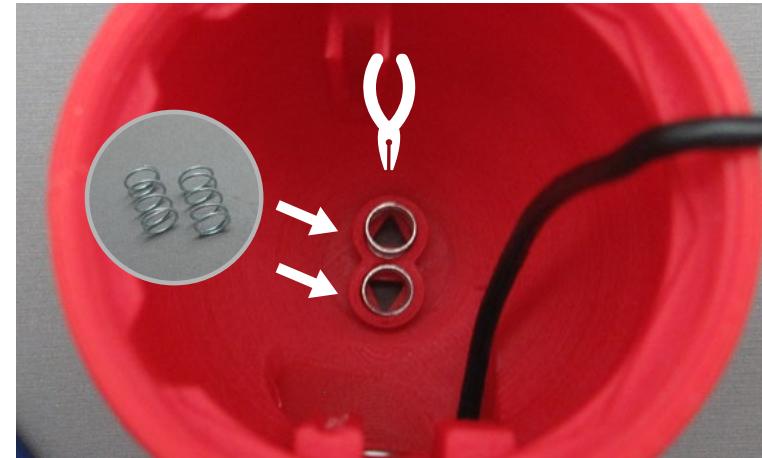03.**04.****05.**



25

x 2

06.


CAUTION: If need be, unplug cable gently while holding onto the port.

07.

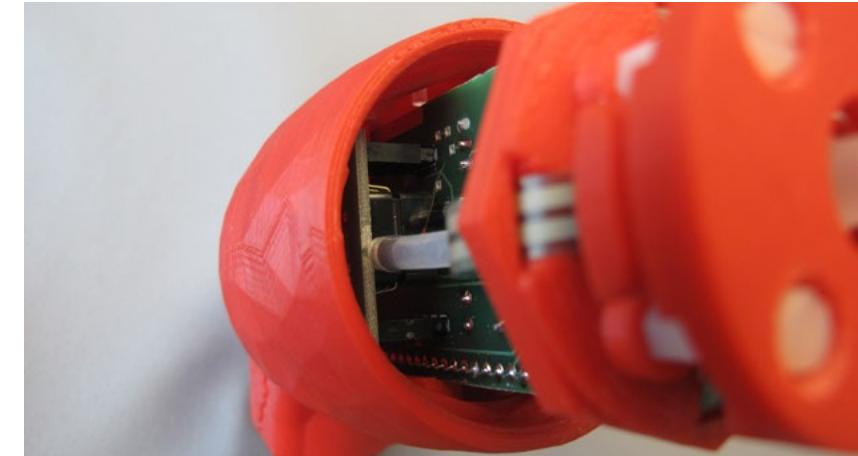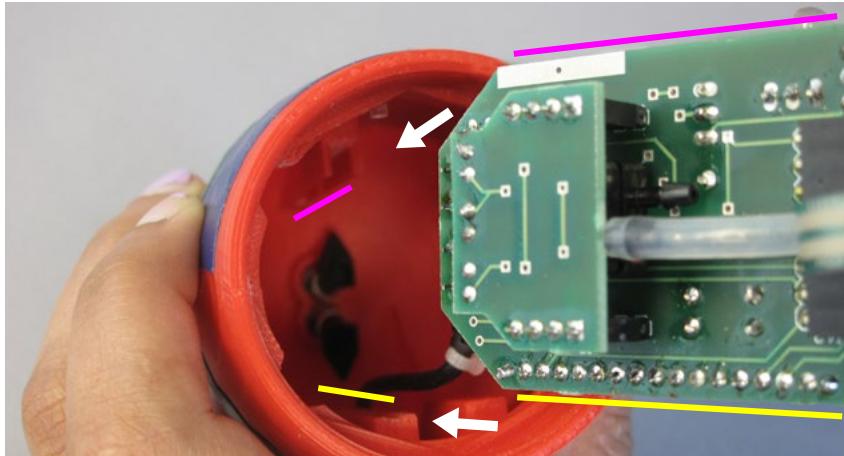

NOTE: Slide the assembly along the internal tracks in the rear chamber housing.

08.

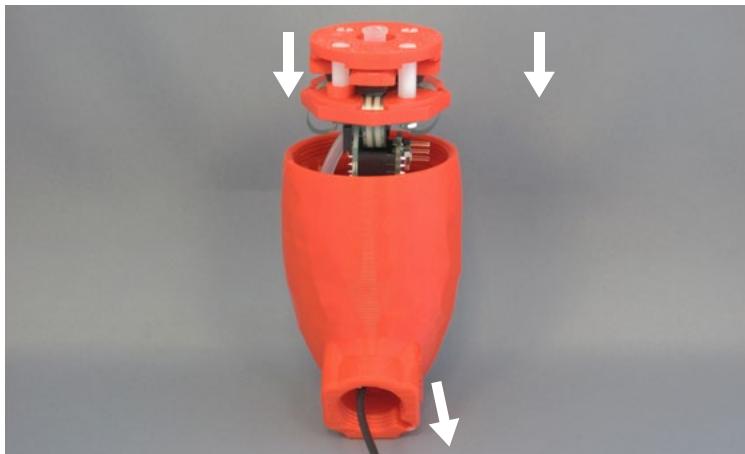

09.



CAUTION: Twist on hand tight

10.



27

⚠ CAUTION: Twist on hand tight

11.



26

12.



39

13.



40

PART 7

SETTING UP THE DEVICE

It is essential that the following steps are completed in the listed order to ensure that your device is properly set up before first using

- A. Upload the microcontroller code.
- B. Calibrate the joystick.
- C. Read through the Startup Guide for complete information on using the LipSync:
<https://github.com/makersmakingchange/LipSync/blob/master/README.md>

NOTE: In the startup guide is information about device compatibility, mounting, sip-and-puff functions, and speed control among others.

A - UPLOADING THE MICROCONTROLLER CODE

1. Download and install the latest version of Arduino IDE:
<https://wwwarduino.cc/en/main/software>
2. Download and save the latest LipSync microcontroller code:
https://raw.githubusercontent.com/makersmakingchange/LipSync/master/Software/LipSync_Firmware/LipSync_Firmware.ino

Right-click on the hyperlink of microcontroller code, select "Save Target As" (Internet explorer) or "Save Link As" (Chrome or Firefox) and save the microcontroller code (LipSync_Firmware) to the computer directory or folder of your choice.
3. Open the Arduino IDE and click on **Tools** → **Board** → **Arduino/Genuino Micro**
4. Connect to the PC using the LipSync USB cable.
5. Click on **Tools** → **Port**
6. Click the right arrow at the top left of the Arduino IDE to upload the microcontroller code to the LipSync device.
7. Once upload is complete, a message saying "Upload Successful" will show at the bottom left of the Arduino IDE.

B - JOYSTICK CALIBRATION


Calibrate your LipSync joystick before first using your device.

⚠️ IMPORTANT: Allow the LipSync to initialize for 3 seconds before moving the mouthpiece **each time** after it's plugged into a device.



1

Press both speed adjustment buttons on the back of the LipSync for a few seconds until LED comes on

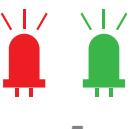

x 5

2



LED slowly blinks red & green 5 times



3 sec.
pause



x 6

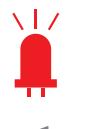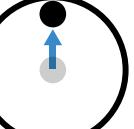

x 1

3


While LED blinks green 6 times, move the mouthpiece to the 12 o'clock position (up direction)

4

LED blinks red 1 time when position is measured



x 6

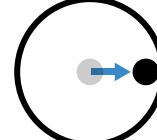

x 1

5

While LED blinks green 6 times, move the mouthpiece to the 3 o'clock position (right direction) time when position is measured

6



x 6



x 1


7

While LED blinks green 6 times, move the mouthpiece to the 6 o'clock position (down direction) time when position is measured

8



x 6

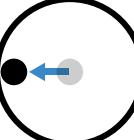

x 1

9

While LED blinks green 6 times, move the mouthpiece to the 9 o'clock position (left direction) time when position is measured

10



x 6

LED rapidly blinks red and green 6 times when calibration is complete