


Shrub Hub

QUICKSTART GUIDE

Features

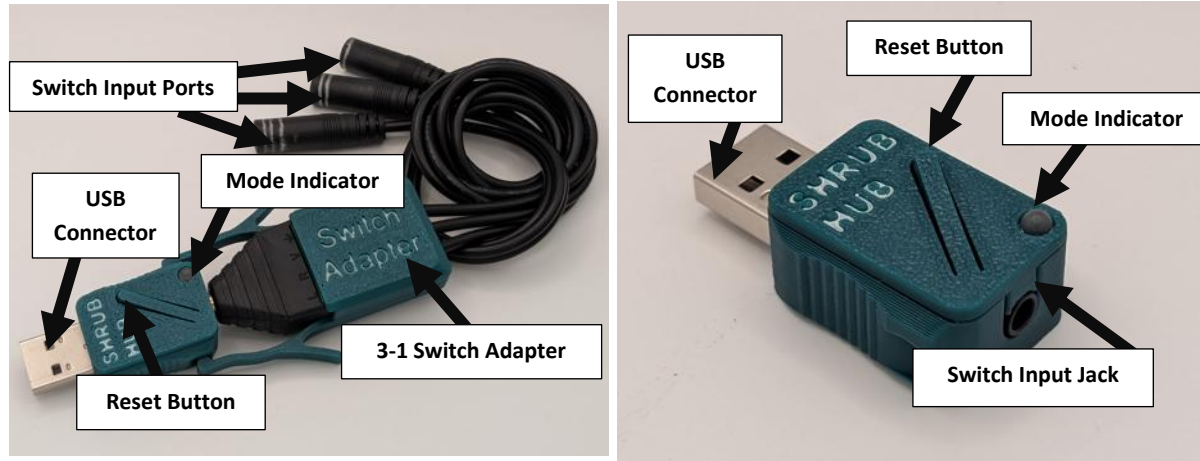

Operating Mode in Single Switch Mode

Input		Output				
Activation	Input Switch	Mode 1 (Teal)	Mode 2 (Purple)	Mode 3 (Yellow)	Mode 4 (Green)	Mode 5 (Orange)
One Switch	Switch 1	Enter	F1	Left Click	F13	Play/Pause

Operating Mode in Multiple Switch Mode

Input		Output				
Activation	Input Switch	Mode 1 (Teal)	Mode 2 (Purple)	Mode 3 (Yellow)	Mode 4 (Green)	Mode 5 (Orange)
One Switch	Switch 1	Enter	F1	Left Click	F13	Play/Pause
	Switch 2	Space	F2	Right Click	F14	Volume Up
	Switch 3	Tab	F3	Middle Click	F15	Volume Down
Two Switch	Switch 1+2	Backspace	F4	Left Click	F16	Next Track
	Switch 2+3	Escape	F5	Right Click	F17	Previous Track
	Switch 1+3	Enter	F1	Left Click	F13	Play/Pause
Three Switch	Switch 1+2+3	Enter	F1	Left Click	F13	Play/Pause

The operating mode can be changed by performing a long press (holding for longer than four seconds) on any connected switch.

Shrub Hub


QUICKSTART GUIDE

Setup

Single Switch Configuration



1-3 Switches

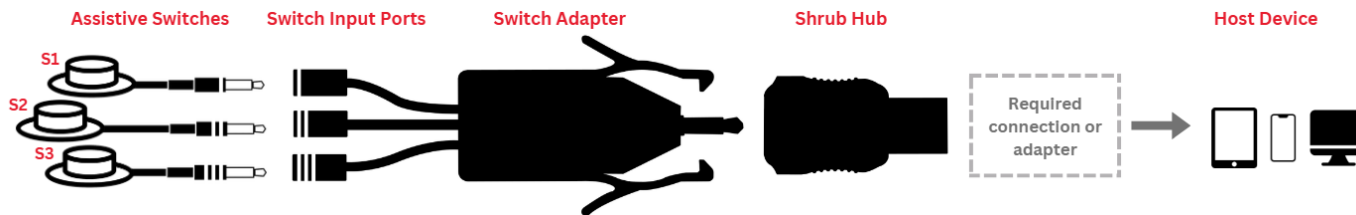

If the connected device does not have a USB-A port, an adapter will be needed. If used with an iOS device, it will need a separate power source as described in the iOS use section.

Further Information

If you are looking for information on troubleshooting, support, or any other questions, refer to the User Guide.



[User Guide](#)