
Dual Mono-Stereo Adapter **ASSEMBLY GUIDE**



Required Components

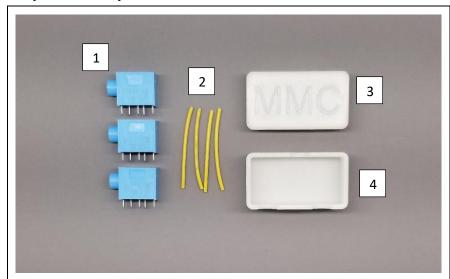

BOM

- 1. Three Stereo Jacks
- 2. Four 3 cm Wires
- 3. 3D Printed Bottom
- 4. 3D Printed Top

Required Tools

- Soldering Iron
- Solder
- Wire strippers
- Flush cutters

Required Personal Protective Equipment (PPE)

Safety Glasses


Dual Mono-Stereo Adapter **ASSEMBLY GUIDE**




Assembly Instructions

Step 1

Place the stereo Jacks in the bottom enclosure with their prongs facing outward. Ensure each jack is facing the correct direction, so the outlet lines up with the holes.

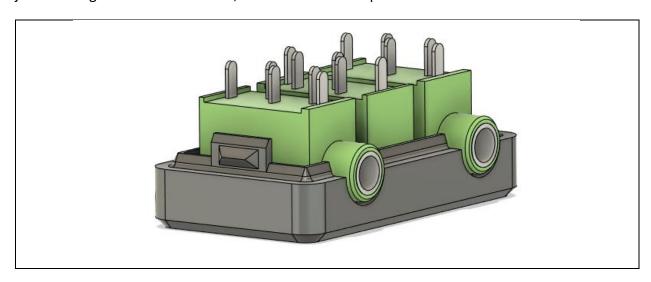

Step 2 Solder the wires into place according to the black wires shown in the image. Trim any excess wire with flush cutters.

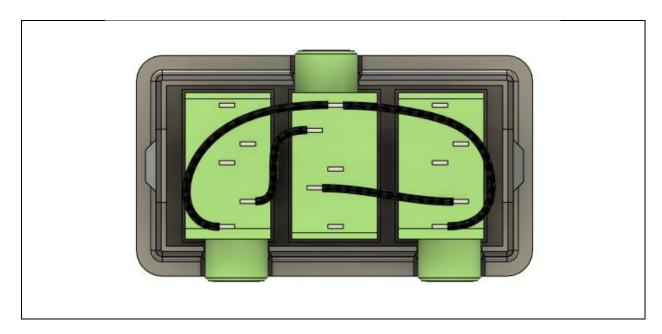

V1.0 | APRIL 2022

Dual Mono-Stereo Adapter **ASSEMBLY GUIDE**



Step 3

Snap the top enclosure onto the bottom enclosure. Ensure the holes line up with the jack outlets.

