

Switch Adapted Stack 'n Spin Monkey Gears

MAKER GUIDE

Required Components

1. 	2. 	BOM 1. Playskool Stack 'n Spin Monkey Gears Toy 2. Female/Male Mono Cable 3. Cable Tie 4. AA Batteries (x3) Refer to the Tool and Component List for purchasing details.
3. 	4. 	

Required Tools

- Flat head screwdriver
- Possibly a Triangle Screwdriver
- Wire strippers
- Soldering iron and solder
- No Clean Flux Paste
- Drill and 1/8" drill bit
- Glue Gun

Required Personal Protective Equipment (PPE)

- Safety glasses

Switch Adapted Stack 'n Spin Monkey Gears

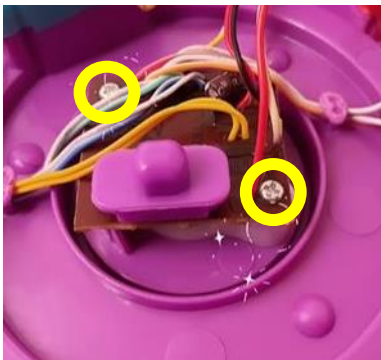
MAKER GUIDE

Assembly Instructions

1. Flip the toy over and remove the screws on the back panel. Place screws in a safe space for reassembly. Note: Some of the screws may be a TA Triangle Screw that can be removed with a Triangle Head Screwdriver	
2. Carefully lift and remove the back panel of the toy.	
3. With a 1/8 drill bit, drill a hole on the side of the back panel. Note: Ensure you are drilling in a spot that won't impact reassembly.	
4. Thread the female cable through the pre-drilled hole. Note: some cables come pre-wire stripped. If not please wire strip your cables.	

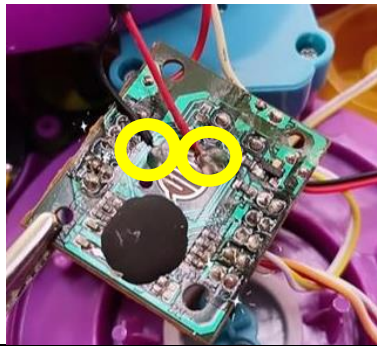
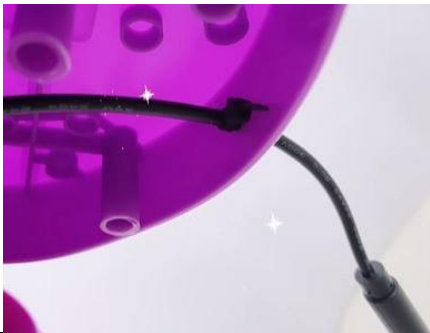
Switch Adapted Stack 'n Spin Monkey Gears

MAKER GUIDE

5. On the base of the toy find the circuit board and remove the two remaining screws and the pink power switch. Put the screws and switch in a safe space for reassembly.	
6. Turn the circuit board over. In the image you will see the button we will solder to by the circle on the image. There will be a silicone cover on it. Please remove. 7. Dab flux on the two contact points. Add a small globe of solder to the two spots.	
8. Tin each exposed end of wire with solder.	
9. Solder the two wires to either side of the button contacts. Note: colour does not matter to each spot.	

Switch Adapted Stack 'n Spin Monkey Gears

MAKER GUIDE

10. To help hold the connection add glue to the soldered points.	
11. Flip the circuit board right side up. Reinstall the two screws and the power switch.	
12. Add a small zip tie to the female cable to prevent it from being pulled out.	
13. Reassemble the screws.	
14. Test Toy!	