
Foot Pedal Switch ASSEMBLY GUIDE



Required Components

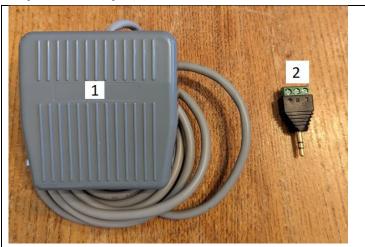

BOM

- 1. Foot Pedal
- 2. Terminal Jack

Required Tools

- Wire stripper
- Screwdriver


Foot Pedal Switch ASSEMBLY GUIDE



Assembly Instructions

Step 1

Strip 1 cm from the end of the pedal wire. Strip 1cm from the white and red wire as well; leave the black wire unstripped.

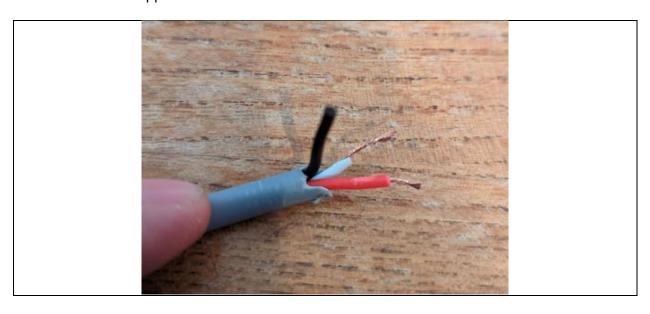

Step 2

Connect the white wire to the ground terminal on the jack, and the red wire to the L terminal on the jack. This creates a switch that is activated when the pedal is pressed. Connecting the black wire to the L terminal instead creates a switch that is always active, and is deactivated when the switch is pressed.

