
Foot Pedal Switch ASSEMBLY GUIDE



Required Components

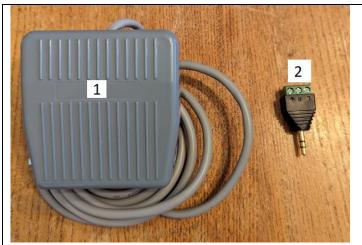

BOM

- 1. Foot Pedal
- 2. Terminal Jack

Required Tools

- Wire stripper
- Screwdriver


Foot Pedal Switch ASSEMBLY GUIDE



Assembly Instructions

Step 1

Strip 1 cm from the end of the pedal wire. Strip 1cm from the white and red wire as well; leave the black wire unstripped.

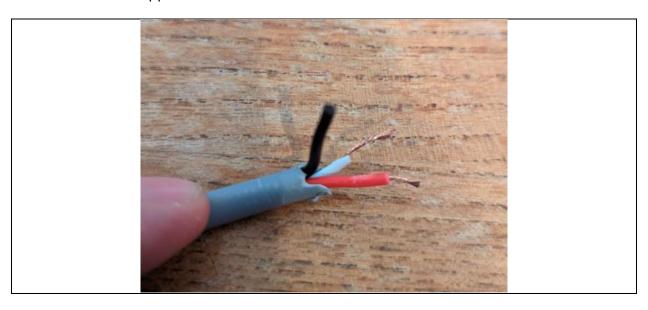

Step 2

Connect the white wire to the ground terminal on the jack, and the red wire to the L terminal on the jack. This creates a switch that is activated when the pedal is pressed. Connecting the black wire to the L terminal instead creates a switch that is always active, and is deactivated when the switch is pressed.



V1.0 | February 2023

Foot Pedal Switch ASSEMBLY GUIDE



Step 3 (Optional)

If using the bracket, remove the two screws and the four rubber feet on the bottom of the switch. The rubber feet can be removed by pulling, they are only held in place by an adhesive. Fit the bracket in place with the counterbored screw holes facing away from the switch, matching the orientation of the screws. Replace the two screws removed earlier, fastening the bracket in place. The bracket can now be screwed to a surface to hold the switch in place.