


Required Components

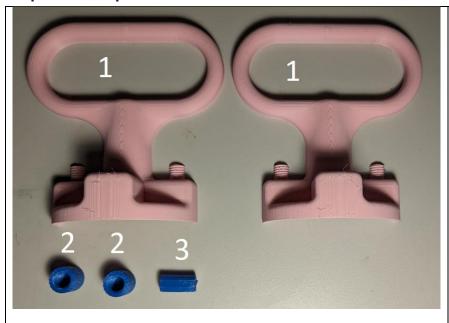

BOM

- 1. Handle X2
- 2. Knob X2
- 3. Pin

Required Tools

Pliers


Required Personal Protective Equipment (PPE)

• Eye protection



Assembly Instructions

Step 1
Insert the octagonal pin into matching slot on one side of the handle.

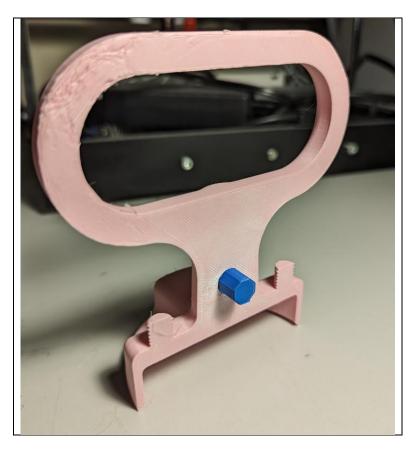



Step 2 Align the octagonal hole on the second handle with the pin and press them together.





Step 3

Screw the knobs onto the threads on the handle. You may need to twist the handle slightly to align the threads. The knob will be tight, and a pair of pliers can be used to fully tighten them.

