



1 The parts you'll need

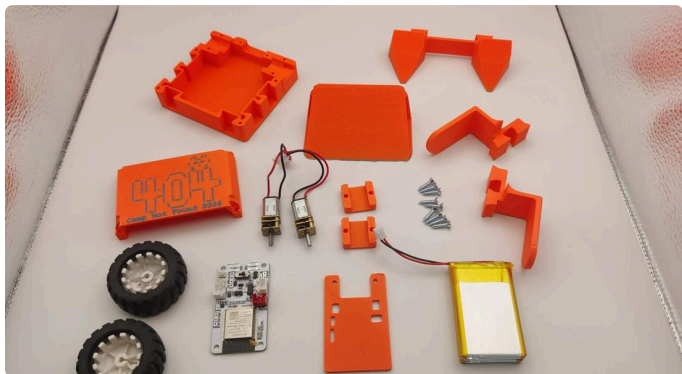


Gather all of the robot's parts and check you have everything before you start.

2 Solder wires to the motors

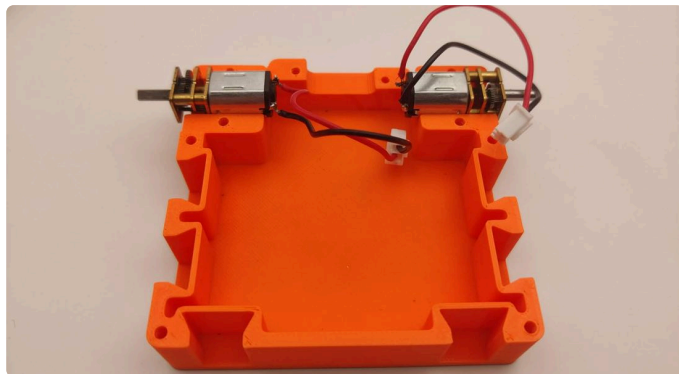


Solder the wires to both motors, then fit the motors into place. • + terminal = red wire.

3 Screw down the motor mounts

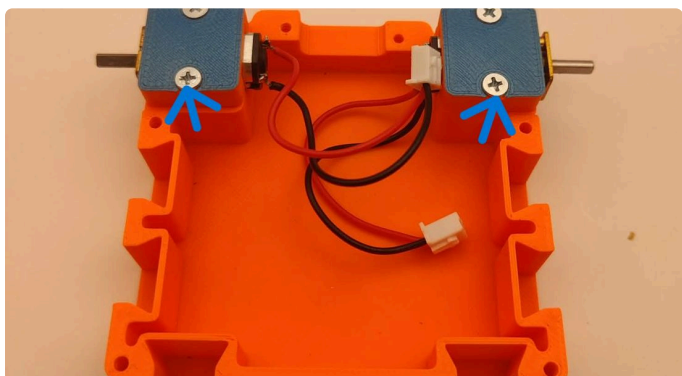


Fix the motor mounts in place with four wood screws.

4 Fit the wheels

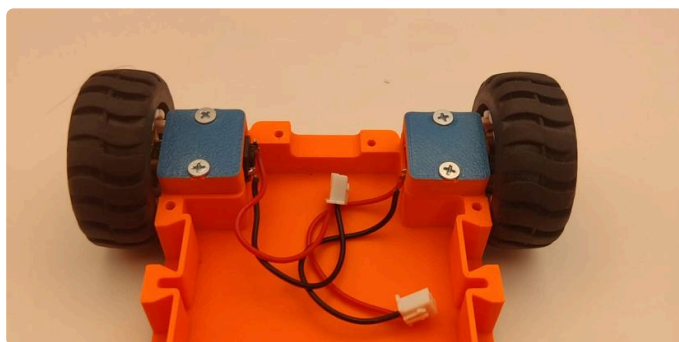


Push the wheels onto the motor shafts. • Mind the D-shaped shaft — the wheel only goes on one way.

5 Insert the side walls

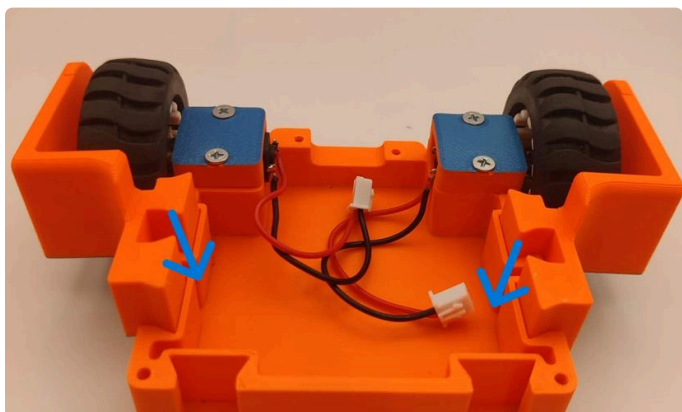


Slot the side walls into the chassis.

6 Choose and fit the front

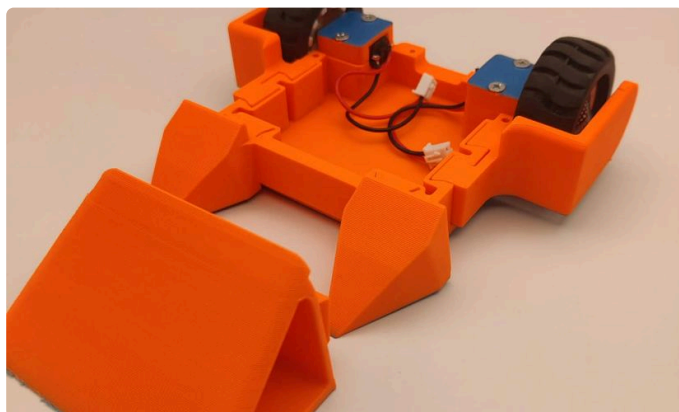


Pick the front you want to use and fit it.

7 Insert the battery

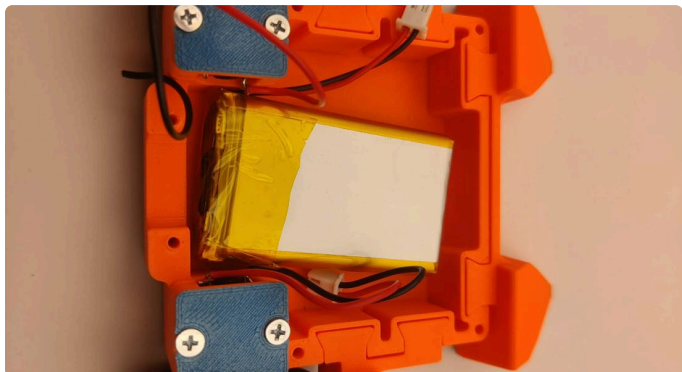


Place the battery into its slot. • Mind which way the wire faces.

8 Add the controller mount

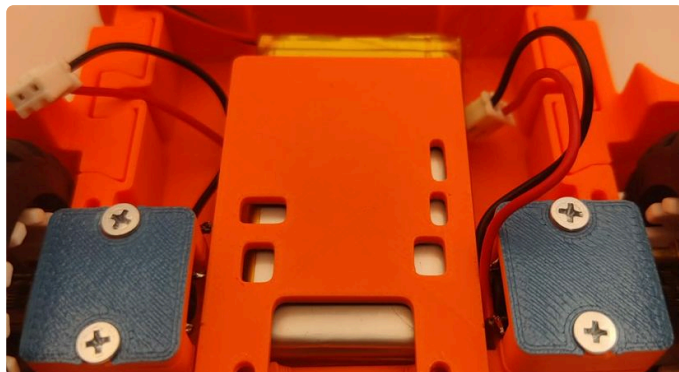


Place the controller mount onto the chassis. • Mind the layout of the holes.

9 Fit and screw the controller

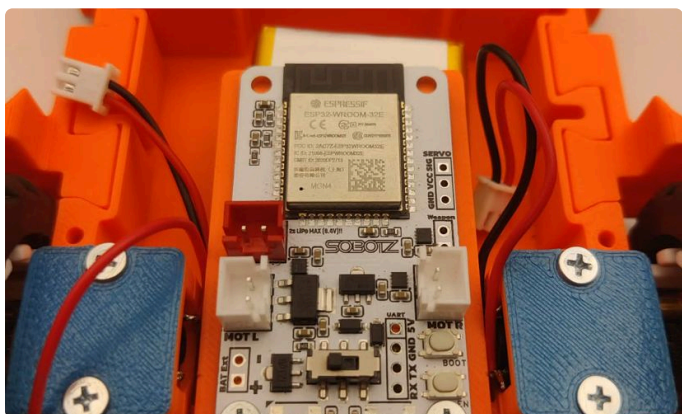


Place the motor controller and screw it down.

10 Connect the battery

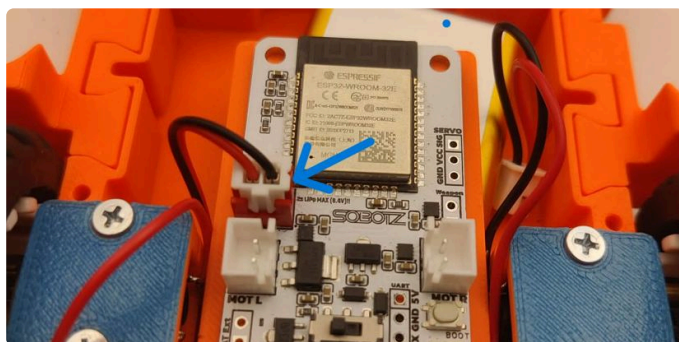


Connect the battery to the controller's red connector. **⚠ IMPORTANT: do NOT connect it to the white motor connectors!**

11 Connect the motors

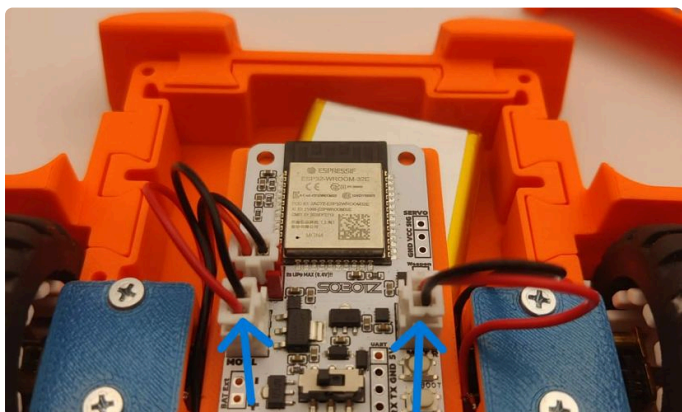

Connect the motors to the white connectors.

12 Your robot is built!

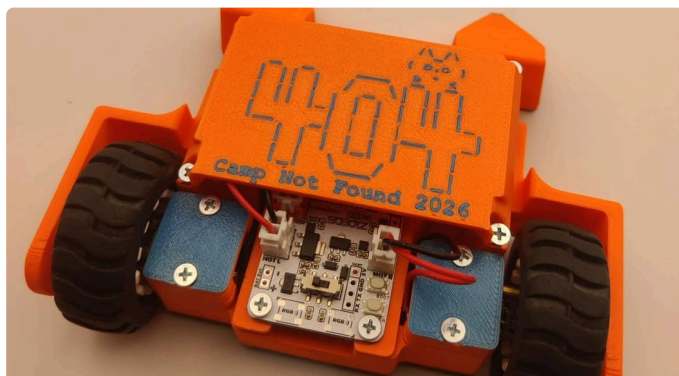

Congratulations! Now just upload the control code and go into battle!