


OOMWOO front ToF board
- One design, fitted twice: left and right, each aimed ~30 deg off centre.
- Refs in the 2000s: each board has its own range.
- Use a same-direction (pin 1 - pin 1) SH 7-pin cable
- No mounting holes: the board slides into a holder by its long edges.
  Keep about 1 mm along both long edges free of parts.

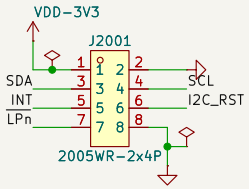

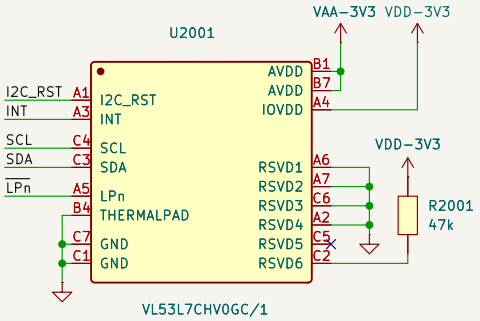

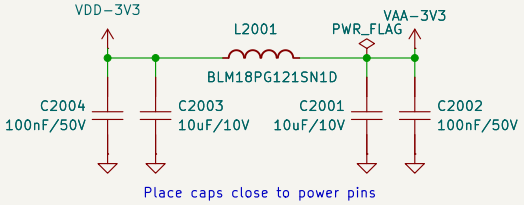

Place caps close to power pins

OOMWOO front sensors		
Sheet: /		
File: Front Sensor.kicad_sch		
Title: Front ToF sensor board (fit 2x)		
Size: USLetter	Date: 2026-10-27	**Rev: 2**
KiCad E.D.A. 10.0.4		Id: 1/1