The first 1 chapter Custom Keyboard Application System

version: V1.1 .

1.1 Outline

As users use different art images, we built the system keyboard will not be a perfect match for graphic user, or built-in keyboard is too small, inappropriate application of the current project; we will launch a new version of the custom keyboard system, according to their own user-friendly graphic pictures the corresponding adjustment system keyboard, and the application of special symbols.

1.1.1. Shortcoming

Custom full keyboard can not be used Chinese Pinyin input method.

1.2 operating

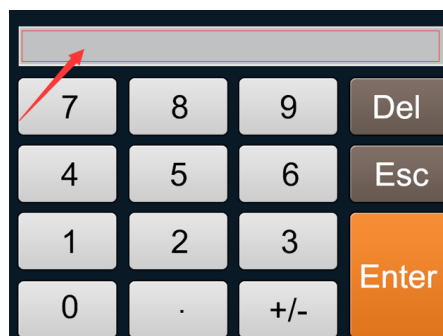### 1.2.1. Ready to art pictures

Picture System is ready to use the keyboard, press pictures and images bounce

Map 1.1 Down and up the corresponding picture

1.2.2 Keyboard Configuration

In engineering the new screen, place a picture, the picture placed in the upper left corner coordinates (0,0) As a starting point, place the picture of a good bounce, as shown by the arrow, place a text control, control to a custom keyboard input

Map 1.2 Placing text controls

Then 0 Placing a button position, the button attribute to customize the key, the key is set to 0 , Various other keys sequentially arranged.

Note: The placement of the buttons on the keyboard, you must press down a unified set of image formats must be consistent, otherwise you will not be able to use the keyboard press down effect.
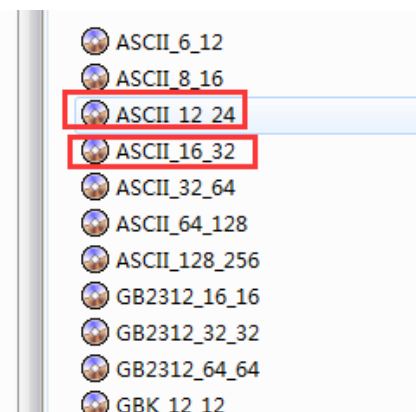
1.2.3 Font keyboard use

Font definition provided from the keyboard, the keyboard input is not a character key pop-up display, if desired font corresponding to the pop-up keyboard is a keyboard provided custom font, font modification of the system keyboard.

Because the system keyboard 2 Number and 6 number 24 * 24 Font size (ASCII character and GBK character), if desired, the corresponding keyboard system requires more font must be 2 and 6 alternative font, font No. 2, the ASCII character, font, or 6 GBK GB2312, if the keyboard is not **Chinese character needed, the need to replace fonts 6, FIG. 1.3 Fig.**

Map 1.3 The system font keyboard

The easiest alternative method, using the font name of font character swapping, such as font name was changed to 16 * 32 12 * 24 font name, font name modified 12 * 24 16 * 32 character name
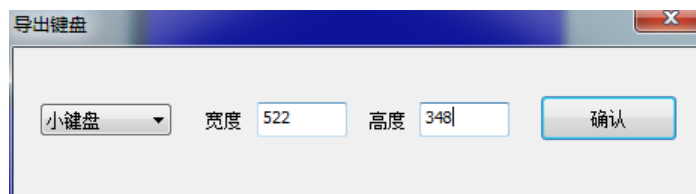

Map 1.4 Font name to change

After modification, the production wizard, download a font.

Note: Custom font, you can refer to our official website columns from the data. " How to achieve any font on-screen display serial V2.0 . "

1.2.4 Export System Keyboard

Click software tool, select Export keyboard, keyboard width is set with the placement of the picture resolution is consistent, then click OK.
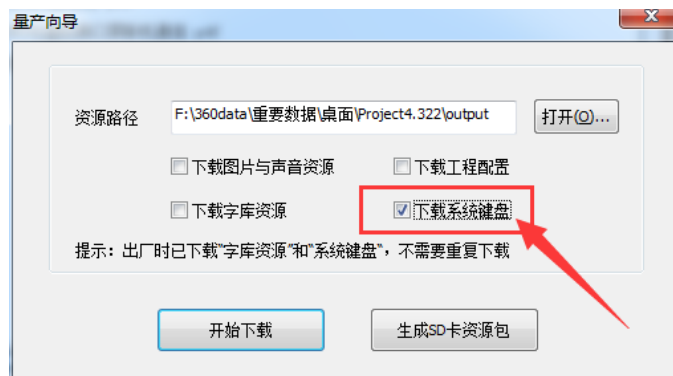

Map 1.5 Export Keyboard

Note: If the software version does not support this feature, go to our official website updated software www.gz-dc.com .

1.2.5 Keyboard transplant

1 . After exporting keyboard, through the production wizard software, download the system keyboard.

Map 1.6 Download System Keyboard

2 . After corresponding the project opens, the keyboard is just generated keyboard, other projects such as the need to correspond to this keyboard, you can not just set by the method to generate; this can be a direct copy of the project file " keyboard0 "" keyboard1 "And the corresponding keyboard clip art images to other projects.
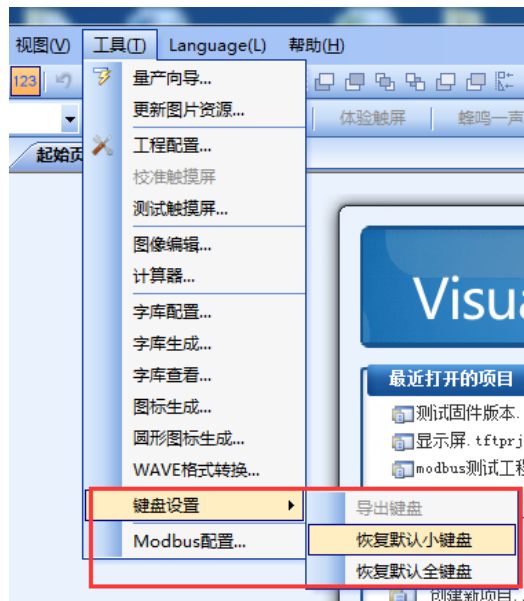
3 . correspond keyboard0 Is a system keypad, keyboard1 System-wide keyboard.

4 . After the design is good keypad, you need to design a full keyboard, if you want to retain the original full keyboard, refer to 1.2.6 Section explains.

1.2.6 System recovery software that comes with the keyboard

If the new keyboard is not satisfied, the need to replace the system comes back to the original keyboard, just delete the files under the project directory keyboard0 , keyboard1 And then download through the wizard once mass production system keyboard. Or via software tool keyboard settings directly restore full keyboard or keypad, and then download a system keyboard.

Map 1.7 Recovery keyboard

1.3 Notices and Services

Thank you for choosing large color products, if you have any objections or questions about documentation, please feel free to get in touch with us.

phone: 020-82186683-601 , Emial: hmi@gz-dc.com . Of course, if the document has any error or misunderstanding, welcome comments and suggestions to us,

we will promptly correct and improve.