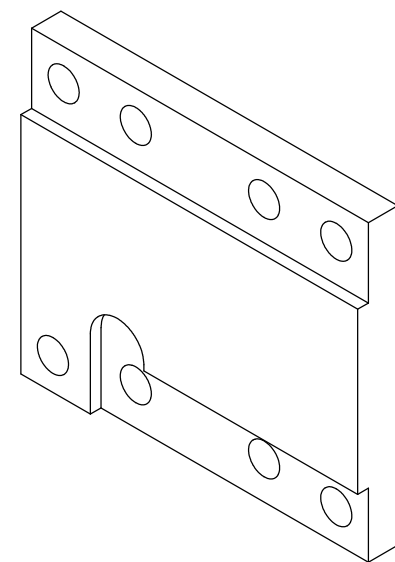
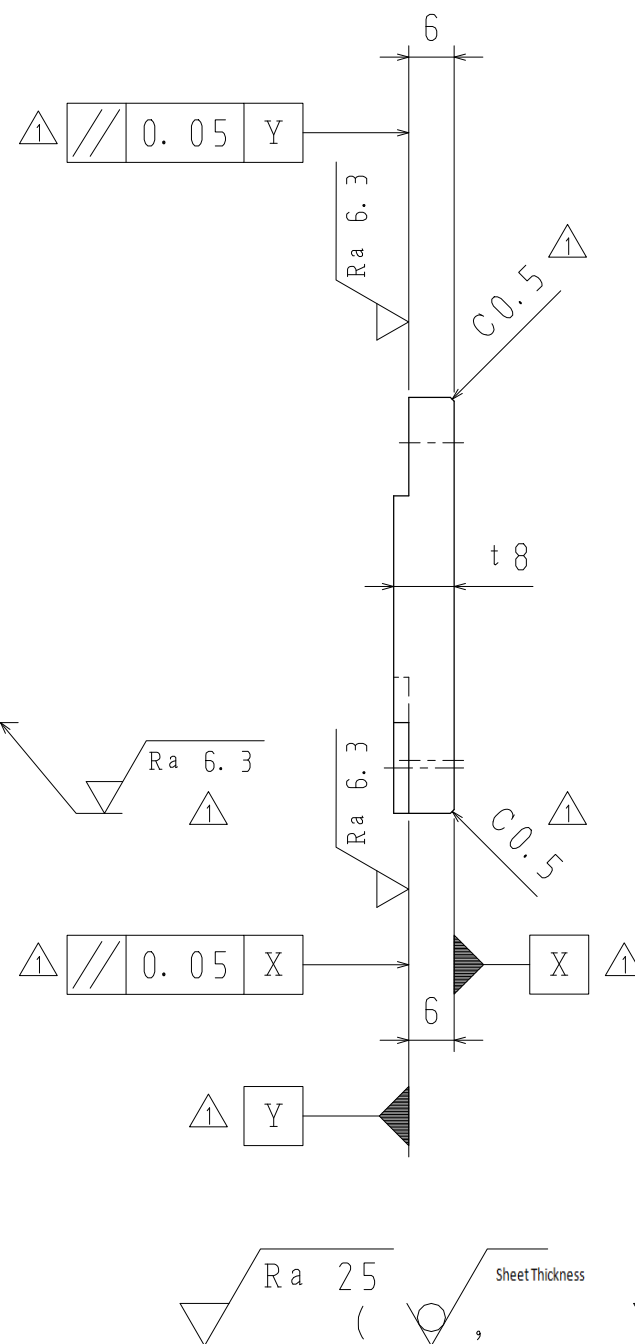


PM853C

Instruction

1. Use Cold Materials
2. Chamfer corners unless otherwise specified
3. Use R0.3 for corners unless otherwise specified
4. Clean and Degrease before delivery

[illegible]