




Buttons 7-13 are pressed when remote is off

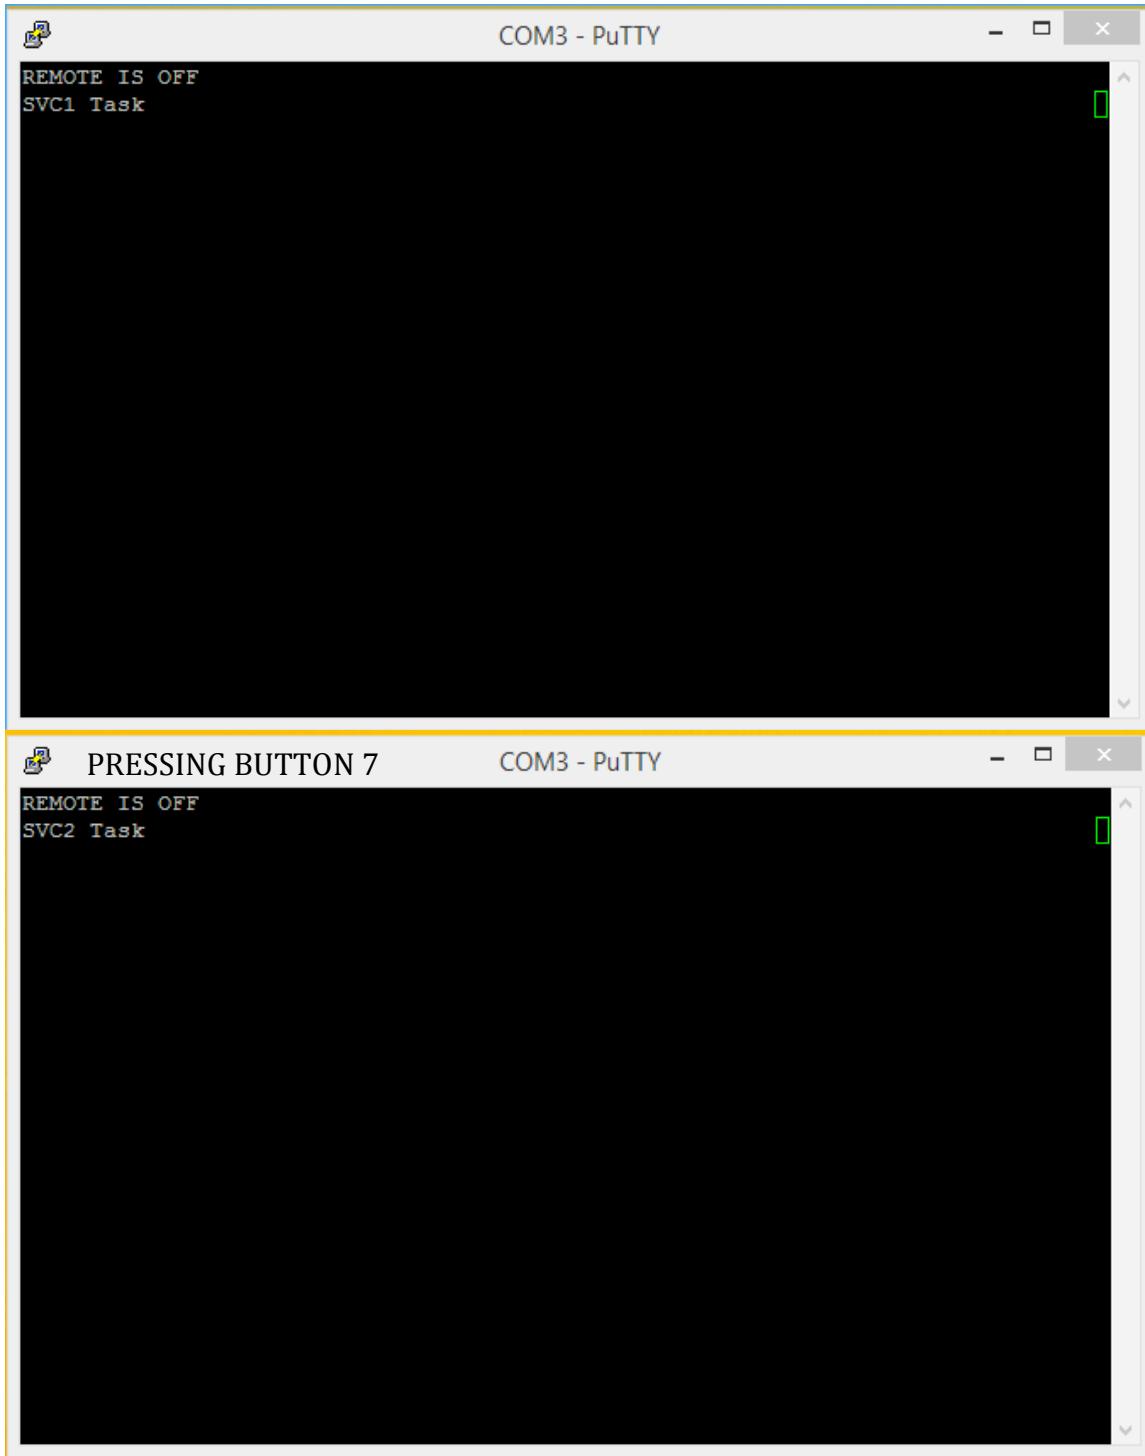

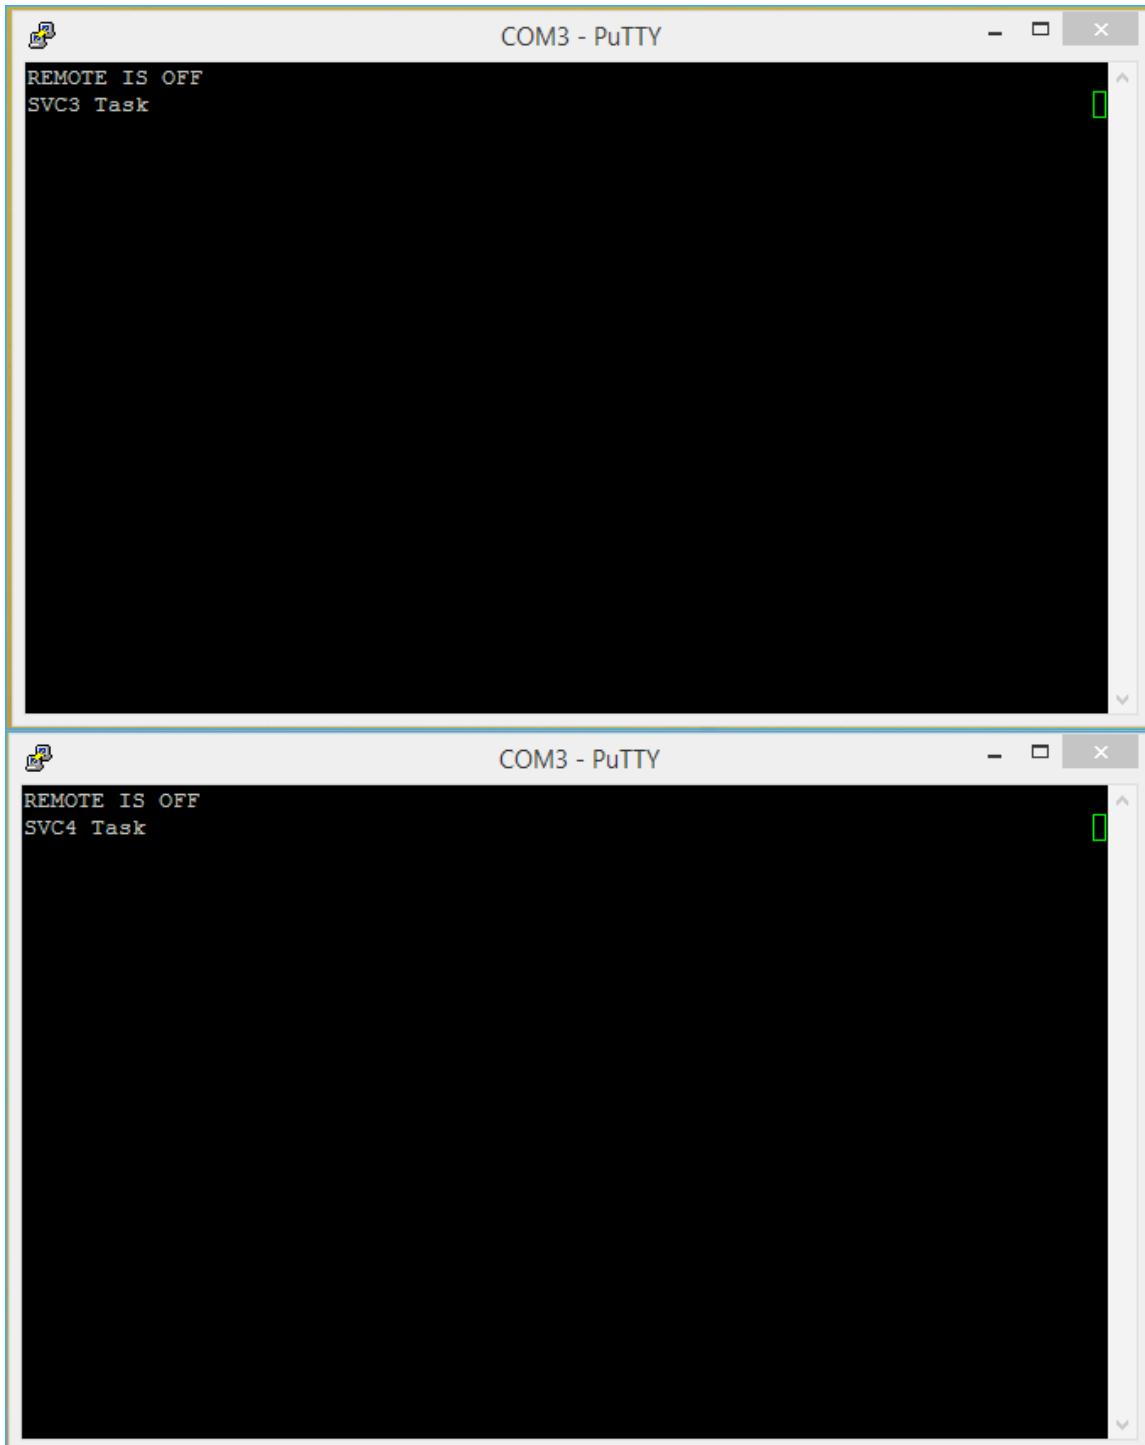

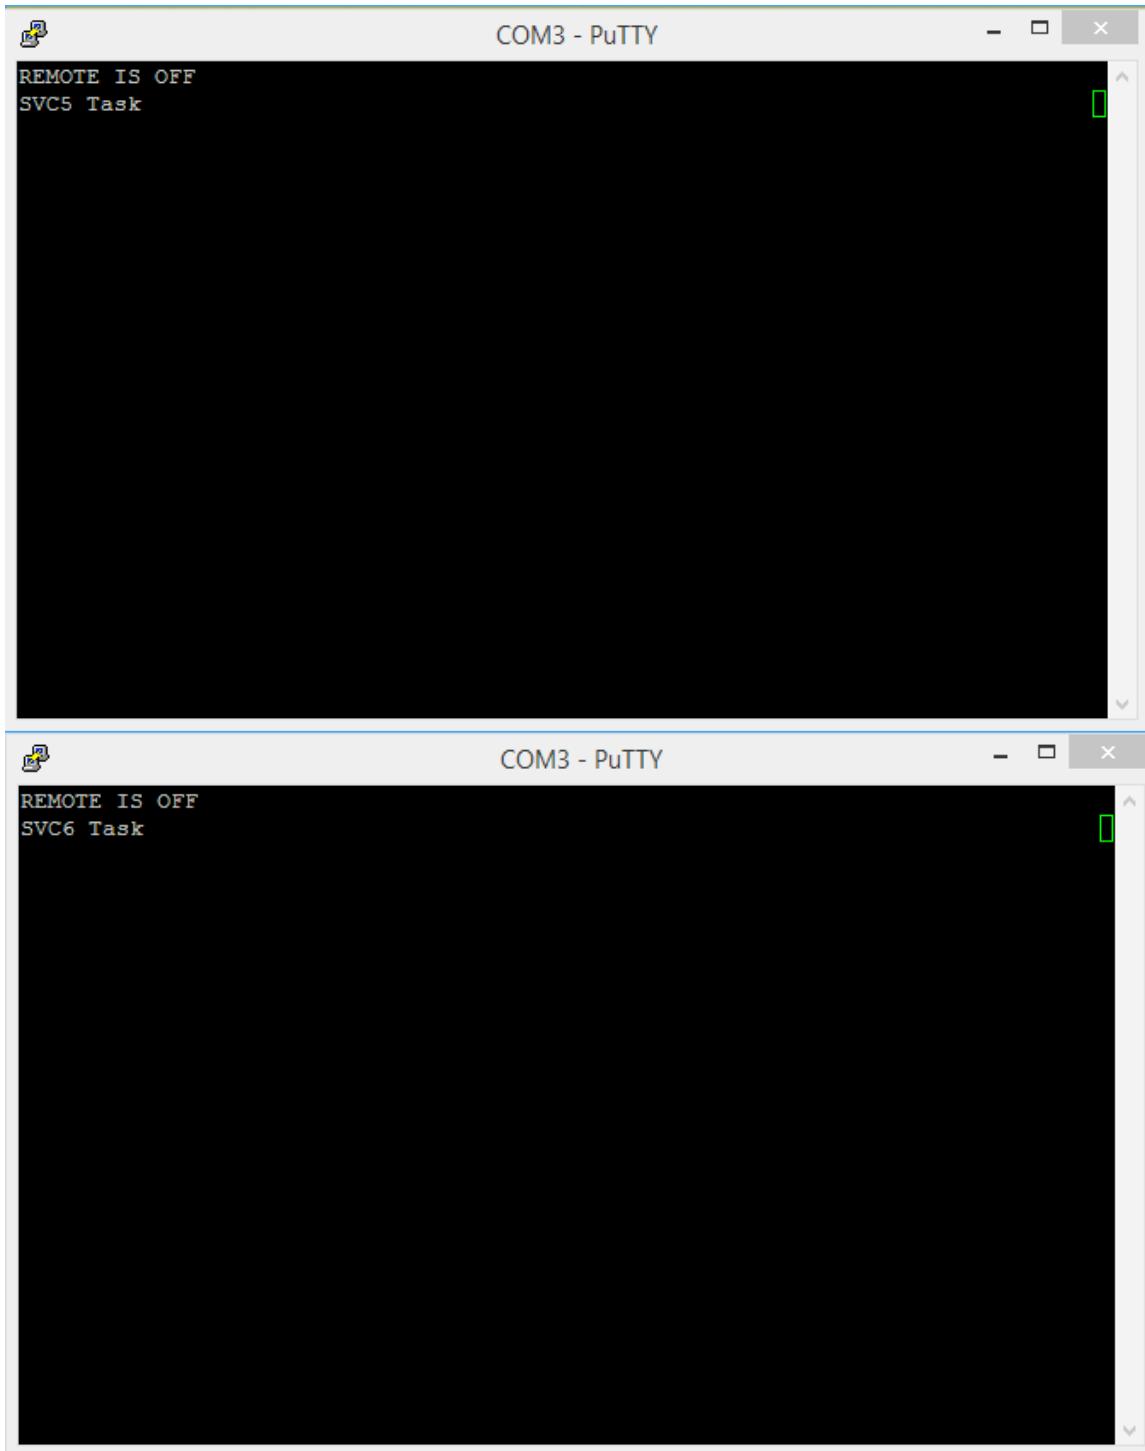

Commands: 'adcon ','adcoff ','adccal ','done '

The image displays two separate PuTTY windows, both titled "COM3 - PuTTY".


The top window shows the following text:

```
adcon --->ADC Mode ON
adcoff --->ADC Mode OFF
[green square]
```


The bottom window shows the following text:

```
REMOTE IS ON
adccal --->TURN CLOCKWISE TO CALIBRATE
done --->DONE CALIBRATING
[green square]
```


When remote is on... input:'123456'

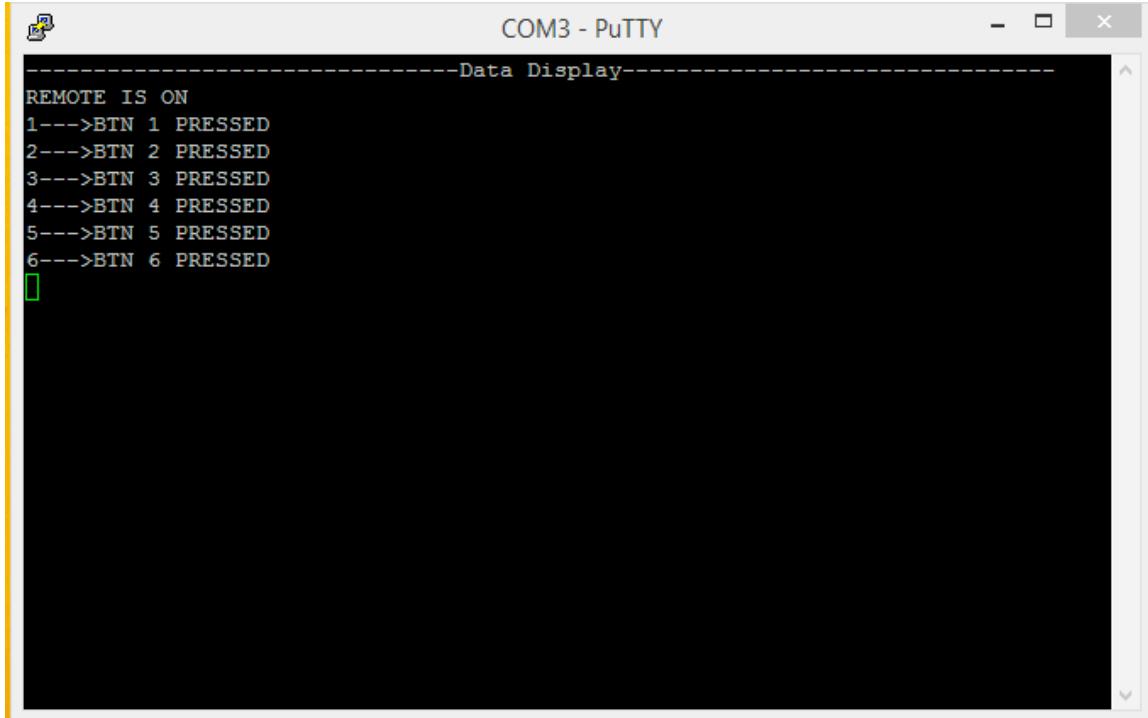


```
REMOTE IS ON
1--->BTN 1 PRESSED
2--->BTN 2 PRESSED
3--->BTN 3 PRESSED
4--->BTN 4 PRESSED
5--->BTN 5 PRESSED
6--->BTN 6 PRESSED
```

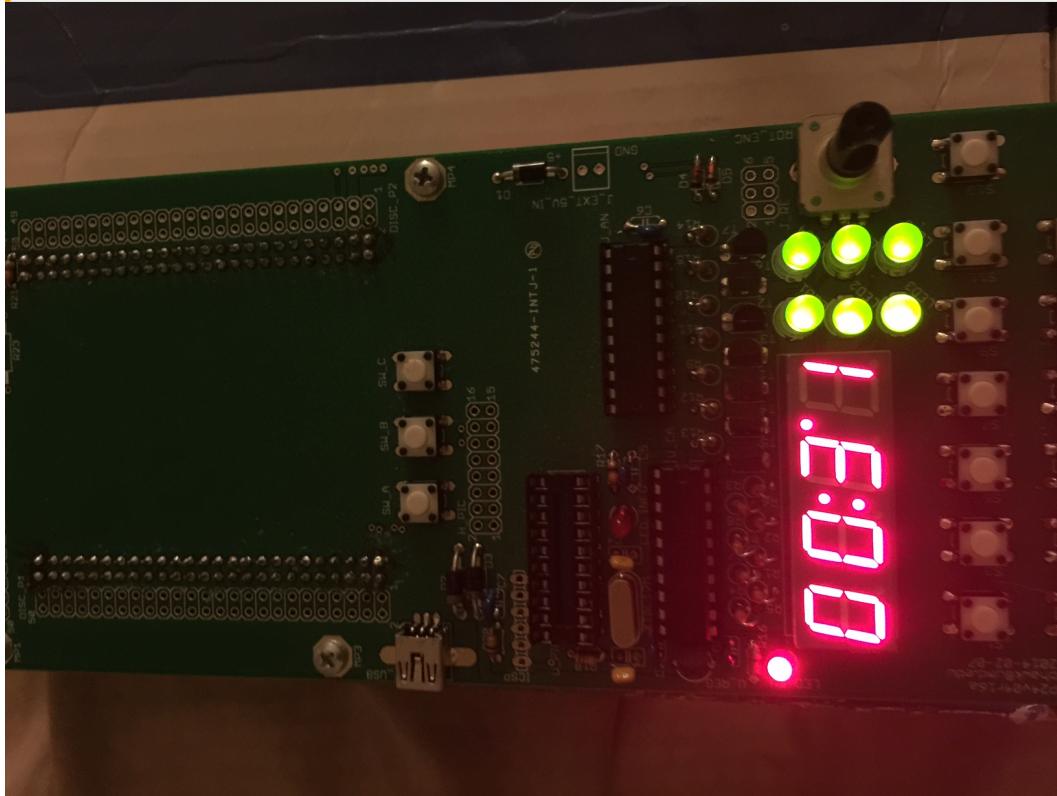

When remote is on... input:'123456246'

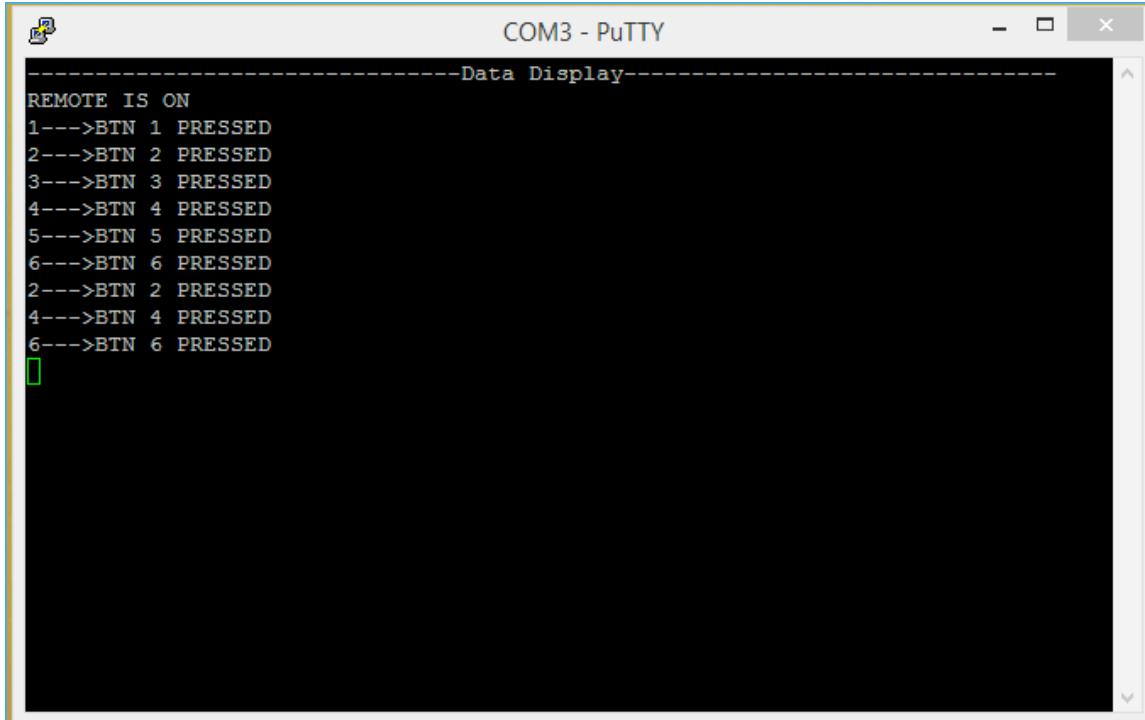


```
COM3 - PuTTY
Data Display
REMOTE IS ON
1--->BTN 1 PRESSED
2--->BTN 2 PRESSED
3--->BTN 3 PRESSED
4--->BTN 4 PRESSED
5--->BTN 5 PRESSED
6--->BTN 6 PRESSED
2--->BTN 2 PRESSED
4--->BTN 4 PRESSED
6--->BTN 6 PRESSED
```

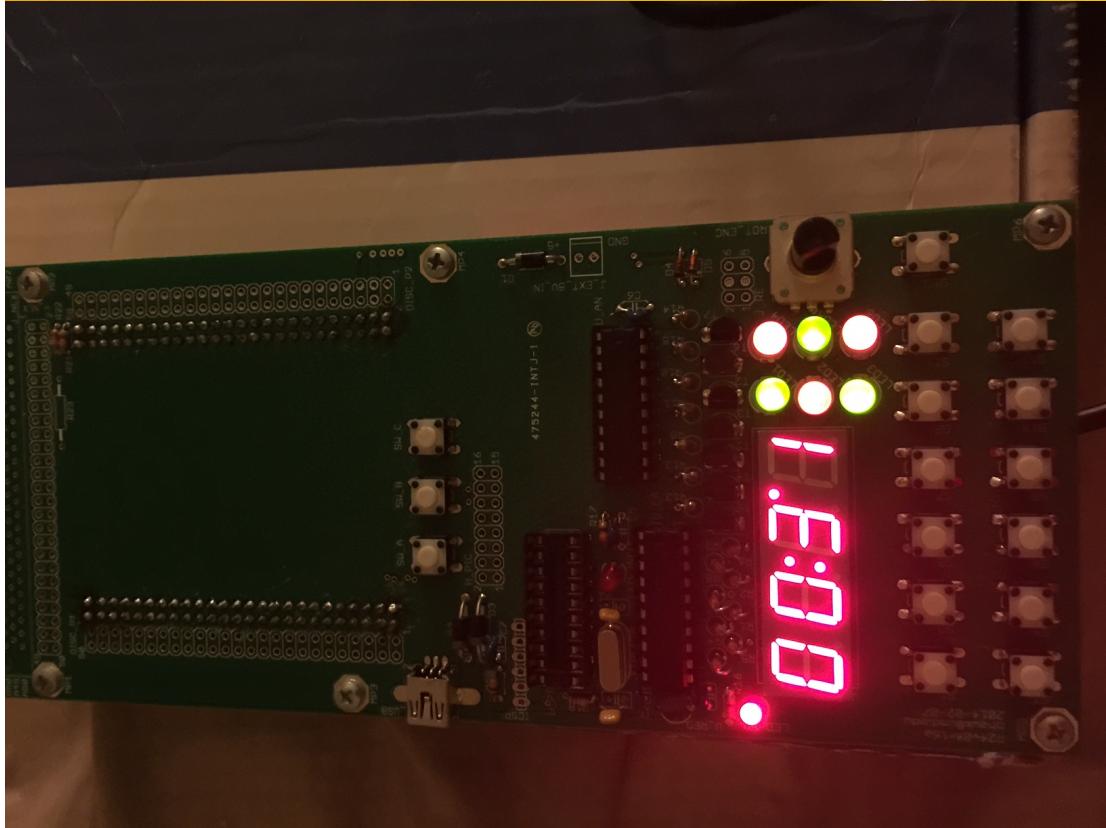


When remote is on... input:'123456246135'

```
COM3 - PuTTY
Data Display
REMOTE IS ON
1--->BTN 1 PRESSED
2--->BTN 2 PRESSED
3--->BTN 3 PRESSED
4--->BTN 4 PRESSED
5--->BTN 5 PRESSED
6--->BTN 6 PRESSED
2--->BTN 2 PRESSED
4--->BTN 4 PRESSED
6--->BTN 6 PRESSED
1--->BTN 1 PRESSED
3--->BTN 3 PRESSED
5--->BTN 5 PRESSED
[
```

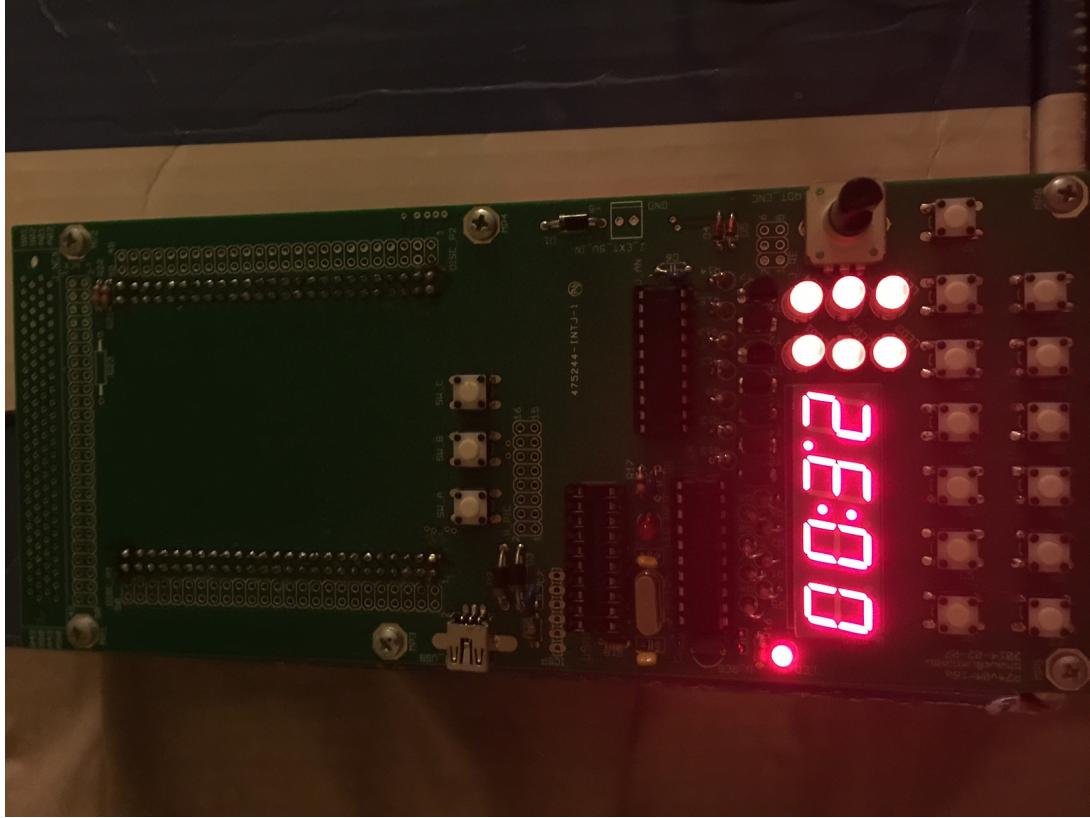

When remote is on... input:'123456246135654321'

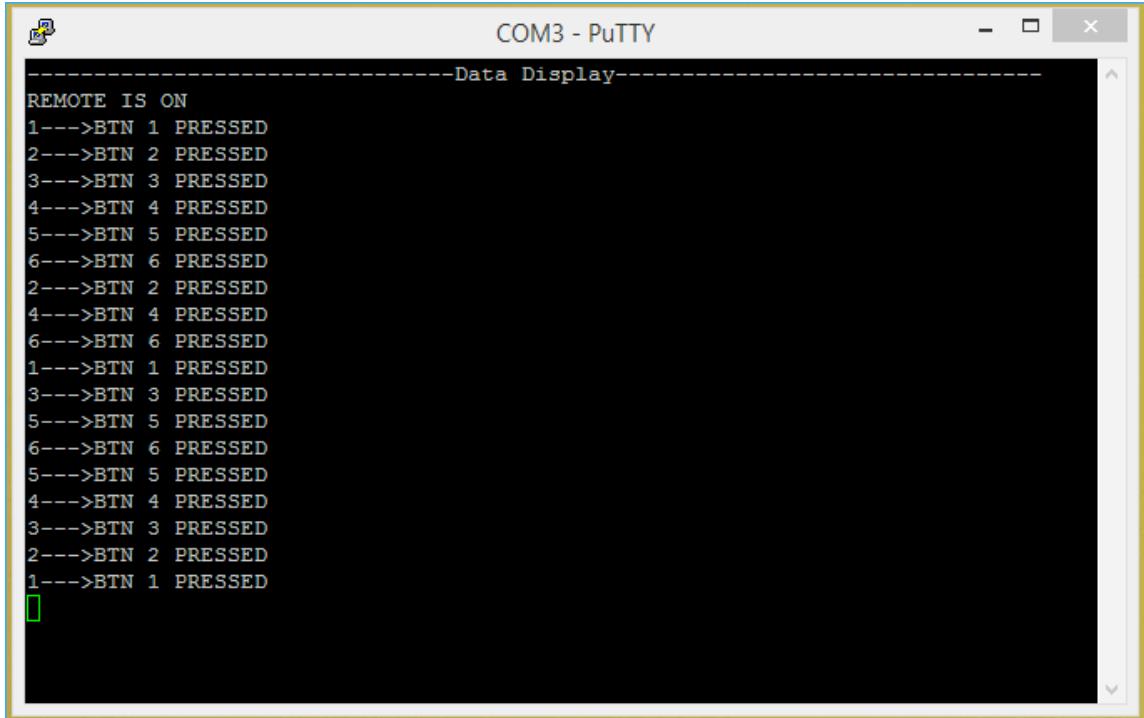

```
COM3 - PuTTY
-----Data Display-----
REMOTE IS ON
1--->BTN 1 PRESSED
2--->BTN 2 PRESSED
3--->BTN 3 PRESSED
4--->BTN 4 PRESSED
5--->BTN 5 PRESSED
6--->BTN 6 PRESSED
2--->BTN 2 PRESSED
4--->BTN 4 PRESSED
6--->BTN 6 PRESSED
1--->BTN 1 PRESSED
3--->BTN 3 PRESSED
5--->BTN 5 PRESSED
6--->BTN 6 PRESSED
5--->BTN 5 PRESSED
4--->BTN 4 PRESSED
3--->BTN 3 PRESSED
2--->BTN 2 PRESSED
1--->BTN 1 PRESSED
```

