OCOTE WORKS

OW-02 · YAMAHA TÉNÉRÉ 700 · 2019–2023


INSTALLATION GUIDE

Tail Rack T7

INCLUDES OW-02 rack + 4 new bolts

TOOLS Allen keys

PRELIMINARY GUIDE

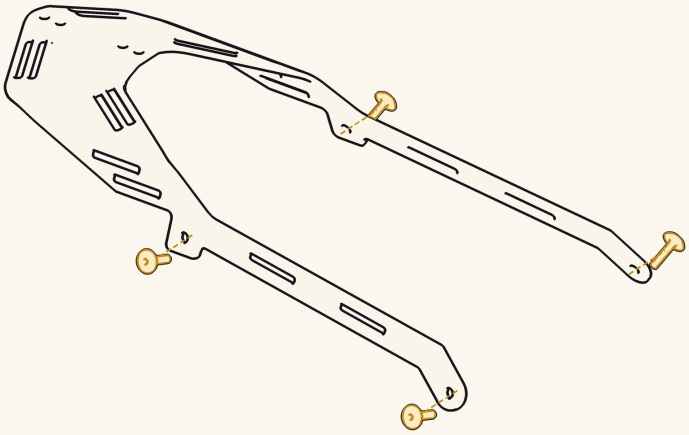

EXPLODED VIEW: 4 NEW BOLTS, 2 PER SIDE

01 PREP THE BIKE

On flat, stable ground, switched off, with the engine cold.

02 REMOVE THE FACTORY BOLTS

With an Allen key, remove the 4 bolts from the mounting points Yamaha left for a rack: two on each side. Keep them in case you ever take the rack off.

03 OFFER UP THE RACK

Set it on the tail and line up its 4 holes with the mounting points.

04 FIT THE NEW BOLTS


Thread the 4 kit bolts in by hand, without tightening, so the rack settles on its own.

05 TIGHTEN IN A CROSS PATTERN

Follow the 1 → 4 order in the drawing. Tighten firmly and check there's no play.

06 CHECK AT 100 KM

Re-check the bolts after the first 100 km and every so often, especially after dirt roads.

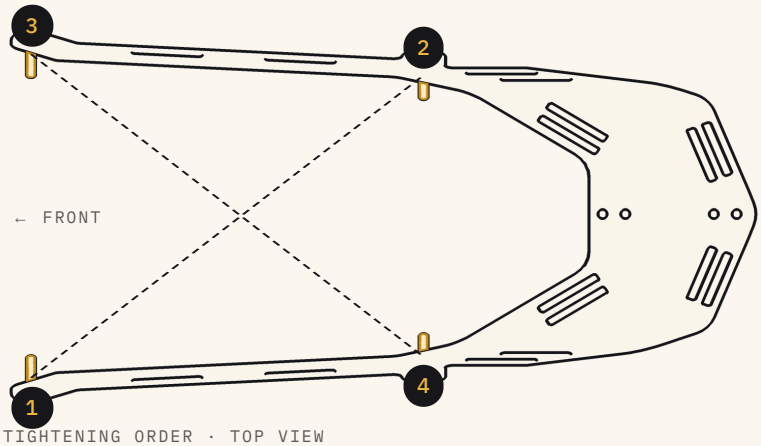

TIGHTENING ORDER · TOP VIEW

Preliminary guide. Torque values and final details will be published with the first batch. Images and 3D model: from the CAD model. Ténéré 700 is a registered trademark of Yamaha Motor Co., Ltd. OcoteWorks is not affiliated with Yamaha; the name is used only to indicate fitment.

ocoteworks.com · hola@ocoteworks.com