

## Neck




## Middle

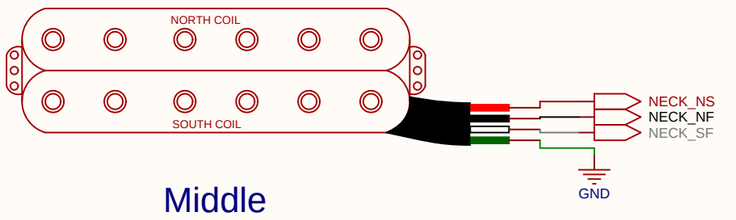



## Bridge

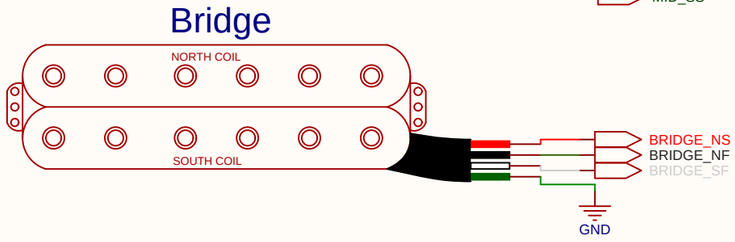





Pickup is active
If humbucker: internally wired in series



Humbucker wired in parallel




Pickup is out-of-phase





Single Coil Simulation engaged

## Superswitch

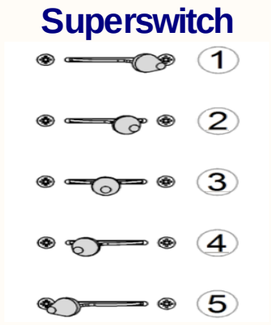


## Ultraswitch

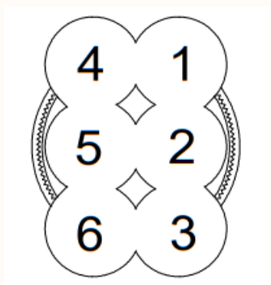


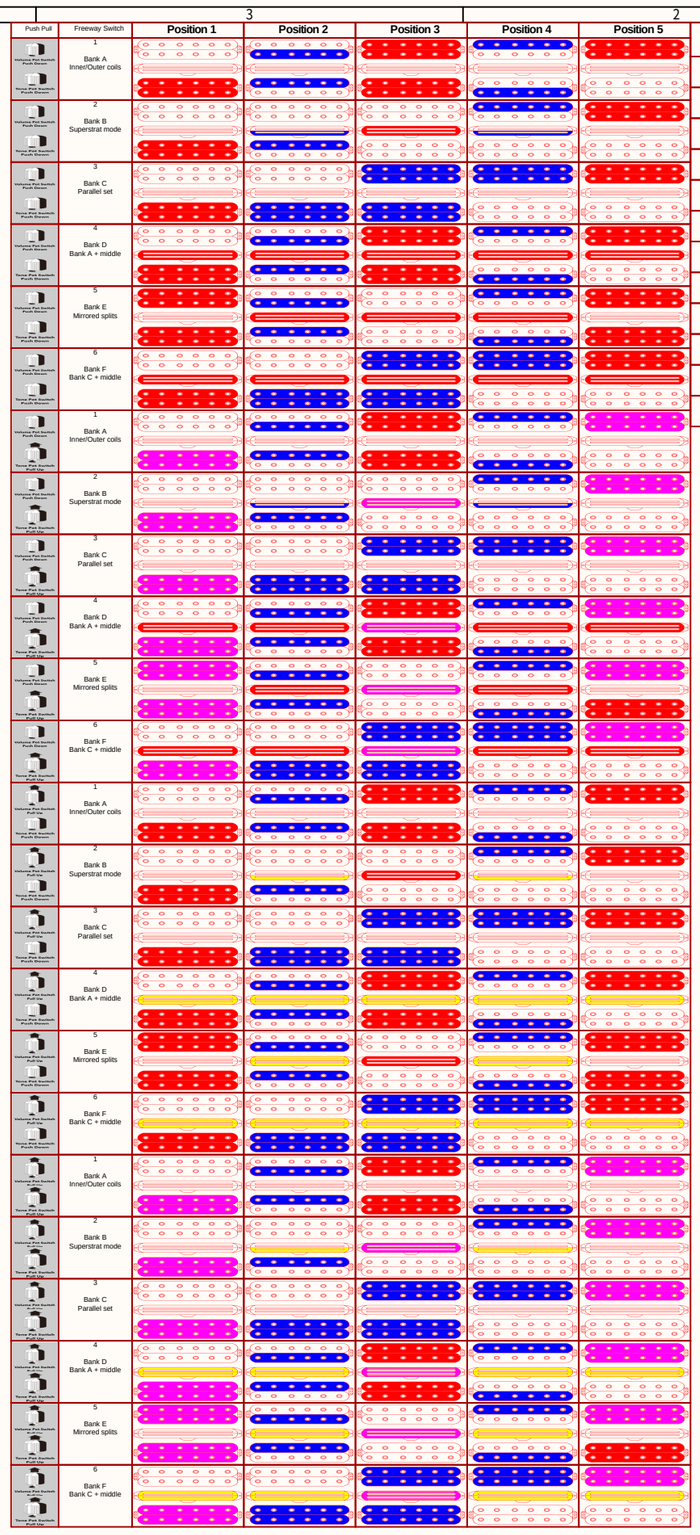
Bill of Materials

| Item | Quantity |
|---|---|
| 5-Way 6-Pole AxLabs Superswitch | 1 |
| 6-Way Dual-Axis Freeway Ultraswitch | 1 |
| A500K Push/Pull Potentiometer | 2 |
| 12-Pin ON ON Toggle Switch | 1 |
| 2-Pin Momentary Switch | 1 |
| Output Jack | 1 |
| 150 kΩ Resistor | 1 |
| 1.5 kΩ Resistor | 1 |
| 680 pF Capacitor | 1 |
| 33 nF Capacitor | 1 |
| 100 nF Capacitor | 2 |

# Superswitch

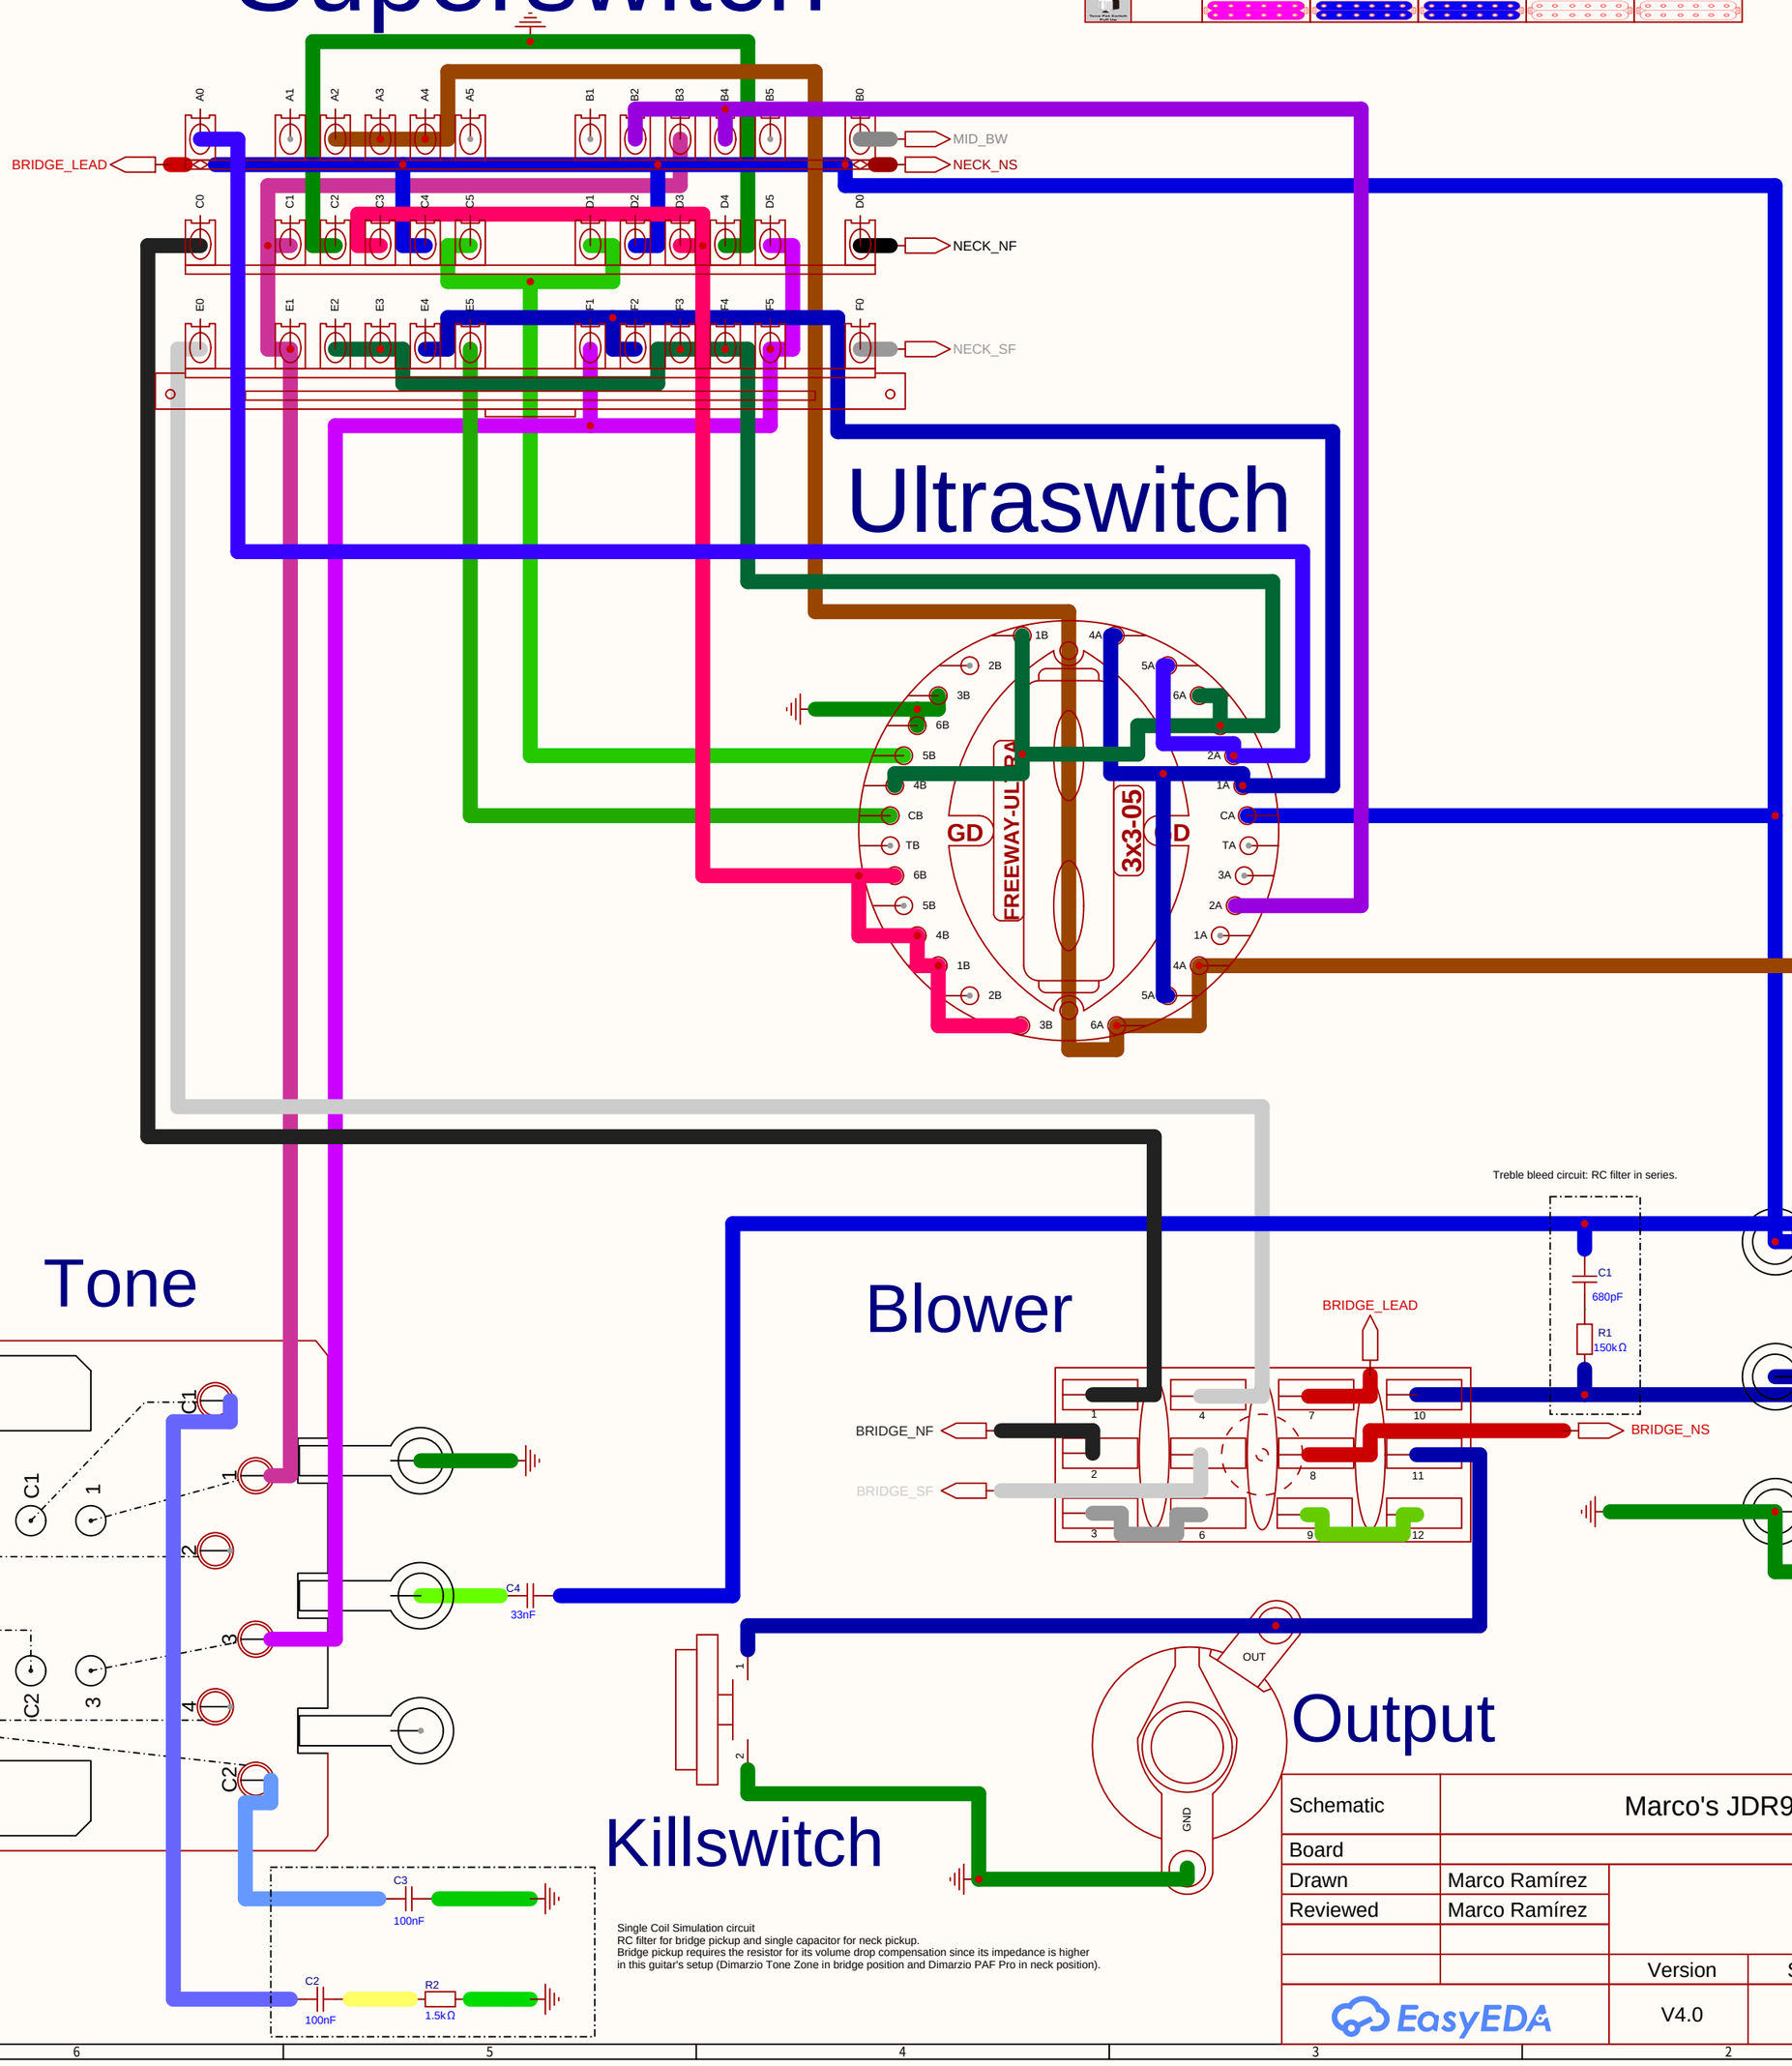



# Ultraswitch




# Volume




# Tone

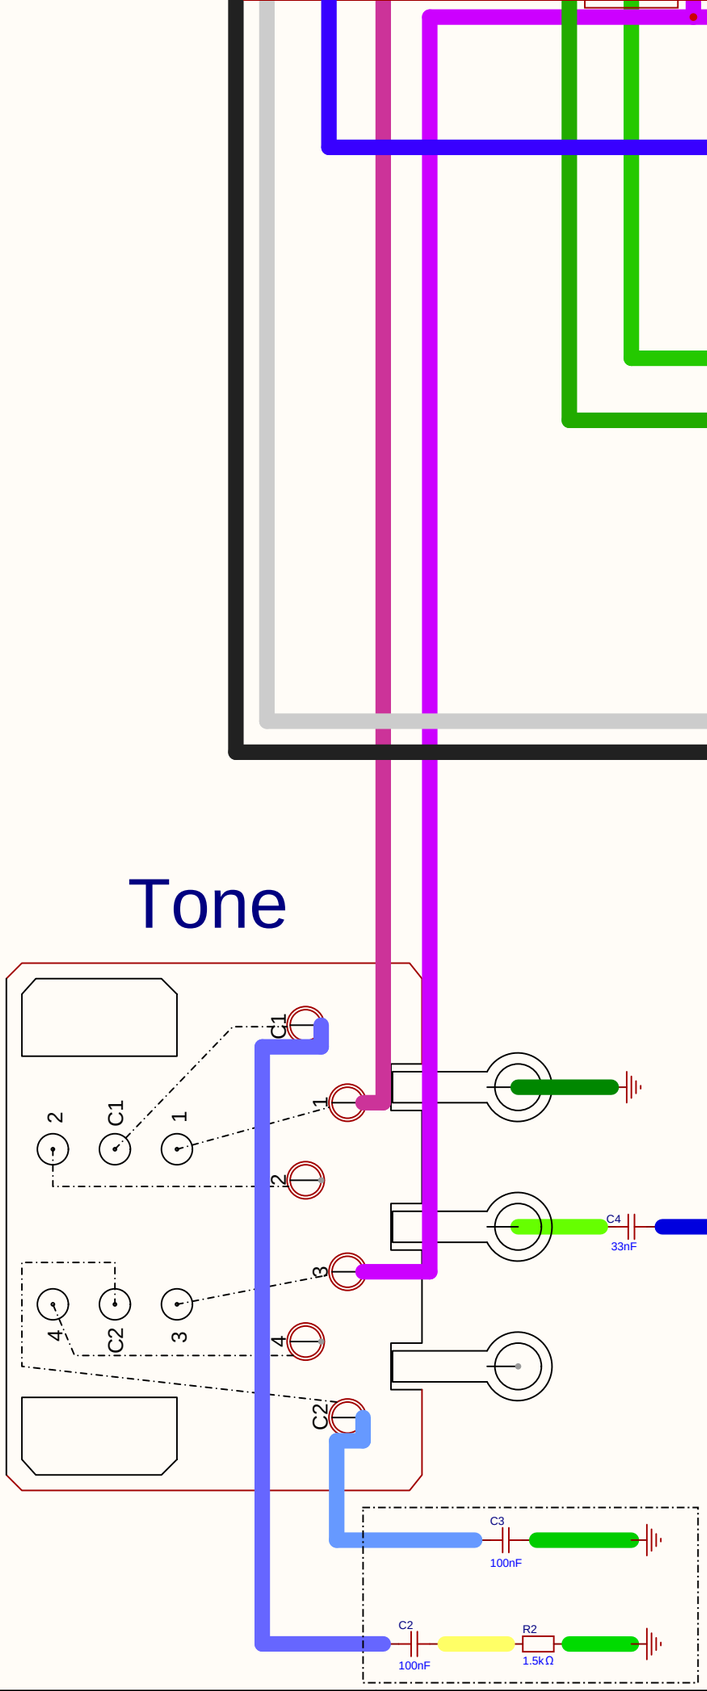


# Blower




Treble bleed circuit: RC filter in series.




# Killswitch




# Output




Single Coil Simulation circuit
RC filter for bridge pickup and single capacitor for neck pickup.
Bridge pickup requires the resistor for its volume drop compensation since its impedance is higher in this guitar's setup (Dimarzio Tone Zone in bridge position and Dimarzio PAF Pro in neck position).

| | | | |
|---|---|---|---|
| Schematic | Marco's JDR94 | Create at | 2026-10-24 |
| | | Update at | 2026-10-30 |
| Board | | Page | P1 |
| Drawn | Marco Ramírez | Guitars | |
| Reviewed | Marco Ramírez | | |
| | | Version | Size / Page 1 Total 1 |
| EasyEDA | | V4.0 | A3 / EasyEDA.com |