



WINDOW FILM

STATIC

TIPS & TRICKS

THANK YOU

for your purchase!



Video tutorial
(scan or click here)



If you have any questions about our products, please contact our support via e-mail
support@marapon.com



THE WORLD OF FILMS




Every person has different abilities. So it is with window films & their properties.

PREPARATION

Proper planning and overview is half the battle. Therefore, you should know in advance what is needed and make arrangements accordingly.


P. 05

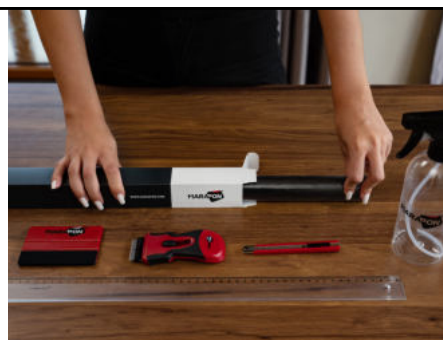

ATTACHMENT

Sorted by difficulty, we will show you the best ways to apply your window film with the optimal effect. with the best effect. Whether two left hands, housewife or professional craftsman.


P. 07

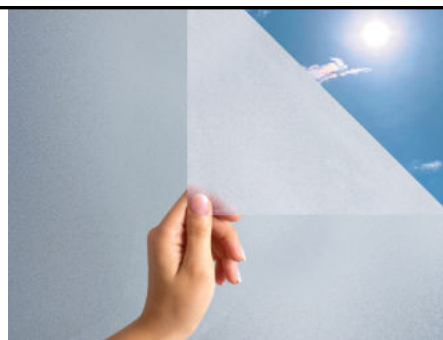

TIPS & TRICKS

No squeegee available? Foil does not stick? We help you with our years of experience and many other tricks!

P. 13

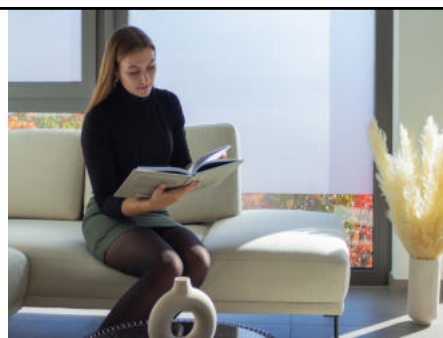

PREPARATION



What is needed to apply my window film?


Depending on the application method, the following helpers are needed:



CUTTER KNIFE



WINDOW CLEANER

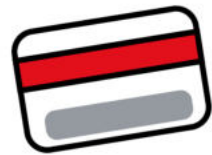

SQUEEGEE



MICROFIBER CLOTH



SPRAY BOTTLE



MEASURING TAPE



ADHESIVE TAPE



EASY INSTALLATION

Window films adhere only at room temperature. It is best to heat the film for a few seconds with a hair dryer. This prevents the film from contracting & guarantees static cling. This makes the film more elastic. Alternatively, the film can be placed on the heater for a few minutes.



**WINDOW FILM FOR
10 MINUTES ON THE
HEAT**

06

FOR BEGINNERS



This method is suitable for beginners and has a degree of difficulty from easy to medium.

CLEANING

Please clean the surface to be pasted thoroughly with a standard window cleaner and (microfiber) cloth. Also clean window frames and rubber lips. A ceramic hob scraper can also help with coarse dirt.


1



MEASURE

Now measure the surface. For windows, please measure only the surface of the glass, not the rubber seals. A tape measure is excellent for this purpose.

2

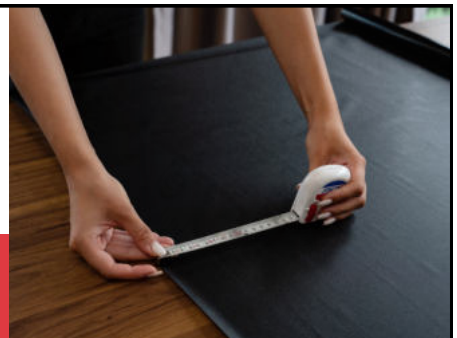

CUT

Draw the dimensions on the backing film and cut the film to your desired size. A cutter knife is more accurate than scissors in this case.

3



INSPECT

Fill a spray bottle with water (lukewarm water in winter) and add a little washing-up liquid. Spray the surface dripping wet with the mixture until a complete wetting is evident. Better more than too little, even in the corners!

4



PEEL OFF BACKING FILM

Place the film on the table with the carrier film facing up. Spray your fingers with the rinsing mixture and carefully pull off the carrier film, while a second person should spray the film with the mixture while it is dripping wet.


5



APPLY FOIL

Spray both sides of the film with the flushing rinsing mixture until it is dripping wet. Carefully apply the film to the surface of the the surface of the glass and slide it to the as desired.

6

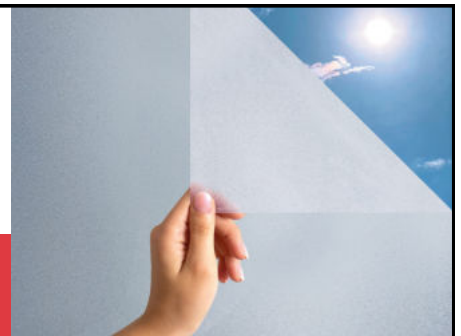


HOLD YOUR FINGERS AFTER REMOVING THE BACKING FILM ALWAYS DAMP TO AVOID DAMAGING THE TO DAMAGE THE FILM!

REMOVE BUBBLES

Spray the film again. With the squeegee once from the top in the center downwards. from the top in the middle downwards. down. Now work your way from the center to the right and then to the left. Repeat this process several times.

7

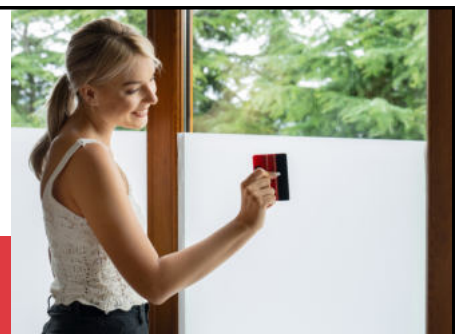

HUMIDITY

You can now use a cloth to carefully remove the moisture. Carefully wipe off the remaining moisture from the edges of the film. If further bubbles appear at the edges, press them a little more firmly to the outside.


8



CARE INSTRUCTIONS

Allow the film to dry for 1-2 days. After a week you can clean the window as usual. Avoid aggressive chemicals. The film can be removed again without leaving any residue.

9

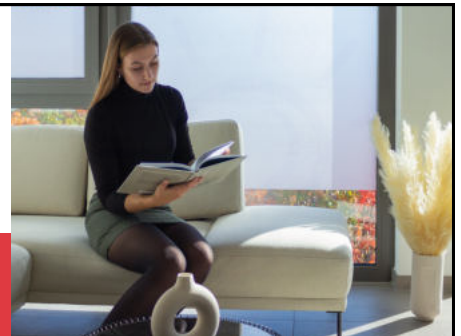



FOR EXPERTS



This method is suitable for advanced students and has a difficulty level from medium to difficult

CLEANING

Please clean the surface to be pasted thoroughly with a standard window cleaner and (microfiber) cloth. Also clean window frames and rubber lips. A ceramic hob scraper can also help with coarse dirt.

1



SPRAY IN

Fill a spray bottle with water and add a little dishwashing detergent. Spray the surface dripping wet with the mixture until complete wetting is evident. Better more than too little. Also in the corners!

2



PEEL OFF BACKING FILM

Place the film on the table with the facing up on the table. Spray your fingers with the rinsing mixture and carefully pull off the carrier film. A second person should spray the film dripping wet with the mixture.


3



APPLY FOIL

Spray the film on both sides and dripping wet dripping wet with the rinsing mixture until it is completely wetted. Carefully apply the film onto the glass surface and push it to the surface of the glass and push it to the surface as desired.


4

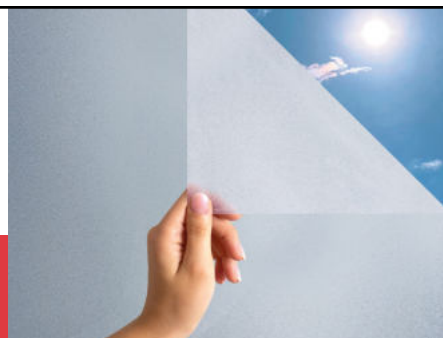

REMOVE BUBBLES

Spray the film again. With the squeegee once from the top in the middle, pull a strip down from the center. Now work your way from the center to the right and then to the left. Repeat this process several times.


5

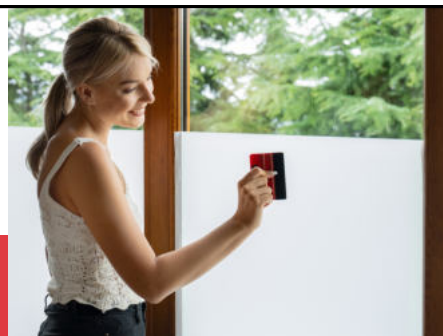

CUT

Cut off the excess foil on the sides with a cutter knife. Make sure that there are rubber seals. For you can use a ruler or the squeegee, take.

6

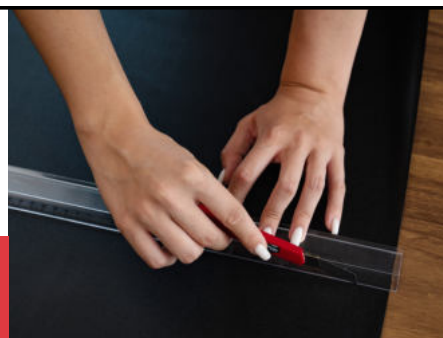


HOLD YOUR FINGERS AFTER REMOVING THE BACKING FILM ALWAYS DAMP TO AVOID DAMAGING THE TO DAMAGE THE FILM!

ROCKET AGAIN

After the film is now on the desired width/length you should spray the surface again and the remaining moisture with the squeegee moisture out with the squeegee.

7

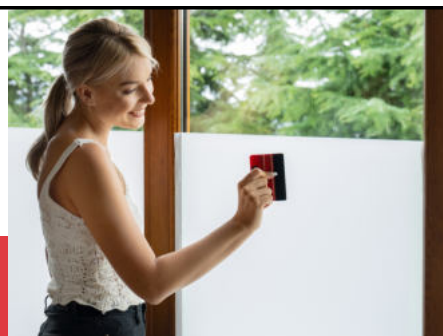

HUMIDITY

You can now use a cloth to carefully remove the moisture. Carefully wipe off the remaining moisture from the edges of the film. If further bubbles appear at the edges, press them a little more firmly to the outside.


8




CARE INSTRUCTIONS

Allow the film to dry for 1-2 days. After a week you can clean the window as usual. Avoid aggressive chemicals. The film can be removed again without leaving any residue.

9

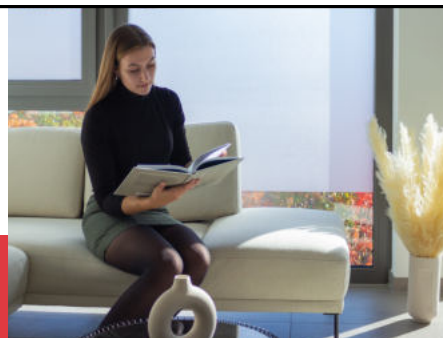

TIPS & TRICKS

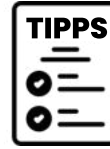

6 helpful tips from years of experience in the foil segment.

21° C

Is the recommended room temperature when applying a window film.

1



CUTTING

you cut your film directly on the window. Thus, the best result is achieved.

2




ADHESIVE TAPE

helps to easily separate the carrier film from the window film.

3



TIPS & TRICKS



6 helpful tips from years of experience in the foil segment.

CREDIT CARDS

are also suitable as a squeegee in an emergency. However, you should spray the film damp on both sides.


4



SUBMIT

you can easily peel off the film without leaving any residue simply loosen one corner with a scraper.

5

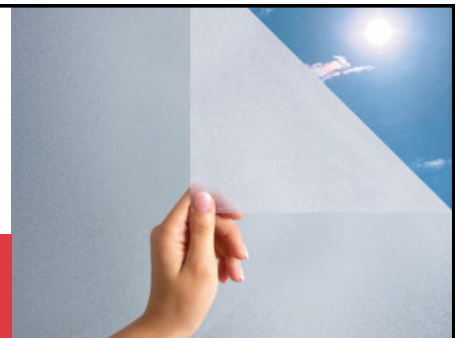

PROTECTS

not only protects the skin from dangerous rays - it is also easy on the wallet.

6







MARAPON GmbH
Altrottstraße 31
D-69190 Walldorf
www.marapon.com
support@marapon.com

FOLLOW US ON

