Mayco

STONEWARE COMBO

SW-174 Leather

Cone 6

Technique was achieved by brushing on two (2) layers of base glaze (SW-174 Leather). Then apply two (2) layers of top glaze, letting glazes dry between coats.

SW-104
Black Walnut
over
SW-174
Leather

SW-108
Green Tea
over
SW-174
Leather

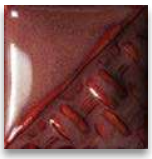

SW-113
Speckled Plum
over
SW-174
Leather

SW-116
Robin's Egg
over
SW-174
Leather

SW-117
Honeycomb
over
SW-174
Leather

SW-121
Smoke
over
SW-174
Leather

SW-123
Sapphire
over
SW-174
Leather

SW-133
Copper Ore
over
SW-174
Leather

SW-140
Black Matte
over
SW-174
Leather

SW-162
Pink Matte
over
SW-174
Leather

SW-164
Satin Patina
over
SW-174
Leather

SW-175
Rusted Iron
over
SW-174
Leather

Vases shown are fired to Cone 6 on White Stoneware body.

MaycoColors.com

Mayco

Mayco

STONEWARE COMBO

SW-174 Leather

Cone 10 reduction

Technique was achieved by brushing on two (2) layers of base glaze (SW-174 Leather). Then apply two (2) layers of top glaze, letting glazes dry between coats.

SW-104
Black Walnut
over
SW-174
Leather

SW-108
Green Tea
over
SW-174
Leather

SW-113
Speckled Plum
over
SW-174
Leather

SW-116
Robin's Egg
over
SW-174
Leather

SW-117
Honeycomb
over
SW-174
Leather

SW-121
Smoke
over
SW-174
Leather

SW-123
Sapphire
over
SW-174
Leather

SW-133
Copper Ore
over
SW-174
Leather

SW-140
Black Matte
over
SW-174
Leather

SW-162
Pink Matte
over
SW-174
Leather

SW-164
Satin Patina
over
SW-174
Leather

SW-175
Rusted Iron
over
SW-174
Leather

Vases shown are fired to Cone 10 reduction on White Stoneware body.

MaycoColors.com

Mayco