Mayco®

STONEWARE COMBO

SW-186 Azurite

Cone 6

Technique was achieved by brushing on two (2) layers of base glaze. Then apply two (2) layers of top glaze (SW-186 Azurite), letting glazes dry between coats.

SW-109
Capri Blue
under
SW-186
Azurite

SW-129
Copper Float
under
SW-186
Azurite

SW-136
Weathered Blue
under
SW-186
Azurite

SW-144
Lava Rock
under
SW-186
Azurite

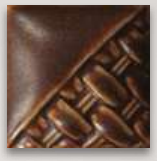

SW-145
Tea Dust
under
SW-186
Azurite

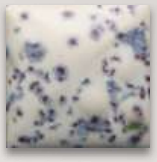

SW-153
Indigo Rain
under
SW-186
Azurite

SW-154
Shipwreck
under
SW-186
Azurite

SW-155
Winterwood
under
SW-186
Azurite

SW-170
Blue Hydrangea
under
SW-186
Azurite

SW-171
Enchanted Forest
under
SW-186
Azurite

SW-177
Raspberry Mist
under
SW-186
Azurite

SW-250
White Opal
under
SW-186
Azurite

Vases shown are fired to Cone 6 on White Stoneware body.

MaycoColors.com

Mayco®

Mayco®

STONEWARE COMBO

SW-186 Azurite

Cone 10 reduction

Technique was achieved by brushing on two (2) layers of base glaze. Then apply two (2) layers of top glaze (SW-186 Azurite), letting glazes dry between coats.

SW-109
Capri Blue
under
SW-186
Azurite

SW-129
Copper Float
under
SW-186
Azurite

SW-136
Weathered Blue
under
SW-186
Azurite

SW-144
Lava Rock
under
SW-186
Azurite

SW-145
Tea Dust
under
SW-186
Azurite

SW-153
Indigo Rain
under
SW-186
Azurite

SW-154
Shipwreck
under
SW-186
Azurite

SW-155
Winterwood
under
SW-186
Azurite

SW-170
Blue Hydrangea
under
SW-186
Azurite

SW-171
Enchanted Forest
under
SW-186
Azurite

SW-177
Raspberry Mist
under
SW-186
Azurite

SW-250
White Opal
under
SW-186
Azurite

Vases shown are fired to Cone 10 reduction on White Stoneware body.

MaycoColors.com

Mayco®