


NCR SelfServ™ 84 Walk-Up Standard Collar ATM Site Preparation

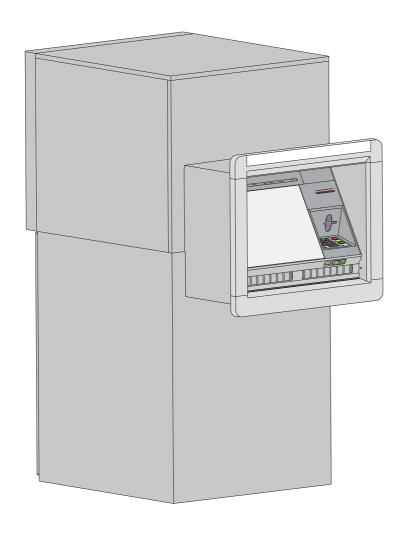

The product described in this document is a licensed product of NCR Corporation.

NCR and NCR SelfServ are trademarks of NCR Corporation. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

NCR Proprietary Information - not to be disclosed or reproduced without written consent.

© 2017, 2018 by NCR Corporation, Atlanta, Georgia, U.S.A. http://www.ncr.com. All Rights Reserved

Contents

Introduction	
Audience1 -	1
About This Document1 -	1
Revision Record1 -	1
Customer Responsibilities	
Notice2 -	1
Site Compliance2 -	1
Customer Actions2 -	1
Standards Compliance	
Radio Frequency Interference3 -	
FCC Radio Frequency Interference Statement3 -	
Canadian Class A Device Declaration3 -	
Safety3 -	
Safety Directive3 -	
Harmonised Safety Standard3 -	
Electromagnetic Compatibility (EMC)3 -	
Immunity Standards3 -	
EMC Directives	
Emission Standards	
Additional Requirements for 220V - 240V Units	
Product Overview	
General Description4 -	1
Options4 -	1
Acoustics4 -	1
Heat Dissipation4 -	1
Product Identification4 -	1
Site Requirements	
Positioning the ATM5 -	1
Floor5 -	1
Doorways and Corridors5 -	1
Wall5 -	1
Wall Cavity5 -	
Installing Through a Glass Wall5 -	1
Collar Tolerance5 -	1
Ambient Lighting5 -	1
Task Lighting5 -	1
Temperature and Humidity5 -	2
Normal Operating Range (Interior Environment)5 -	
Normal Operating Range (Exterior Environment)5 -	
Storage Range (Up To Three Months)5 -	
Transit Range (Up To One Week)5 -	
Extreme Power On Range (Up To One Hour)5 -	2

Barometric Pressure	5 - 2
Power Requirements	
AC Power Requirements	6 - 1
Input Voltage Setting	
Grounding	
Transient Protection	
Cable Requirements	
Cable Preparation	7 - 1
Data Line Transient Protection	
Alarm Interface Cables	
Basic Alarm Cable	
Enhanced Alarm Cable	
Remote Status Monitor	7 - 2
Shortening the Cable	
Remote Relay Cable	
Ethernet Standard Cable	
Power Cable	7 - 2
Decals	
Advert Window	
Advert Collar or Open Advert Collar	
Entry/Exit Decals	8 - 1
Variant Details - CEN I, Standard Collar ATM	
Package Dimensions	9 - 1
ATM Dimensions	
Weight and Floor Loading	9 - 1
Standard Security Enclosures	
Cable Entry	
Facia Items	
15" Touchscreen	
19" Touchscreen	9 - 2
Touchscreen Dimensions	9 - 2
Heights and Depths	0 2
Distance for Voice Cuidance	
Distance for Voice Guidance	
Security Bolts	9 - 2
Security Bolts Bolt Holes	9 - 2 9 - 3 9 - 3
Security Bolts Bolt Holes Short Sleeve	9 - 2 9 - 3 9 - 3
Security Bolts Bolt Holes Short Sleeve Long Sleeve	9 - 2 9 - 3 9 - 3 9 - 3
Security Bolts Bolt Holes Short Sleeve Long Sleeve Hole in the Wall	9 - 2 9 - 3 9 - 3 9 - 3 9 - 3
Security Bolts Bolt Holes Short Sleeve Long Sleeve Hole in the Wall Hole at Optimum Height	9 - 2 9 - 3 9 - 3 9 - 3 9 - 3 9 - 4
Security Bolts Bolt Holes Short Sleeve Long Sleeve Hole in the Wall Hole at Optimum Height Hole at Lowered Height	9 - 2 9 - 3 9 - 3 9 - 3 9 - 3 9 - 4 9 - 4
Security Bolts Bolt Holes Short Sleeve Long Sleeve Hole in the Wall Hole at Optimum Height Hole at Lowered Height Hole in the Wall Overlap - Standard Collar - ATM	9 - 2 9 - 3 9 - 3 9 - 3 9 - 3 9 - 4 9 - 4 9 - 4
Security Bolts Bolt Holes Short Sleeve Long Sleeve Hole in the Wall Hole at Optimum Height Hole at Lowered Height Hole in the Wall Overlap - Standard Collar - ATM	9 - 2 9 - 3 9 - 3 9 - 3 9 - 3 9 - 4 9 - 4 9 - 4 9 - 5 9 - 5
Security Bolts Bolt Holes Short Sleeve Long Sleeve Hole in the Wall Hole at Optimum Height Hole at Lowered Height Hole in the Wall Overlap - Standard Collar - ATM	9 - 2 9 - 3 9 - 3 9 - 3 9 - 4 9 - 4 9 - 4 9 - 5 9 - 5

Servicing Areas - Optimum - Single ATM Short Sleeve	
Long Sleeve	9 - 6
Servicing Areas - Optimum - Side By Side	9 - 7
Short Sleeve	9 - 7
Long Sleeve	9 - 7
Servicing Areas - Minimum - Single ATM	9 - 8
Short Sleeve	9 - 8
Long Sleeve	9 - 8
Servicing Areas - Minimum - Side By Side	9 - 9
Short Sleeve	9 - 9
Long Sleeve	9 - 9

Introduction

AUDIENCE

This document is intended for architects and those responsible for preparing a site prior to the arrival of the ATM.


ABOUT THIS DOCUMENT

This site preparation document is designed to be read on wide aspect ratio screens. Each section has been structured to fit the maximum amount of information on the minimum number of pages yet still be readable when printed on A3 size paper. Printing on smaller paper sizes may reduce readability but will make handling easier.

The document is organised into sections covering the following topics:

- Introduction this section
- Customer Responsibilities
- Standards Compliance
- Product Overview
- Site Requirements
- Power Requirements
- Cable Requirements
- Decals
- Variant Details CEN I, Standard Collar ATM
- Variant Details CEN I, Open Collar ATM
- Variant Details CEN I, Standard Advert Collar
- Variant Details CEN I, Open Advert Collar
- Variant Details CEN III and IV, Standard Collar ATM
- Variant Details CEN III and IV, Open Collar ATM
- Variant Details CEN III and IV, Standard Advert Collar
- Variant Details CEN III and IV, Open Advert Collar

Each page has two or three columns laid out as follows:

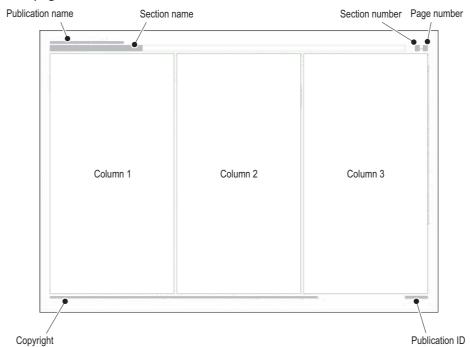

Where left and right side are stated the ATM is viewed from the front (facia side) of the ATM. All plan views are from the top unless otherwise stated.

Unless otherwise stated all dimensions are rounded to the nearest millimetre and equivalent decimal of an inch.

REVISION RECORD

Date	Revision	Pages	Reason for Change
January 2017	Α	All	Initial release
February 2017	В	Various	Hole at Lowered Heights table updated All modules above 15" touchscreen removed
August 2017	С	9-4, 10-4, 11-4 12-4	Update to Australia plinth height, 5 high 15 in. display
September 2017	D	Various	CEN III and IV (Std and GAS EX) added Modules above 15" touchscreen added to Open collars Hole at Lowered Heights - new table covering modules above 15" touchscreen Safety standard and directive updated Product Identification label updated Service clearances updated - LHS/RHS deposit modules Topbox Clearance added Note added to weight and floor loading sections
September 2017	Е	Various	Hole at Lowered Heights - update to table covering no modules above touchscreen
February 2018	F	15-2	Modules above 15" touchscreen added back in (Std and Std Advert Collars) Modules above 15" touchscreen installation heights table added back in
March 2018	G		Installation height tables updated, 1mm removed from US plinth and bottom of hole dims

Customer Responsibilities

NOTICE

This is a contractual document. It contains important warnings and confers important legal rights and obligations. You are advised to read it carefully.

It is the responsibility of you, the customer, to assure that all installation preparations are complete and in compliance with all specifications and requirements of NCR and all applicable national, state, or local codes, regulations and laws.

This equipment must be installed and used in strict accordance with the manufacturer's instructions. However, there is no guarantee that interference to radio communications will not occur in a particular commercial installation. If this equipment does cause interference, which can be determined by turning the equipment off and on, the user is encouraged to consult an NCR service representative immediately.



CAUTION NCR Corporation is not responsible for any radio or television interference caused by unauthorized modifications of this equipment or the substitution or attachment of connecting cables and equipment other than those specified by NCR. Such unauthorized modifications, substitutions, or attachments may void the user's authority to operate the equipment. The correction of interference caused by such unauthorized modifications, substitutions, or attachments will be the responsibility of the user.

SITE COMPLIANCE

This document contains the information necessary for the preparation of a site conforming to NCR specifications. It is very important that the site complies with the requirements specified in this document, because, once the equipment has been installed, deficiencies in site preparation or the problems caused by these deficiencies are much more difficult to detect and correct.

Further, failure to comply with these requirements or to take proper steps to protect equipment against risks identified in this document may cause serious damage to the equipment and to the customer's business.

In addition to the need to comply with the requirements specified, electrical wiring and mechanical systems must also comply with all relevant codes, laws and regulations.

It is important that the site be prepared by a customer or his agent who is fully conversant with the special requirements of electronic equipment. The responsibility for ensuring that the site is prepared in compliance with this document remains with the customer.

For information and guidance purposes only, a list is provided, in general terms, of those matters for which the customer is responsible. This list is not intended to be comprehensive, and in no way modifies, alters, or limits the responsibility of the customer for all aspects of adequate site preparation.

NCR staff will be available to answer questions relating to the contents of this document but, except where:

- a. the customer has been notified that a full or partial consultancy service is available and/or that NCR will be willing to undertake a preliminary or final site survey and
- b. the customer shall have entered into a formal contract with NCR for provision of the same

no comment, suggestion or advice offered or not offered about preparation of the site nor any inspection of the site whether before or after preparation is to be taken as approval of the location of the site and equipment or of its preparation and NCR will not be liable in respect of any comment, suggestion or advice given by its staff or in respect of any failure to give advice.

Finally, only the customer can know the full extent of damage which
may be caused to his business by reason of failure of the equipment
which is to be installed. For this reason it is the customer's responsibility
to ascertain the extent of any such possible damage to his existing or
planned business, and to effect, full insurance in respect of it.

CUSTOMER ACTIONS

The customer must do or provide the following:

- When required by NCR, provide the NCR customer service representative with appropriate drawings that indicate:
 - Location of the equipment
 - Site wiring (power and signal, paths and lengths)
 - Location of other equipment capable of generating electrical noise, electromagnetic interference, heat, etc.
- Make building alterations necessary to meet wiring and other site requirements.
- Provide and install all communications cables, wall jacks, special connectors, and associated hardware.
- Provide and install necessary power distribution boxes, conduits, grounds, lightning protection, and associated hardware.
- Make sure all applicable codes, regulations and laws (including, but not limited to, electrical, building, safety, and health) are met.
- Provide and install auxiliary power or other equipment as required.
- Provide storage or service areas as required.
- Make sure the environmental requirements of the system/unit are met.
- Provide floor coverings and environmental systems that limit or control static electricity build-up and discharge.
- Install the product at a height which meets the accessibility regulations of the relevant country.

Standards Compliance

RADIO FREQUENCY INTERFERENCE

FCC Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case you, the customer, will be required to correct the interference at your own expense.

Canadian Class A Device Declaration

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Réglement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

SAFETY

Safety Directive

• 73/23/EEC, 93/68/EEC 'Low Voltage Directive and Amendment'.

Harmonised Safety Standard

• EN 60950-1:2006+A2:2013 'Information Technology Equipment - Safety'

ELECTROMAGNETIC COMPATIBILITY (EMC)

Immunity Standards

The ATM complies with the following requirements for radiated and conducted immunity:

EN 55024 (1998)/+A1: 2001, A2: 2003

As per the requirements of EN55024, the ATM complies with the requirements of the following normative Immunity Standard:

- EN 61000-4-2 Electrostatic Discharge
- EN 61000-4-3 Radiated RF
- EN 61000-4-4 Electrical Fast Transient/Burst
- EN 61000-4-5 Surge
- EN 61000-4-6 Conducted RF
- EN 61000-4-8 Power Frequency Magnetic Field
- EN 61000-4-11 Voltage Dips/Short Interruption.

EMC Directives

This equipment has been found to comply with the essential requirements of EMC Directive 2014/30/EU, by testing to harmonized standards EN55032, EN55024, EN61000-3-2 and EN61000-3. The equipment complies with the limits for a Class A digital device, pursuant to EN55032.

The ATM complies with the following Electromagnetic Compatibility (EMC) directives and standards for IT equipment:

- 2014/30/EU 'EMC Directive'
- 93/68/EEC 'CE Marking Directive'

Emission Standards

The ATM complies with the following requirements for radiated and conducted emissions:

- EN55032 Class A
- FCC 47CFR Part 15. Class A
- CISPR 32 Class A
- AS/NZS 3548 Class A
- GB 9254 Class A
- CNS 13438 Class A.



WARNING This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

Additional Requirements for 220V - 240V Units

The ATM complies with the following requirements for conducted emissions:

- EN 61000-3-2: 2000, Mains harmonics, Class A
- EN 61000-3-3: 1995/+A1: 2001, Mains flicker.

ACCESSIBILITY


It is the responsibility of the owning institution to ensure that the heights from the floor level to the facia items comply with any local regulations.

Note: The heights listed in this document assume that the installation does not add depth in front of the ATM. Increased depth may change the height requirements due to increasing the user's reach, therefore please refer to the relevant accessibility regulation if additional depth has been added.

Product Overview

GENERAL DESCRIPTION

The NCR SelfServ 84 Walk-Up Automated Teller Machine is a 'through the wall' ATM which may be installed through any suitable exterior wall or in a vestibule location.

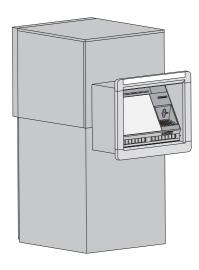

There are no separate Vestibule or Through the Wall variants of the SelfServ 84. All dimensions and clearances are the same for both types of installation.

Options

Standard Security Enclosures

- CEN Grade I
- CEN Grade III
- CEN Grade IV

Solid and Gas Explosion Resistant (EX GAS) Security Enclosures

- CEN Grade III
- CEN Grade IV

Sleeve

- Short Sleeve
- Long Sleeve

Collars

- Standard
- Standard Advert
- Open
- Open Advert

ACOUSTICS

For most variants the acoustics sound power does not exceed:

- 65 dB(A) when idle
- 68 dB(A) when operating (see note).

However, the following configurations will affect the sound levels as shown in the table below:

Configuration	Acoustic sound power when operating	
Coin and passbook	does not exceed 72 dB(A)	
Cooling fans	does not exceed 75 dB(A)	

HEAT DISSIPATION

The NCR SelfServ product range is a flexible hardware platform. NCR recommends that actual power measurements are taken and used to establish the heat dissipation for specific hardware configurations. These measurements should include any custom or third party features.

Where specific measurements are not available then, as a guide, **760 KJ/hour** can be used as an indicative heating load. This figure is based on an ATM in idle mode, with a medium to high feature functionality configuration.

Heat dissipation figures are largely unaffected by transactional rates.

PRODUCT IDENTIFICATION

The illustration below is typical of the layout of the product identification label which is fixed inside the ATM.



The product is identified by a class and a 4 digit model number. The serial number is unique to each ATM. The tracer number is used to identify where the ATM was built.

Please quote all of the serial and tracer numbers, including the prefix, when making reference to the ATM.

Electrical rating information is also shown on the product label.

Site Requirements

POSITIONING THE ATM

The ATM may be installed through any suitable exterior wall or vestibule location.

If the ATM is fitted with a Passbook Printer, it should never be exposed to rain and therefore only suitable for interior installations.

The ATM must also be positioned away from heat sources or any air conditioning equipment.

Bright lights and windows behind the user may degrade camera performance. Position the ATM away from direct sunlight.

Allow sufficient room for installation and servicing requirements.

FLOOR

The ATM *must* be installed on a level, even, concrete or other noncombustible surface. In locations where the floor may be uneven, it is recommended that a steel plate is used under the ATM.

An antistatic floor covering should be used and must be of a type that will not generate dust or fluff.

The ATM must be installed on a floor capable of supporting the maximum weight including media. Only the maximum weight should be considered as additional options may be added after installation. Floor loading is calculated by dividing the maximum weight of the ATM by the surface area of the ATM base in contact with the floor.

Service areas, ATM weights and floor loading for your ATM can be found in the Variant Details sections.

DOORWAYS AND CORRIDORS

Make sure that doorways and corridors leading to your point of installation are wide enough to allow the package to pass through, or make arrangements to unpack the ATM and remove it from the pallet in an area with sufficient access then move it to the installation site.

Make sure that any corridors can support the weight of the ATM, including all packaging and the pallet.

WALL

A **25 mm** (1.0 in.) wide smooth surface is required around the edge of the wall opening to enable a good weather seal.

Wall Cavity

Any cavity in the wall must be sealed to provide a flush surface that does not extend into the wall opening. Leave the gap between the ATM sleeve and the wall opening clear to allow air at room temperature to circulate.


Installing Through a Glass Wall

If you are installing your ATM through a glass wall you may require a suitable glass support (normally a steel collar) to sit between the ATM collar and the glass. The requirement for this support should be determined by the architect. If required, any such support should be sourced locally.

Collar Tolerance


The collar has a tolerance of \pm 4mm (0.2 in. (\pm 0.5°)) at the top and bottom, with 0 mm (0.0 in. (0°)) at its centre.

The collar cannot accommodate large dips or depressions in the wall. Make sure the wall is smooth and even.

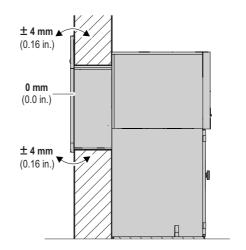

AMBIENT LIGHTING

If the ATM is fitted with a camera, it is strongly recommended that there is a minimum of **50 LUX** lighting at floor level within the area illustrated below.

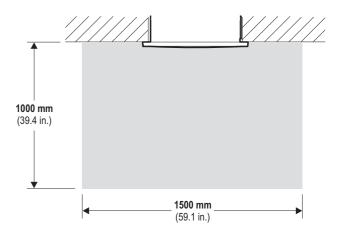

TASK LIGHTING

A minimum of 200 LUX is required for task lighting.

Site Requirements

TEMPERATURE AND HUMIDITY

Continuous operating at or near the range limits, or in a location where the temperature and humidity change beyond the specification, should be avoided.

If installing though an exterior wall, the site must meet the requirements of **both** the Interior and Exterior environments.

Note: For exterior through the wall ATMs the humidity inside the building is restricted to a maximum of **30%** at an outside temperature of **-35°C** (-31°F), with a linear relationship between temperature and humidity to a maximum humidity at **0°C** (32°F).

Normal Operating Range (Interior Environment)

- Temperature: 0°C to 40°C (32°F to 104°F)
- Relative Humidity: 20% to 80%
- Dew Point Temperature Restriction: 26°C (79°F) maximum

Normal Operating Range (Exterior Environment)

- Temperature:
 - without Passbook Printer: -35°C to 50°C (-31°F to 122°F)
 - with Passbook Printer: 0°C to 40°C (32°F to 104°F)
- Relative Humidity:
 - without Passbook Printer: 10% to 100%
 - with Passbook Printer fitted: 10% to 80%
- Dew Point Temperature Restriction: **26°C** (79°F) maximum

Storage Range (Up To Three Months)

- Temperature: -10°C to 50°C (14°F to 122°F)
- Relative Humidity: 10% to 90%

Transit Range (Up To One Week)

- Temperature: -40°C to 60°C (-40°F to 140°F)
- Relative Humidity: 5% to 95%

Extreme Power On Range (Up To One Hour)

- Temperature: 0°C to 45°C (32°F to 113°F)
- Relative Humidity: **10%** to **95%**

BAROMETRIC PRESSURE

- Operating/Transit Limits: 105 kPa (15.2 lbf/in².) to 70 kPa (10.2 lbf/in².)
- Equivalent Altitude: Up to a maximum of 3000 m (9842.52 ft)

Power Requirements

AC POWER REQUIREMENTS

The maximum current requirements are:

- 10A at 120V
- 6.3A at 230V.

The maximum inrush current is 100A.

NCR does not recommend running an ATM with deposit devices without an Uninterruptible Power Supply (UPS). Without a UPS, there is the potential for customer's cash to be retained in the device if there is a power failure.

INPUT VOLTAGE SETTING

The ATM can operate from the following input mains voltages:

- 90V to 136V at 50/60Hz
- 180V to 264V at 50/60Hz.

GROUNDING

The ATM operates from a single phase, 3 wire supply: live, neutral and ground.

The ATM power requirements will normally permit it to operate within existing wiring configurations and from existing mains outlets provided that:

- the branch circuit of the distribution panel supplying the ATM is not also used to supply equipment with heavy inductive loads such as air conditioners or AC motors.
- other branch circuits on the same distribution panel do not supply such equipment.
- the installation meets or exceeds the regulatory and local guidelines with regard to electrical safety and all conductor sizing.

The normal and safe operation of this ATM is dependent on the above. Only qualified personnel that meet local certification standards should be permitted to ensure compliance.

Note that the building ground point can also affect data integrity. For additional information refer to *Data Line Transient Protection* in the *Cable Requirements* section

TRANSIENT PROTECTION

In the process of power distribution, transient electrical energy (including, but not limited to, lightning strikes, intermittent short circuits, and switching transients) can be introduced on to power lines. Such transient energy can be very damaging to electronic hardware and can also cause data corruption. Under these circumstances, NCR recommends the use of AC power transient suppressors and data (communication) line transient suppressors. Such protective devices are intended to guard against power and data line transients that can result in hardware damage and various system or program errors.

Improvement of any deficiencies in power quality is a customer responsibility. Malfunction and/or component failure as a result of power quality problems are/is not covered by NCR Corporation Maintenance Agreement. NCR accepts no liability for any such occurrence nor for its consequences.

When power transient suppression is required, the suppressors used should meet the following minimum requirements:

- Dissipate energy to match the appropriate application categories as defined by ANSI/IEEE Standard C62.41, Guide on Surge Voltages in Low-Voltage AC Power Circuits.
- Be of the voltage limiting (clipping), or tracking filter type. The suppressor must not 'clamp' the voltage to zero, and must self-recover after the passage of the transient. The suppressor may be of the hybrid type construction that makes use of various technologies in order to meet speed and dissipation requirements.
- Exhibit a 'short circuit' mode upon its failure, thus providing a positive indication of its failure such as a blown fuse or tripped breaker
- Be listed by the accepted safety organization for the country involved (e.g. UL, CSA, VDE, ETL, etc.) and the installation must conform to local, state, and national electrical codes and regulations.

Location Category	Comparable to IEC No 664 Category	Transient	
		Waveform	Amplitudes
B = Major feeders, short branch circuits, and load centres	III	Volts = $1.2 \times 50 \mu s$ Current = $8 \times 20 \mu s$ and 0.5μ Rise - 100 kHz Ringwave	6kV 3kA 6kV 500A
C = Service Entrance and run to load centre	IV	Volts = $1.2 \times 50 \mu s$ Current = $8 \times 20 \mu s$	10kV or more 10kA or more

Cable Requirements

CABLE PREPARATION

NCR supply a power cable for the ATM. Other external cables are not supplied. Specifications for these cables are given in this section.

It is the customer's responsibility to have any required external cables installed and to make sure that all cable preparations comply with NCR specifications as well as with all national, state or local telephone and telegraph regulations and laws

When producing cables allow for 2.2 m (7.22 ft) of cable within the ATM.

DATA LINE TRANSIENT PROTECTION

Voltage transients, line noise, surges, sags, impulses, and spikes may be experienced routinely or sporadically. When such phenomena occur the use of protective devices may be required to ensure proper operation of the equipment.

It is the responsibility of the customer to install and connect a data line transient suppression system to correct or prevent any deficiencies. Such systems must meet the following minimum requirements:

Be of the self-recovering voltage limiting type. Exhibit a 'short circuit' mode upon its failure to ensure a positive indication of its failure. Insert minimum inductive and capacity loading at the operating frequency. Be installed in accordance with all applicable local, state, and national electrical codes and regulations.

Protect the data port from damage in the presence of a data line transient event as defined in IEC Standard 1000-4-5 (formerly IEC 801-5).


ALARM INTERFACE CABLES

The ATM may optionally be configured to provide an alarm interface which enables the ATM to be connected to an external local alarm system. The interface may take the form of one of two options; a basic alarm system or an enhanced alarm system.

A stabilised, non-interruptible power supply must be provided through the external alarm system. The alarm interface cable wiring must conform to the following specification:

- 12V ± 2V dc
- 200mA maximum
- Ripple, 5% maximum.

Basic Alarm Cable

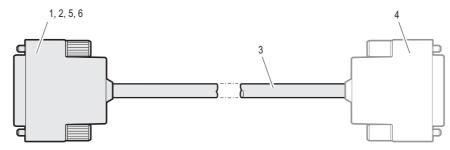


- 1. Connector, 25 Way (NCR part no. 006-0005896)
- 2. Terminal, wire, female (NCR part no. 009-0002640)
- 3. Cable, multiconductor (determined by the alarm installed).
- 4. Connector (determined by remote device).
- 5. Shell Hood (NCR part no. 006-1500038).
- 6. Screw retainer (NCR part no. 601-0101584)


	o. Colew retainer (IVOIX part lio. 00	1 0 10 100 1).	
10-	- Chassis GND -		
T	— Not used	Ţ	,
3 0-	- Not used	Ā	,
4 0	- Not used	Q	,
5 0-	- Not used	Q	,
6 0	- Not used	Q	,
70-	Silent Alarm Common *		,
8 0-	Door Alarm N.O.	ŏ	,
9 0-	Door Alarm N.C.		,
100-	Vibration/Heat Common		,
110-	- Not used	\	
120	+12V		,
130-	 Not used 	\(\)	
140-	Not used	\(\)	
150	Not used	\(\)	
160	Not used	\(\)	
170-	Not used	\(\)	
180-	Not used	\(\)	
	Silent Alarm N.O. *		,
200-	Silent Alarm N.C. *)
210-	Door Alarm Common)
220-	Vibration/Heat N.O.)
230-	Vibration/Heat N.C)
240	- Not used	\(\)	
25 0	+12V Return -		,
	* Ontional	L	
	* Optional		

Remove a **20 mm** (0.79 in.) section of the outer sleeve, **100 mm** (3.94 in.) from the ATM end of the cable.


Take care not to cut through the cable shielding.

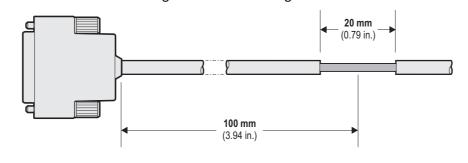

Enhanced Alarm Cable

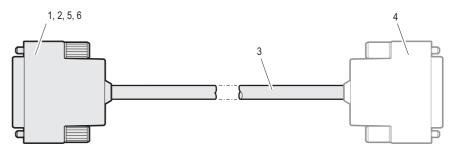


- 1. Connector, 25 Way (NCR part no. 006-0005896)
- 2. Terminal, wire, female (NCR part no. 009-0002640)
- 3. Cable, multiconductor (determined by the alarm installed).
- 4. Connector (determined by remote device)
- 5. Shell Hood (NCR part no. 006-1500038).
- 6. Screw retainer (NCR part no. 601-0101584)

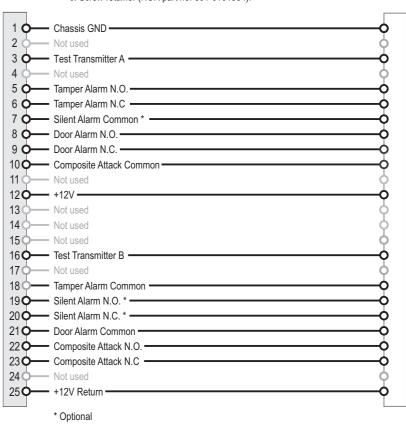

Remove a **20 mm** (0.79 in.) section of the outer sleeve, **100 mm** (3.94 in.) from the ATM end of the cable.


Take care not to cut through the cable shielding.

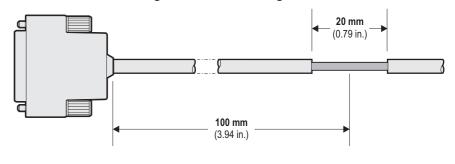

Cable Requirements


REMOTE STATUS MONITOR

The remote status monitor feature is supplied as a complete assembly consisting of a status indicator unit, **76.2 m** (250 ft) of cable and a connector.

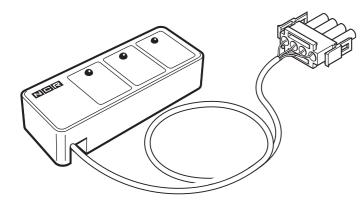

Remove a 20 mm (0.79 in.) section of the outer sleeve, 70 mm (2.76 in.) from the ATM end of the cable.


Take care not to cut through the cable shielding.

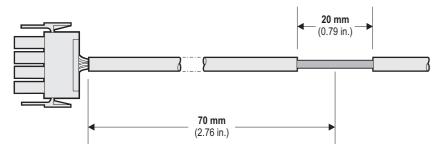

Shortening the Cable

If you need to shorten the cable, proceed as follows:


- 1. Remove the cover from the remote status indicator unit
- 2. Disconnect the four leads (E1, E2, E3 and E4) from the indicator

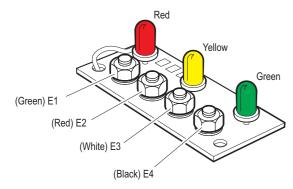


- 3. Cut the cable to the required length and strip the four wire ends
- Connect the wires to the correct terminals
- 5. Replace the status indicator cover.

REMOTE RELAY CABLE

The remote relay provides a pair of open contacts, rated at 28 volts per ampere for both ac and dc supplies, which can be closed to activate a remote device. The interconnecting cable to a remote device must conform to the following specification and wiring:

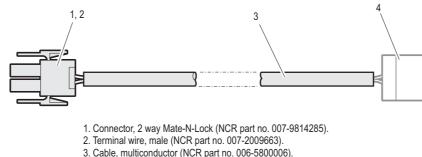


4. Connector (determined by remote device)



Remove a 20 mm (0.79 in.) section of the outer sleeve, 100 mm (3.94 in.) from the ATM end of the cable.

Take care not to cut through the cable shielding.

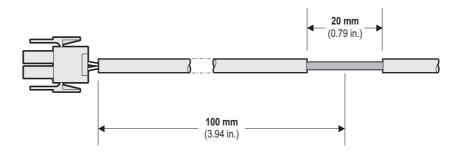


ETHERNET STANDARD CABLE

The ethernet standard cable must be fully shielded, 8 pin, Category 5 compliant and must not exceed 97 m (318.20 ft) in length.

Remove a 40 mm (1.57 in.) section of the outer sleeve, 80 mm (3.15 in.) from the ATM end of the cable.

Take care not to cut through the cable shielding.

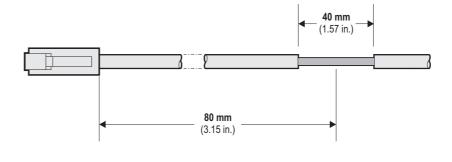

POWER CABLE

The ATM is supplied either as a 120V or a 220-240V unit.

120V ATMs are supplied with a power cable fitted with a NEMA type 5-15P power source connector.

220-240V ATMs are supplied with an unterminated power cable. Information about suitable power connectors is supplied with the accessories.

The power cable supplied is **3 m** (9.84 ft) in length. If it is necessary to increase this length to meet site requirements, then the extension must satisfy local or country regulations.




WARNING This equipment must be earthed.

Decals

ADVERT WINDOW

The decals should be a maximum of **0.75 mm** (0.0295 in.) thick.

Advert Collar or Open Advert Collar

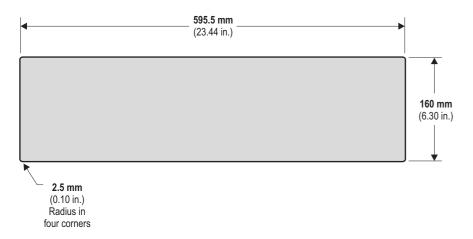


ENTRY/EXIT DECALS

Entry/Exit decals should be a maximum of **0.5 mm** (0.02 in.) thick. NCR recommends they be made from textured polycarbonate with 3M 467 High Performance MP adhesive.

Decals should provide good contrast, at least 70%, between foreground (text/icon) and background.

A sans serif typeface should be used (Tiresias is recommended). The text size should be at least 14 point, and larger where possible. Where tactile decals are required they should be designed in line with specific country requirements.

Suggested icon designs and wording are shown below:

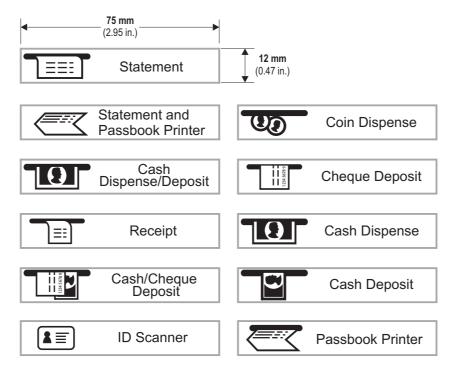





CAUTION When placing any card reader decal, make sure that the label does not obscure the contactless card reader or card reader entry slot lights.



Do NOT place any metallic coated or substrate label on the glass area around the CCR or card reader, highlighted below:

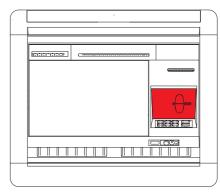


PACKAGE DIMENSIONS

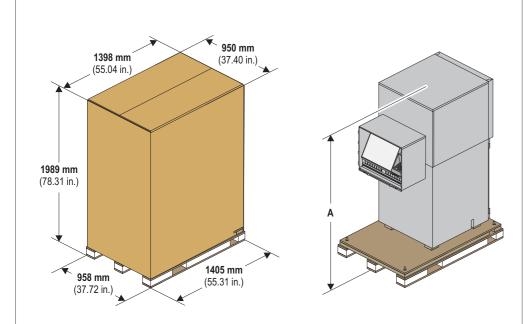

A - 1847 mm (72.72 in.) with a 5 High Security Enclosure 1729 mm (68.07 in.) with a 4 High Security Enclosure

ATM DIMENSIONS

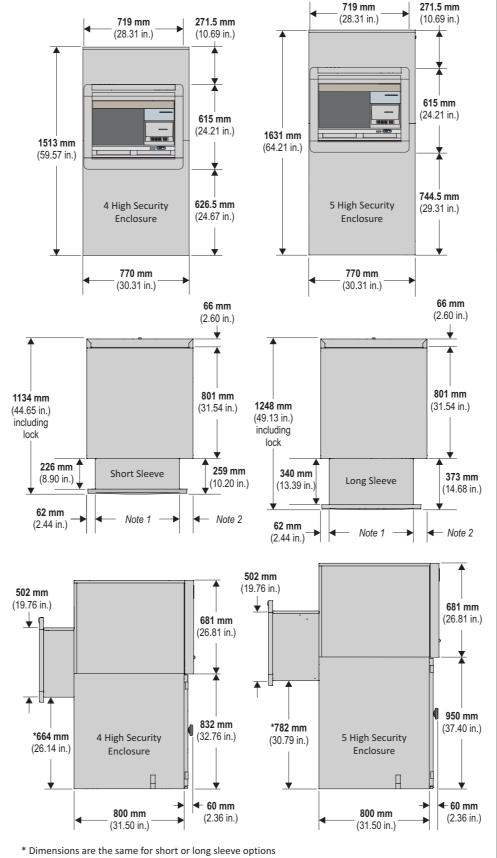


WEIGHT AND FLOOR LOADING

Note: The maximum weight covers the **maximum configuration possible** for the ATM. This will include all modules (coin dispenser, cash acceptor, statement printer, etc) fully loaded with media.

Standard Security Enclosures

	CEN Grade I 4 High	CEN Grade I 5 High
Maximum weight	904.70 kg (1994.52 lb.)	949.70 kg (2093.73 lb.)
Floor loading	1469 kg/m² (300.8 lb./ft ²)	1542 kg/m² (315.7 lb./ft ²)

CABLE ENTRY

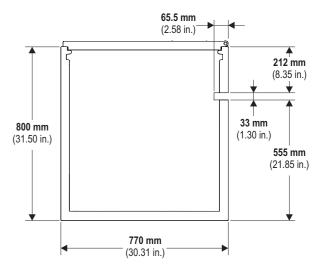

617.3 mm (24.30 in.) including cash camera

Note 2: 98 mm (3.86 in.) without cash camera option 90.7 mm (3.57 in.) with cash camera option

FACIA ITEMS 15" Touchscreen 19" Touchscreen \$ 1111 **Touchscreen Dimensions** Touchscreen Touchscreen Touchscreen Height x Width Size Angle 234 mm x 310 mm 15 inch 30 degrees from vertical

9.21 in. x 12.20 in. 305 mm x 380 mm

12.01 in. x 14.96 in.

19 inch

Height	s and Depths			
Facia Iten	n	Height from base of ATM (4-High Dispenser Safe)	Height from base of ATM (5-High Dispenser Safe)	Depth from front of shelf
	Cheque Entry	1089 mm (42.87 in.)	1207 mm (47.52 in.)	218 mm (8.58 in.)
Ш	Passbook Entry/Exit	1086 mm (42.76 in.)	1204 mm (47.40 in.)	218.5 mm (8.60 in.)
	Statement Exit	1084 mm (42.68 in.)	1202 mm (47.32 in.)	218 mm (8.58 in.)
1	ID Scanner	1082 mm (42.60 in.)	1200 mm (47.24 in.)	236 mm (9.29 in.)
(\$)	Coin Exit	1075 mm (42.32 in.)	1193 mm (46.97 in.)	234 mm (9.21 in.)
9	Touchscreen - Top 483 mm (19.0 in.)	1074 mm (42.28 in.)	1192 mm (46.93 in.)	221 mm (8.70 in.)
	Receipt	1031 mm (40.59 in.)	1149 mm (45.24 in.)	185 mm (7.28 in.)
9	Touchscreen - Top 381 mm (15.0 in.)	1022 mm (40.24 in.)	1140 mm (44.88 in.)	191 mm (7.52 in.)
	Card Reader	915 mm (36.02 in.)	1033 mm (40.67 in.)	165 mm (6.50 in.)
	Contactless Card Reader (behind Facia)	915 mm (36.02 in.)	1033 mm (40.67 in.)	165 mm (6.50 in.)
5 JKL	PIN Pad - Number 5 Key	849 mm (33.43 in.)	967 mm (38.07 in.)	136.5 mm (5.37 in.)
	Private Audio	780 mm (30.71 in.)	898 mm (35.35 in.)	59 mm (2.32 in.)
	Barcode Reader - Activation Point	757 mm (29.80 in.)	875 mm (34.45 in.)	33 mm (1.30 in.)
\$	Cash Exit/Entry	747 mm (29.41 in.)	865 mm (34.05 in.)	73 mm (2.87 in.)
in the state of th	Scalable Deposit Module	747 mm (29.41 in.)	865 mm (34.05 in.)	73 mm (2.87 in.)

			No	. 5 Key	Aud	lio Jack
acia Iten	n		1011121 ₂ 1011121 ₂ 1011121 ₂ 1011121 ₂ 1011121 ₂	Distance to Facia Item	1011121 ₂ 9 3 → 87 6 5 4	Distance to Facia Item
	Receipt		1	193 mm (7.60 in.)	1	277 mm (10.91 in.)
	Card Reader		2	86 mm (3.39 in.)	1	169 mm (6.65 in.)
	Private Audio		6	100 mm (3.94 in.)	-	-
\$	Cash Exit/Entry	Right hand	7	127 mm (5.00 in.)	7	65 mm (2.56 in.)
	Scalable Deposit Module	Right hand	7	127 mm (5.00 in.)	7	65 mm (2.56 in.)
	Barcode Reader - Activation Point		7	146 mm (5.75 in.)	8	73 mm (2.87 in.)
	Scalable Deposit Module	Left hand	8	354 mm (13.94 in.)	9	73 mm (2.87 in.)
\$	Cash Exit/Entry	Left hand	8	354 mm (13.94 in.)	9	73 mm (2.87 in.)
9	Touchscreen 381 mm (15.0 in.)	Centre	10	284 mm (11.18 in.)	10	329 mm (12.95 in.)
9	Touchscreen 483 mm (19.0 in.)	Centre	10	290 mm (11.42 in.)	10	341 mm (13.43 in.)
	Passbook Entry/Exit		10	314 mm (12.36 in.)	10	396 mm (15.59 in.)
	Cheque Entry		10	481 mm (18.82 in.)	10	545 mm (21.46 in.)
1	ID Scanner		10	482 mm (18.98 in.)	10	547 mm (21.54 in.)
	Contactless Card Reader (behind Facia)		11	77 mm (3.03 in.)	11	171 mm (6.73 in.)
\$	Coin Exit		11	275 mm (10.83 in.)	11	365 mm (14.37 in.)
	Statement Exit		11	312 mm (12.28 in.)	11	395 mm (15.55 in.)

Distance for Voice Guidance

30 degrees from vertical

SECURITY BOLTS

Bolts and anchors must be supplied by the owning organisation.

To meet security standards the ATM must be bolted to the floor, through all of the bolt holes, using bolts with anchor washers as specified below. Bolts and anchor washers are to be supplied by the owning organisation.

Make sure that the floor or plinth is capable of withstanding the loading imposed by the anchor points for these bolts.

If an adjustable plinth is used, it must be bolted to the floor to the same specification as the ATM.

The minimum specification for bolts and washers to secure the ATM to a concrete floor is:


- Bolts
 - Type either resin anchor or shield anchor bolts
 - Size M16 (5/8 in.)
 - Minimum Length **150 mm** (5.9 in.)
 - Strength high tensile (minimum ISO property class 8,8).
- Washer
 - Type flat, steel (as per DIN7349 or equivalent)
 - Size M16 (5/8 in.)
 - Outer diameter no greater than 40 mm (1.58 in.)
 - Minimum thickness 6 mm (0.2 in.).


BOLT HOLES

The ATM should be bolted to the floor or plinth, through all the holes marked 'A', using four bolts with anchor washers.


The hole marked 'B' enables an alarm to be fitted.

Short Sleeve

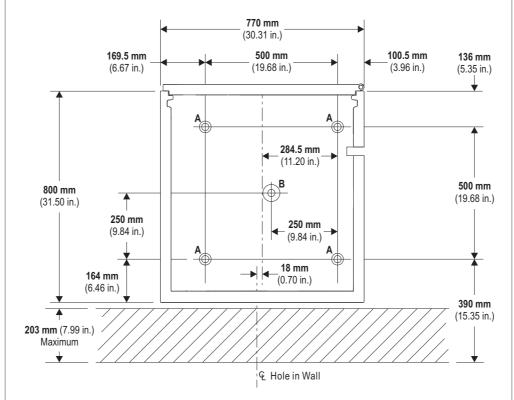

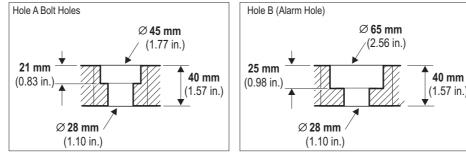

Long Sleeve

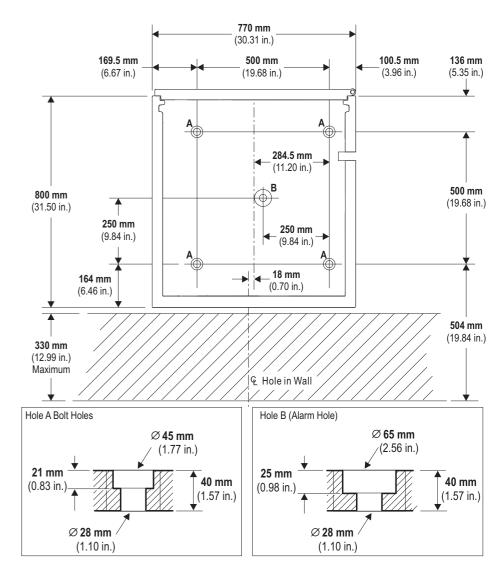


HOLE IN THE WALL

Hole at Optimum Height


This height assures the best display viewability for able-bodied people. It does NOT comply with the lowered height regulations listed in the next section.

4 High Security Enclosure

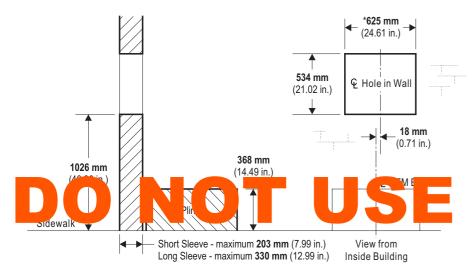

^{*}increase to 635 mm (25.00 in.) if ATM installed with cash camera

5 High Security Enclosure

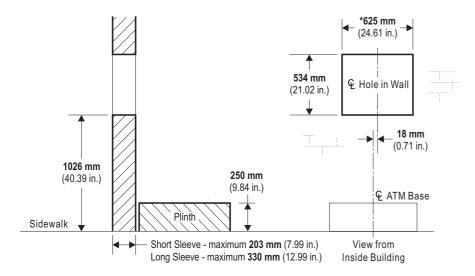

^{*}increase to 635 mm (25.00 in.) if ATM installed with cash camera


Hole at Lowered Height

It is the responsibility of the owning institution to make sure that the height from the sidewalk level to the highest operable point on the facia (see 'Facia Items') complies with any local regulations. The information contained in the following tables include the maximum plinth heights for the countries listed and are shown as examples.

For correct installation height you must consider the difference in height between the sidewalk and the interior floor, and install the ATM on a plinth if necessary.

Note that CEN certified security enclosures must have a CEN certified plinth.

Standard Collar

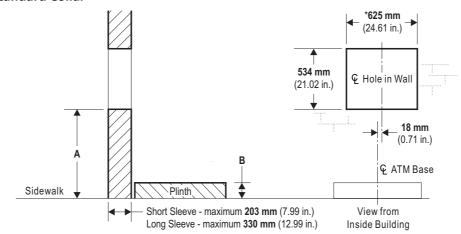


*increase to 635 mm (25.00 in.) if ATM installed with cash camera

Installation Height - ATM with no modules above touchscreen UK (CAE Parallel Approach) 4 High with 15 in. 5 High with 15 in. 4 High with 19 in. 5 High with 19 in. Touchscreen Touchscreen Touchscreen Touchscreen 847 mm 847 mm 734 mm 776 mm A - Bottom of hole (33.35 in.) (33.35 in.) (28.90 in.) (30.55 in.) 189 mm 71 mm 76 mm 0 mm B - Plinth height (2.80 in.) (2.99 in.) (7.44 in.) (0 in.)USA (ADA) 4 High with 15 in. 5 High with 15 in. 4 High with 19 in. 5 High with 19 in. Touchscreen Touchscreen **Touchscreen** Touchscreen 846 mm 846 mm 803 mm 803 mm A - Bottom of hole (33.31 in.) (33.31 in.) (31.61 in.) (31.61 in.) 188 mm 70 mm 145 mm 27 mm B - Plinth height (7.40 in.) (2.76 in.) (1.06 in.) (5.71 in.) Canada & Australia (CSA Parallel Approach) 4 High with 15 in. 5 High with 15 in. 4 High with 19 in. 5 High with 19 in. Touchscreen Touchscreen Touchscreen Touchscreen CANADA CANADA 827 mm (32.56 in.) 827 mm (32.56 in.) 759 mm 776 mm A - Bottom of hole AUSTRALIA (29.88 in.) (30.55 in.) AUSTRALIA **759 mm** (29.88 in.) 776 mm (30.55 in.) CANADA CANADA 0 mm **169 mm** (6.65 in.) **51 mm** (2.01 in.) 101 mm B - Plinth height (0 in.)

B - Pilnth height	AUSTRALIA 101 mm (3.98 in.)	AUSTRALIA 0 mm (0 in.)	(3.98 in.)
Installation He	eight - ATM with mo touchscreen	odules above	
	UK (CAE Para	llel Approach)	
	4 High with 15 in. Touchscreen	5 High with 15 in. Touchscreen	•
A - Bottom of hole	719 mm (28.31 in.)	776 mm (30.55 in.)	
B - Plinth height	61 mm (2.40 in.)	0 mm (0 in.)	SED
	4 High with 15 In. Touchscreen	5 High with 15 in. Touchscreen	
A - Bottom of hole	788 mm (31.02 in.)	788 mm (31.02 in.)	
B - Plinth height	130 mm (5.12 in.)	12 mm (0.47 in.)	
		alia (CSA Parallel oach)	
	4 High with 15 in. Touchscreen	5 High with 15 in. Touchscreen	
A - Bottom of hole	CANADA 769 mm (30.28 in.) AUSTRALIA 759 mm (29.88 in.)	776 mm (30.55 in.)	
B - Plinth height	CANADA 111 mm (4.37 in.) AUSTRALIA 101 mm (3.98 in.)	0 mm (0 in.)	

Hole in the Wall Overlap - Standard Collar - ATM

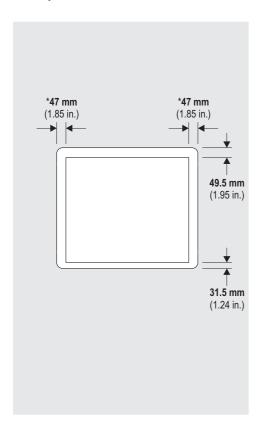


*decreased to 42 mm (1.65 in.) if ATM installed with cash camera


VENTS LOCATION - AIR FLOW

Unrestricted air flow is required on both the left and right hand side and at the rear of the ATM. There must be no obstruction of the vents at any time.

If a third-party surround/topper is fitted then equivalent venting, or a hot air extraction system must be installed within the surround/topper.

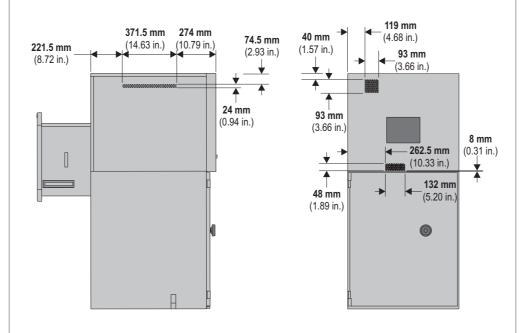


CLEARANCES - TOPBOX DOOR

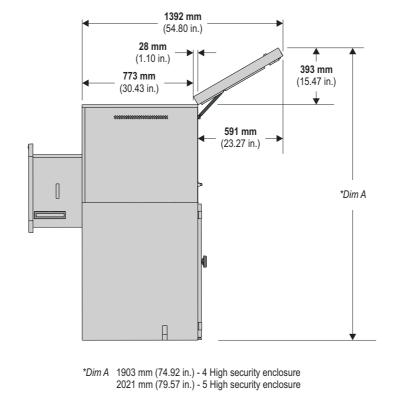

CLEARANCES - CORRIDOR

The dimensions shown assume the ATM is being moved using equipment that does not extend beyond the ATM or packaging.

A surrounding clearance of **6 mm** (0.24 in.) has been allowed in the dimensions.

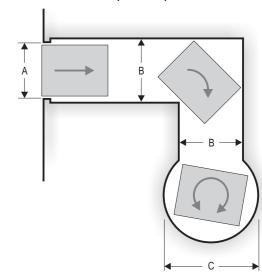

		Packaged ATM (pallet and carton)	Unpackaged ATM
Α	Doorway or straight corridor	970 mm (38.19 in.)	782 mm (30.79 in.)
В	Corridor with corner	1186 mm (46.69 in.)	1003 mm (39.49 in.)
С	Rotation about centre	1713 mm (67.44 in.)	1478 mm (58.19 in.)

SERVICING AREAS - OPTIMUM - SINGLE ATM


The optimum servicing area provides the best access to the ATM for all servicing and operation tasks.

Wherever possible the ATM should be installed within the optimum servicing area.


If the optimum area is not available then refer to Servicing Areas - Minimum. However note that installing the ATM in the minimum servicing area may increase the servicing and/or upgrading time over a ATM installed using the optimum area.

Always leave as much space as possible around the ATM to facilitate safe operation and servicing.

Short Sleeve

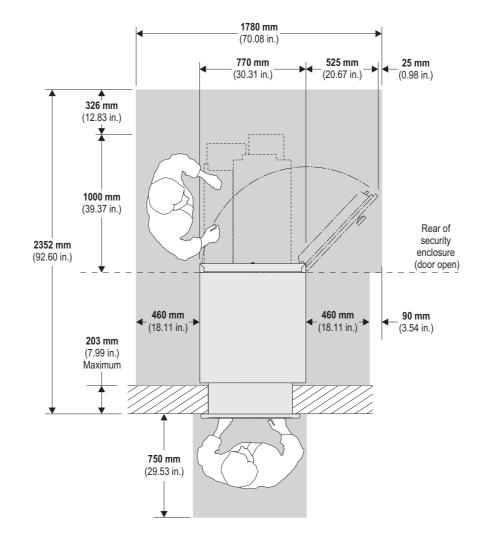

Long Sleeve

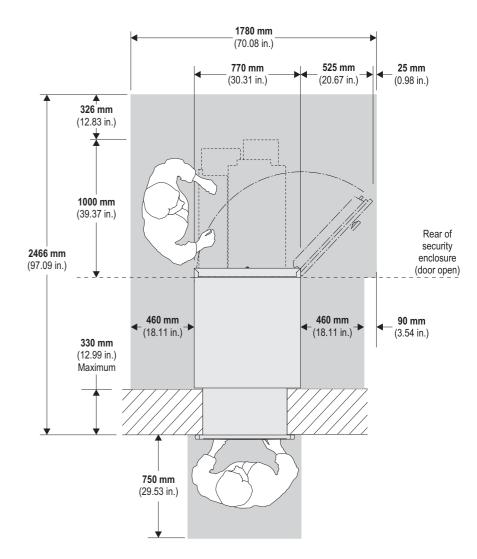

SERVICING AREAS - OPTIMUM - SIDE BY SIDE


The optimum servicing area provides the best access to the ATM for all servicing and operation tasks.

Wherever possible the ATM should be installed within the optimum servicing area.


If the optimum area is not available then refer to Servicing Areas - Minimum. However note that installing the ATM in the minimum servicing area may increase the servicing and/or upgrading time over a ATM installed using the optimum area.

Always leave as much space as possible around the ATM to facilitate safe operation and servicing.

Short Sleeve

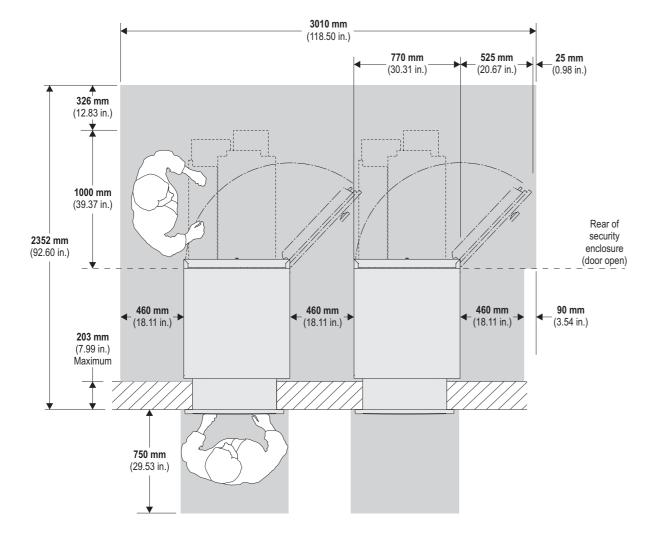

Long Sleeve

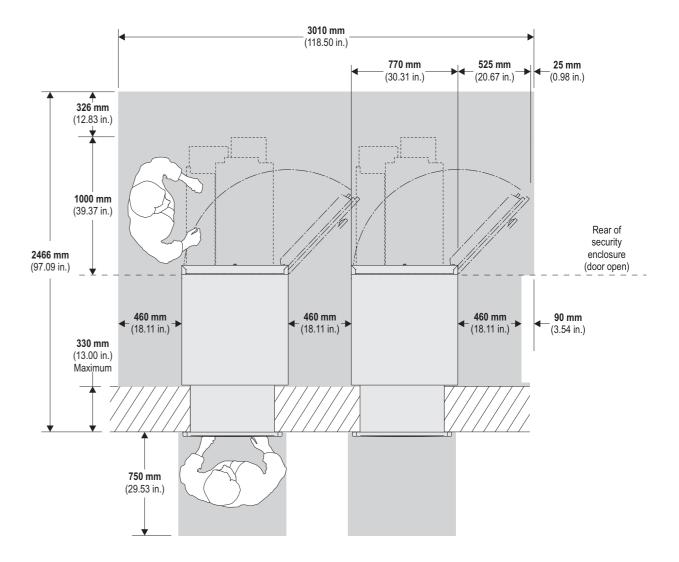

SERVICING AREAS - MINIMUM - SINGLE ATM

This is the **minimum** area required for operating and servicing the ATM.

Wherever possible the ATM should be installed within the optimum servicing area. Installing the ATM in the minimum servicing area may increase the servicing and/or upgrading time.

If the minimum area is not available then consult your local service representative. Every site is different and you may still be able to install the ATM but with further increases to servicing and/or upgrading time.

If you install in the minimum area then note that doors can open, and devices rack out, beyond the area shown. Always leave as much space as possible around the ATM to facilitate safe operation and servicing.

Short Sleeve

Minimum clearance area is composed of:

Basic clearance


 \times

Mandatory left OR right

If configured with SDM, SCPM, BNA or GBNA/RU on left hand side - 1a Mandatory and either 1b OR 2

If configured with SDM, SCPM, BNA or GBNA/RU on right hand side - 1b Mandatory and either 1a OR 2

All other configurations - 1a and 1b OR 2

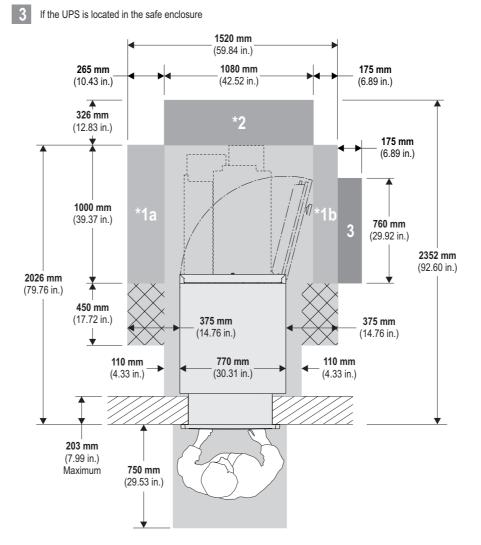

^{*} denotes small (<10% volume) infringements permitted in these areas

Long Sleeve

Minimum clearance area is composed of:

Basic clearance


Mandatory left OR right

If configured with SDM, SCPM, BNA or GBNA/RU on left hand side - 1a Mandatory and either 1b OR 2

If configured with SDM, SCPM, BNA or GBNA/RU on right hand side - 1b Mandatory and either 1a OR 2

All other configurations - 1a and 1b OR 2

3 If the UPS is located in the safe enclosure

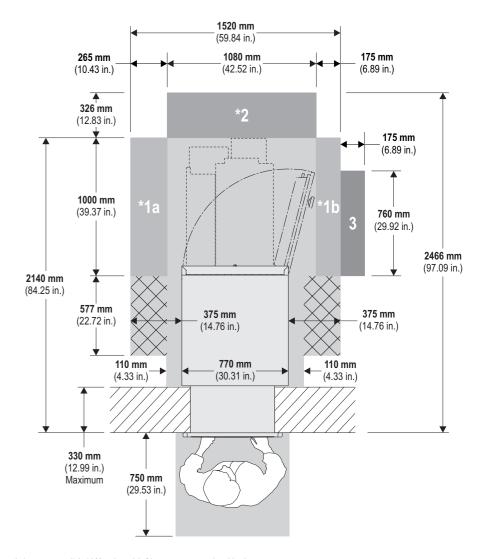

 $^{^{\}star}$ denotes small (<10% volume) infringements permitted in these areas

SERVICING AREAS - MINIMUM - SIDE BY SIDE

This is the minimum area required for operating and servicing the ATM.

Wherever possible the ATM should be installed within the optimum servicing area. Installing the ATM in the minimum servicing area may increase the servicing and/or upgrading time.

If the minimum area is not available then consult your local service representative. Every site is different and you may still be able to install the ATM but with further increases to servicing and/or upgrading time.

If you install in the minimum area then note that doors can open, and devices rack out, beyond the area shown. Always leave as much space as possible around the ATM to facilitate safe operation and servicing.

Short Sleeve

Minimum clearance area is composed of:


Basic clearance

If configured with SDM, SCPM, BNA or GBNA/RU on left hand side - 1a Mandatory and either 1b OR 2

If configured with SDM, SCPM, BNA or GBNA/RU on right hand side - 1b Mandatory and either 1a OR 2

All other configurations - 1a and 1b OR 2

If the UPS is located in the safe enclosure

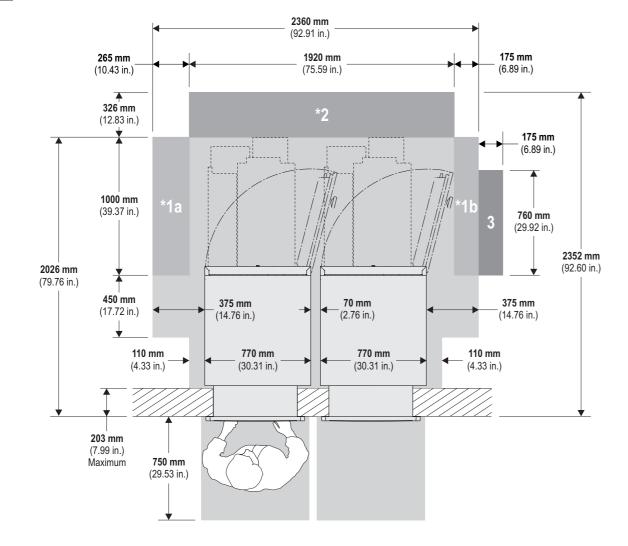

^{*} denotes small (<10% volume) infringements permitted in these areas

Long Sleeve

Minimum clearance area is composed of:


Basic clearance

If configured with SDM, SCPM, BNA or GBNA/RU on left hand side - 1a Mandatory and either 1b OR 2

If configured with SDM, SCPM, BNA or GBNA/RU on right hand side - 1b Mandatory and either 1a OR 2

All other configurations - 1a and 1b OR 2

3 If the UPS is located in the safe enclosure

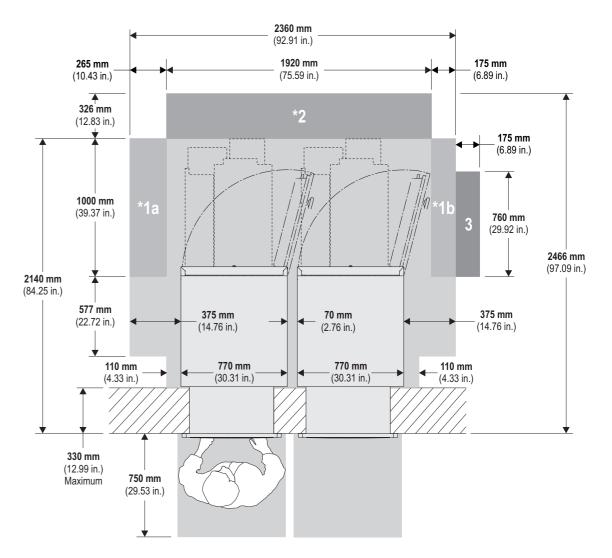

^{*} denotes small (<10% volume) infringements permitted in these areas