
High fronted pull-out – gallery – D


Web code – click on the code or enter it in the Product Configurator: DQC69A

Planning

Space requirement in cabinet

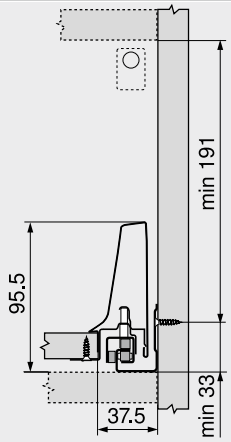


Installation dimensions – front – screw-on

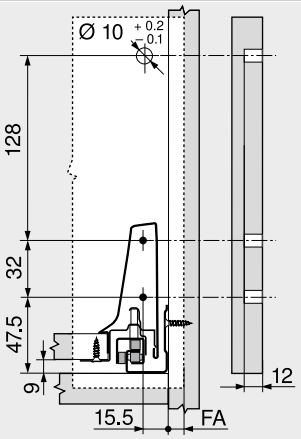


FA Front overlay


Drilling distances – front – INSERTA | knock-in

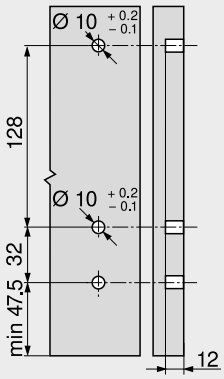


Installation dimensions – back

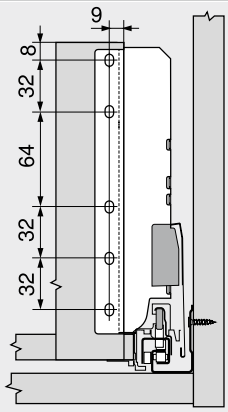

Cutting – 16 mm chipboard

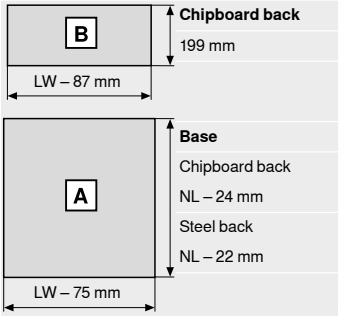

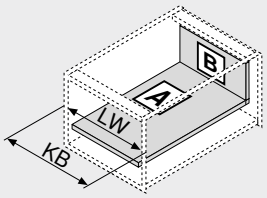

LW Internal cabinet width
NL Nominal length

LW Internal cabinet width
KB Cabinet width

Reference pages

Overview	291	Accessories	328	**Assembly, removal and adjustment**	
SERVO-DRIVE for **LEGRABOX** | **MERIVOBOX** | **TANDEMBOX**	362	Cabinet profile fixing positions	334		
		Blum services	602		
		More technical details	708	Short URL	
TIP-ON BLUMOTION for **LEGRABOX** | **MERIVOBOX** | **TANDEMBOX**	394			www.blum.com/a350	
ORGA-LINE for **TANDEMBOX**	554				
CABLOXX	594				