
High fronted pull-out – gallery – C


Web code – click on the code or enter it in the Product Configurator: DQC92M

Planning

Space requirement in cabinet

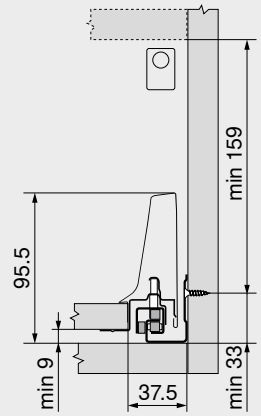


Installation dimensions – front – screw-on

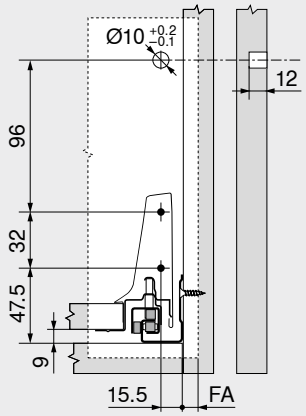


FA Front overlay


Drilling distances – front – INSERTA | knock-in

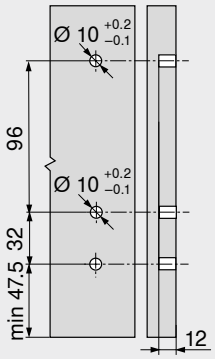


Installation dimensions – back

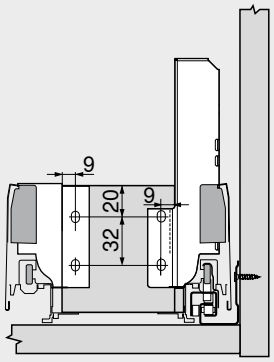

Cutting – 16 mm chipboard

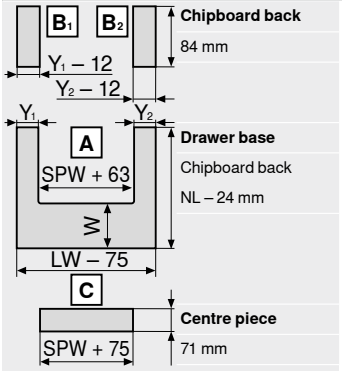

Chipboard back	84 mm
Drawer base	Chipboard back NL – 24 mm
Centre piece	71 mm

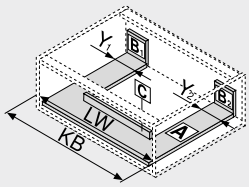


LW Internal cabinet width
NL Nominal length
SPW Internal cabinet width between the inner drawer sides
W = NL drawer sides exterior – NL drawer sides interior – 10 mm

	Y min. (mm)	Y max. (mm)
BLUMOTION	48	225
TIP-ON BLUMOTION	75	225

LW Internal cabinet width
KB Cabinet width

Drilling distances – centre piece

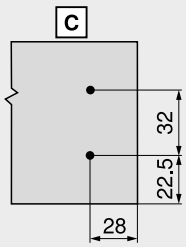

Reference pages

Overview	291	Accessories	328	**Assembly, removal and adjustment**	
SERVO-DRIVE for **LEGRABOX** | **MERIVOBOX** | **TANDEMBOX**	362	Cabinet profile fixing positions	334		
		Blum services	602		
		More technical details	708	Short URL	
TIP-ON BLUMOTION for **LEGRABOX** | **MERIVOBOX** | **TANDEMBOX**	394			www.blum.com/a350	
ORGA-LINE for **TANDEMBOX**	554				
CABLOXX	594				