
TANDEMBOX

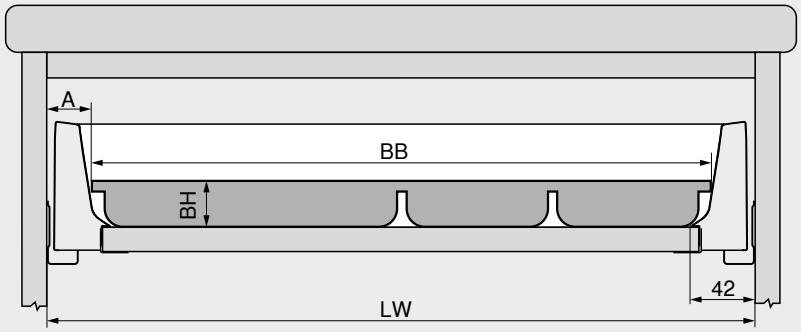


The curved design of drawer sides of TANDEMBOX must be taken into account when calculating the cutlery insert width.
The cutlery insert width required is dependent upon the cutlery insert height.


Cutting dimensions for cutlery insert
Height BH as desired
Length = nominal length NL of drawer side – 26 mm
Width BB = internal cabinet width LW – 2 x A

Example – drawer side height M
Cutlery insert height BH = 40 mm
Internal cabinet width LW = 330 mm
Cutlery insert width BB = 330 – 2 x 26 = 278 mm

Height of drawer side N

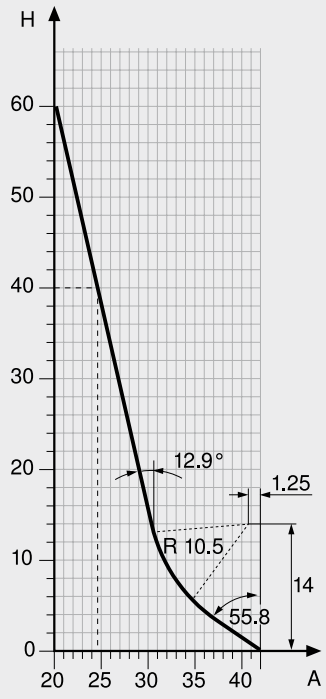

Height of drawer side M

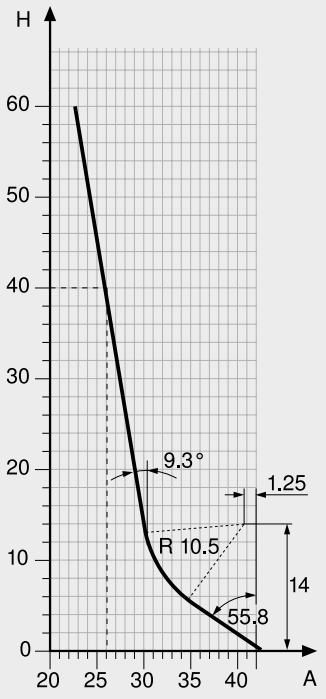

Height of drawer side K

