



\_\_\_\_RTC\_INT

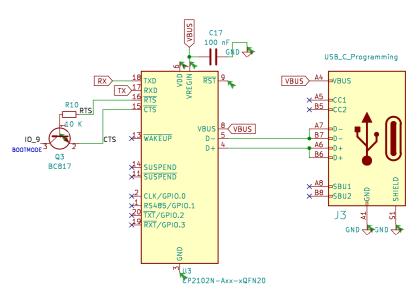

IMPORTANT: This QFN20 version does not have a CTR pin. I've read comments that CTS might work instead: https://www.reddit.com/r/AskElectronics/comments/ta5fbt/comment/hzz5ial/

## PCF8563T Real time clock via I2C

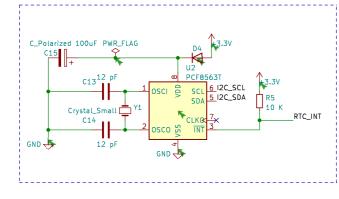

## Charge and power management

