




(25)6 ø 12

<del>\_\_\_(</del> 45 )ø 8 /15

(29) 2 ø 12

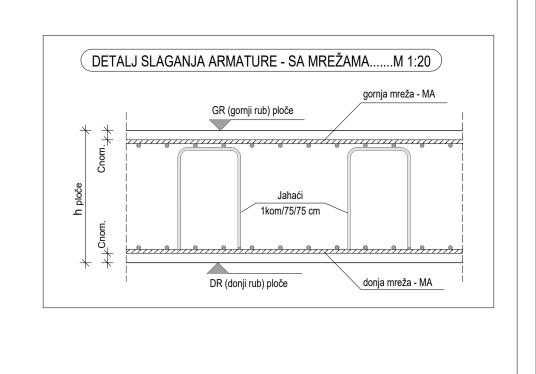

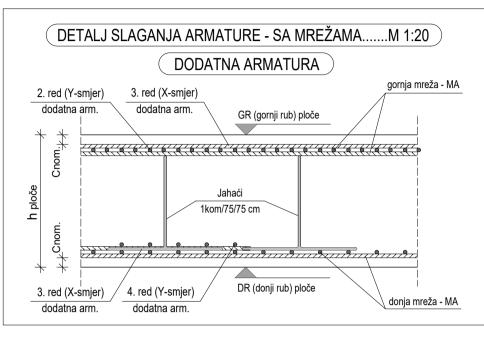

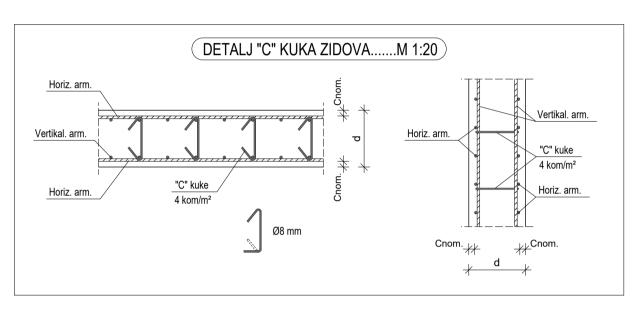


arma	ture u cm		Sidrenje arm	ature u cm	
37	dobra prionjivost	loša prionjivost	C30/37	dobra prionjivost	loša prionjivost
	≥ 43	≥61	ø8	≥ 29	≥41
	≥ 54	≥76	ø10	≥ 36	≥ 51
	≥ 64	≥92	ø12	≥ 43	≥61
	≥ 75	≥ 107	ø14	≥ 50	≥71
	≥ 86	≥ 122	ø16	≥ 57	≥ 82
	≥ 107	≥ 153	ø20	≥ 71	≥ 102
1	≥ 134	≥ 191	ø25	≥ 89	≥ 127
	≥ 150	≥ 214	ø28	≥ 100	≥ 143
:	≥ 171	≥ 245	ø32	≥ 114	≥ 163

1. PRIJE POSTAVLJANJA SVJEŽEG BETONA NA RADNOJ REŠKI UKLONITI POVRŠINSKI SLOJ BETONA. 2. PJESKARENJEM ILI DRUGIM METODAMA OBRADITI RADNU REŠKU DO POJAVE ČISTOG AGREGATA 3. SVE RADNE REŠKE NEPOSREDNO PRIJE BETONIRANJA ISPRATI VODOM I OSTAVITI DA SE OSUŠI. 4. POVRŠINA BETONA NA RADNOJ REŠCI MORA OSTATI GRUBO OBRAĐENA

5. PRIJE BETONIRANJA RADNU REŠKU ZALITI CEMENTNIM MLIJEKOM. 6. PREDUZETI MJERE IZBJEGAVANJA SEGREGACIJE, OSOBITO KOD HORIZONTALNIH RADNIH REŠKI.

- DIMENZIJE PREKONTROLIRATI NA GRADILIŠTU

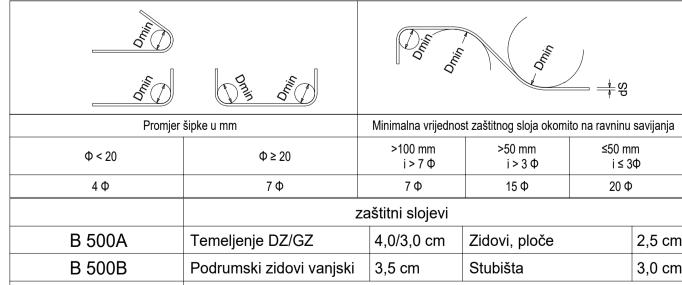

C30/37, C12/15 debljine zaštitnih slojeva prema HRN EN 1992-1-1

V/Š = 594 / 1379 (0.82m2)