

Mini-CMoy Pocket Amp Assembly Information


Detailed instructions online at http://tangentsoft.net/audio/cmoy-tutorial/

All drawings except last 2:1 scale

1. Halve protoboard; add jumpers:



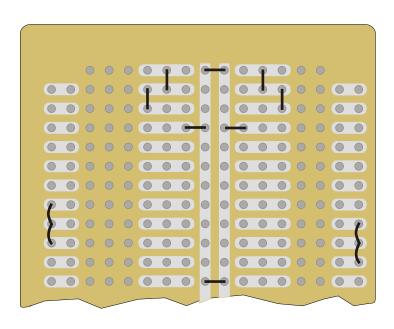

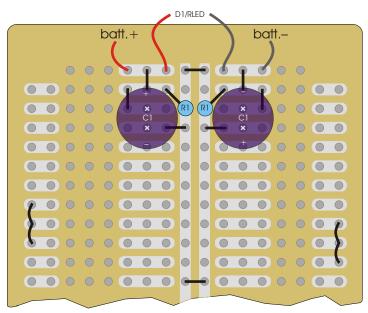

3. Add amplifier section:

4. Add panel components, enclose, and enjoy!

