



Valet stand — frame


Front elevation · side elevation · plan · tray top 1300 mm · corners R45 outside / R12 inside · all dimensions in mm

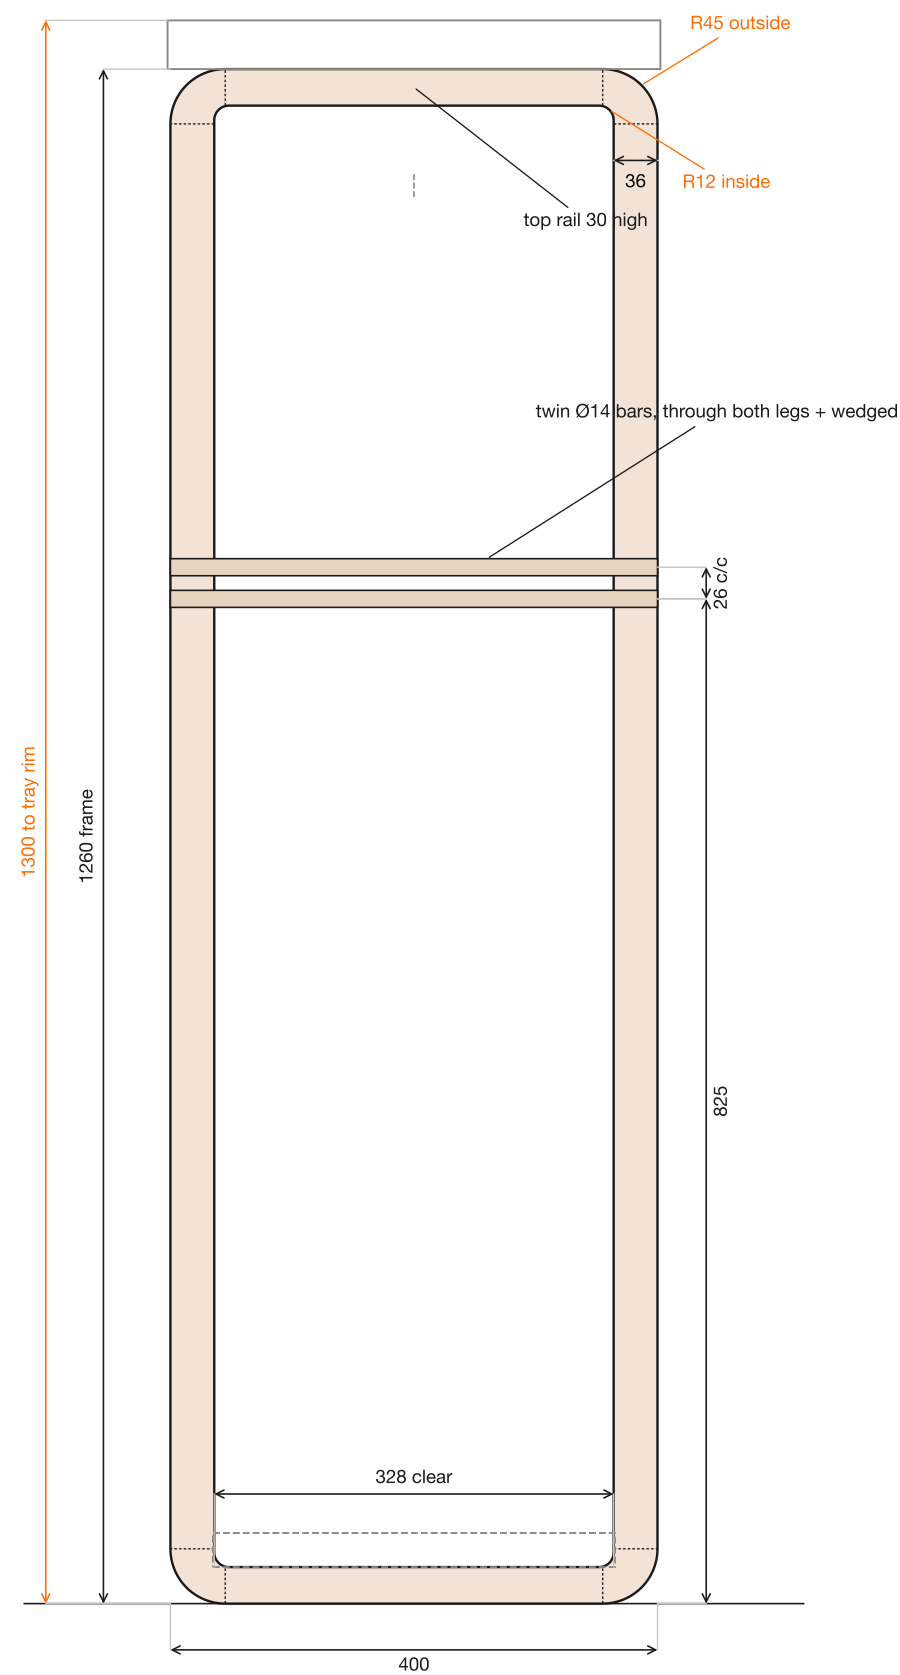

FRONT ELEVATION

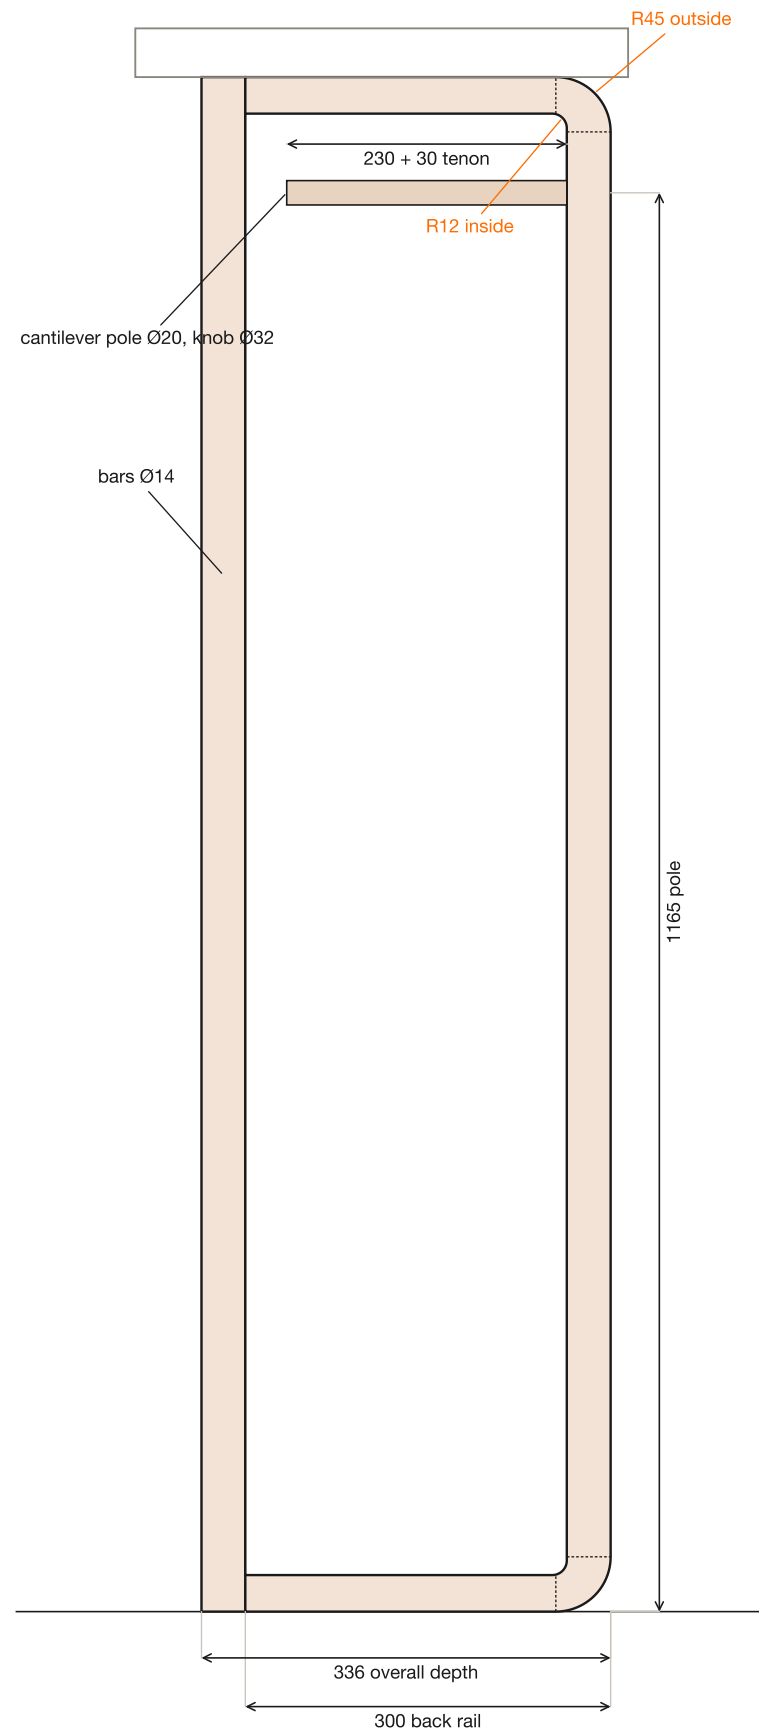

SIDE ELEVATION

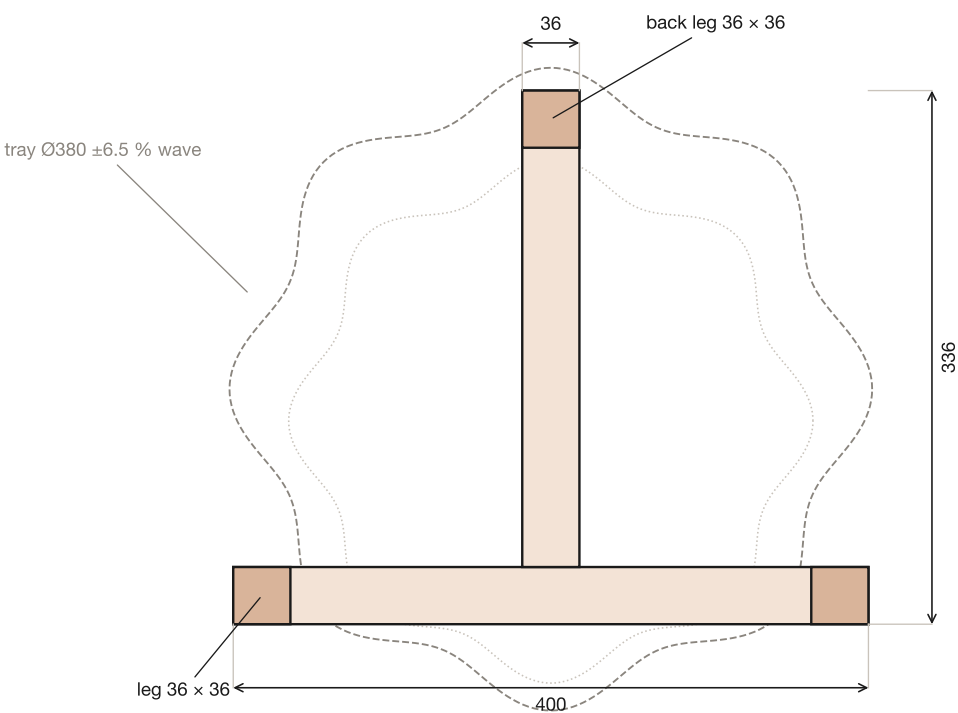

PLAN (tray dashed)

- Frame stock: mahogany (sipo), finished 36 mm thick.
- Each rounded corner is its own piece cut from a 45° plank (sheet 3); joints at the dashed lines, 2× Ø8 × 70 dowels each (35 + 35).
 - Legs and rails are straight; only the 6 corner pieces carry R45 outside / R12 inside (template + flush-trim bit).
 - Back rails join the back face of the front top / bottom rails with 2× Ø8 dowels side by side.
 - Edges eased R2.5 after assembly.
 - Renders show the twin bars side by side; in a 36 mm leg build them stacked (as drawn).

Cut list · order of work · tray top 1300 mm · corners R45 outside / R12 inside · all dimensions in mm

	PART	QTY	LENGTH	SECTION	WOOD	NOTES
A	Front leg	2	1170	36 × 36	Mahogany	straight; 2× Ø8 dowel holes, 35 deep, each end
D	Back leg	1	1170	36 × 36	Mahogany	as A
B	Front rails (top + bottom)	2	310	30 × 36	Mahogany	straight, grain along; dowels into the corner pieces at both ends
E	Back rails (top + bottom)	2	255	30 × 36	Mahogany	straight; front end dowels into the back face of B, back end into a corner piece
K	Corner pieces	6	cut 75	rip 42 × 36	Mahogany	from a plank with the grain at 45°; R45 outside / R12 inside (sheet 3)
G	Trouser bars	2	400	Ø14	Mahogany	through both front legs at 825 / 851 from floor = 780 / 806 from leg bottom
H	Hanger pole	1	260	Ø20	Mahogany	30 mm into D at 1165 from floor = 1120 from leg bottom; knob Ø32 × 24
—	Joint dowels	28	70	Ø8		14 joints × 2 (6 corners × 2 + 2 back rails)

Corner pieces: see sheet 3 (45° plank layout, true scale).

Order of work



1. Mill all mahogany to 36 mm; rip legs to 36 × 36 and cut them to 1170.
2. Cut the straight rails: 2× 310 (front) and 2× 255 (back), 30 × 36.
3. Rip a 45° plank to 42 wide, cut 6 corner blanks 75 long; bandsaw + flush-trim to the R45/R12 template.
4. Dowel holes (Ø8, 35 deep, 2 per joint) in every leg end, rail end and corner-piece end; bar holes through both front legs.
5. Glue the front ring (2 legs + 2 rails + 4 corners + bars), then the back C (back leg + 2 rails + 2 corners), then join.
6. Drill the Ø20 pole hole into D at 1165, 30 deep; ease all edges R2.5; finish.

Valet stand — 45° corner pieces

Front view of the top-right corner, true scale · frame 36 mm thick · grain: leg vertical, corner at 45°, rail horizontal · all dimensions in mm

Slightly rounded · R45 / R12

More rounded · R88 / R55

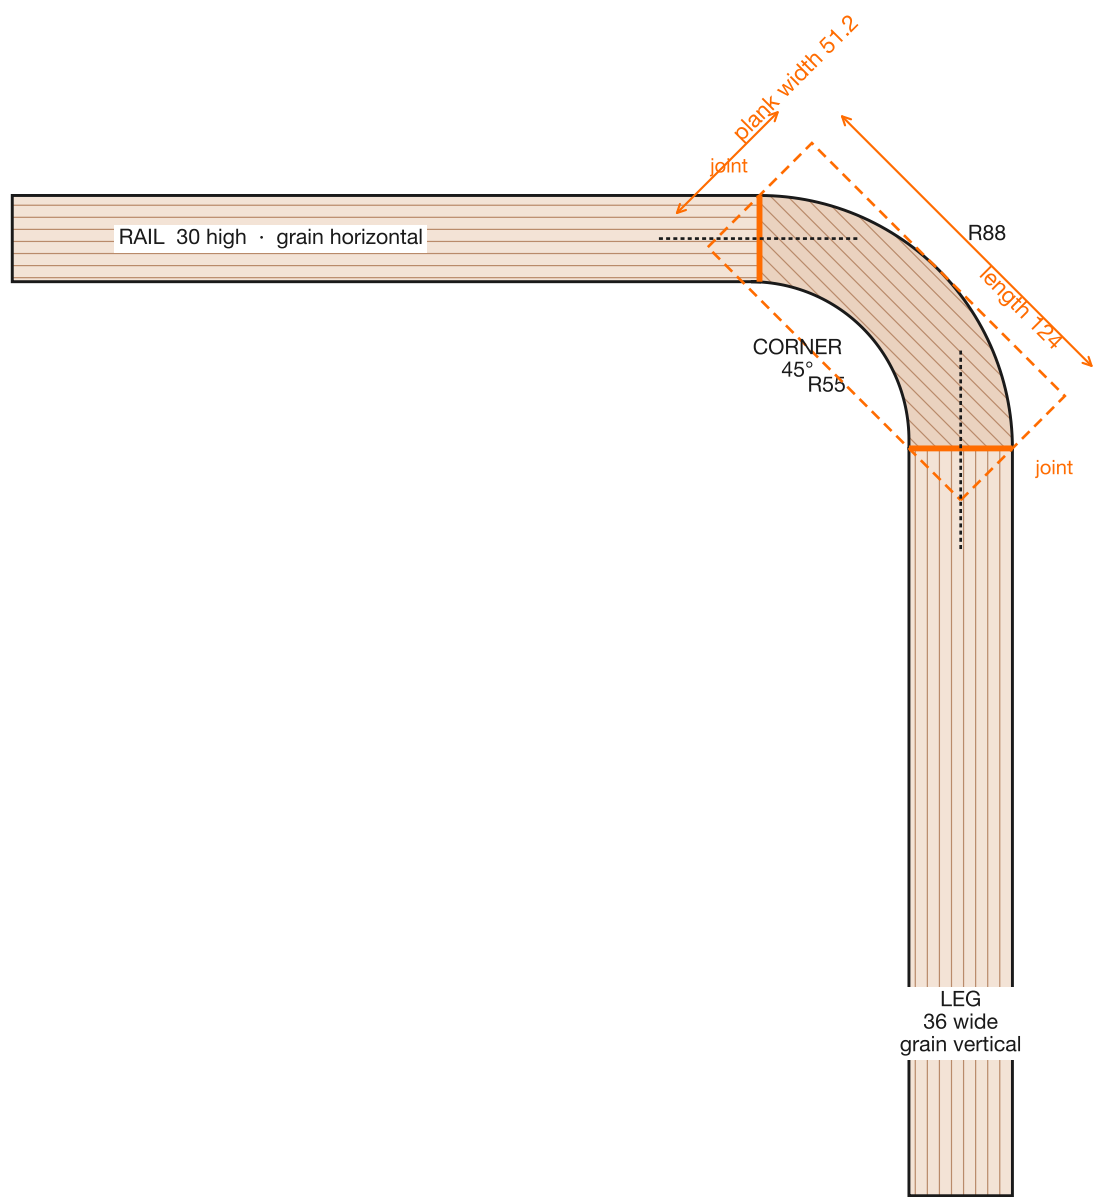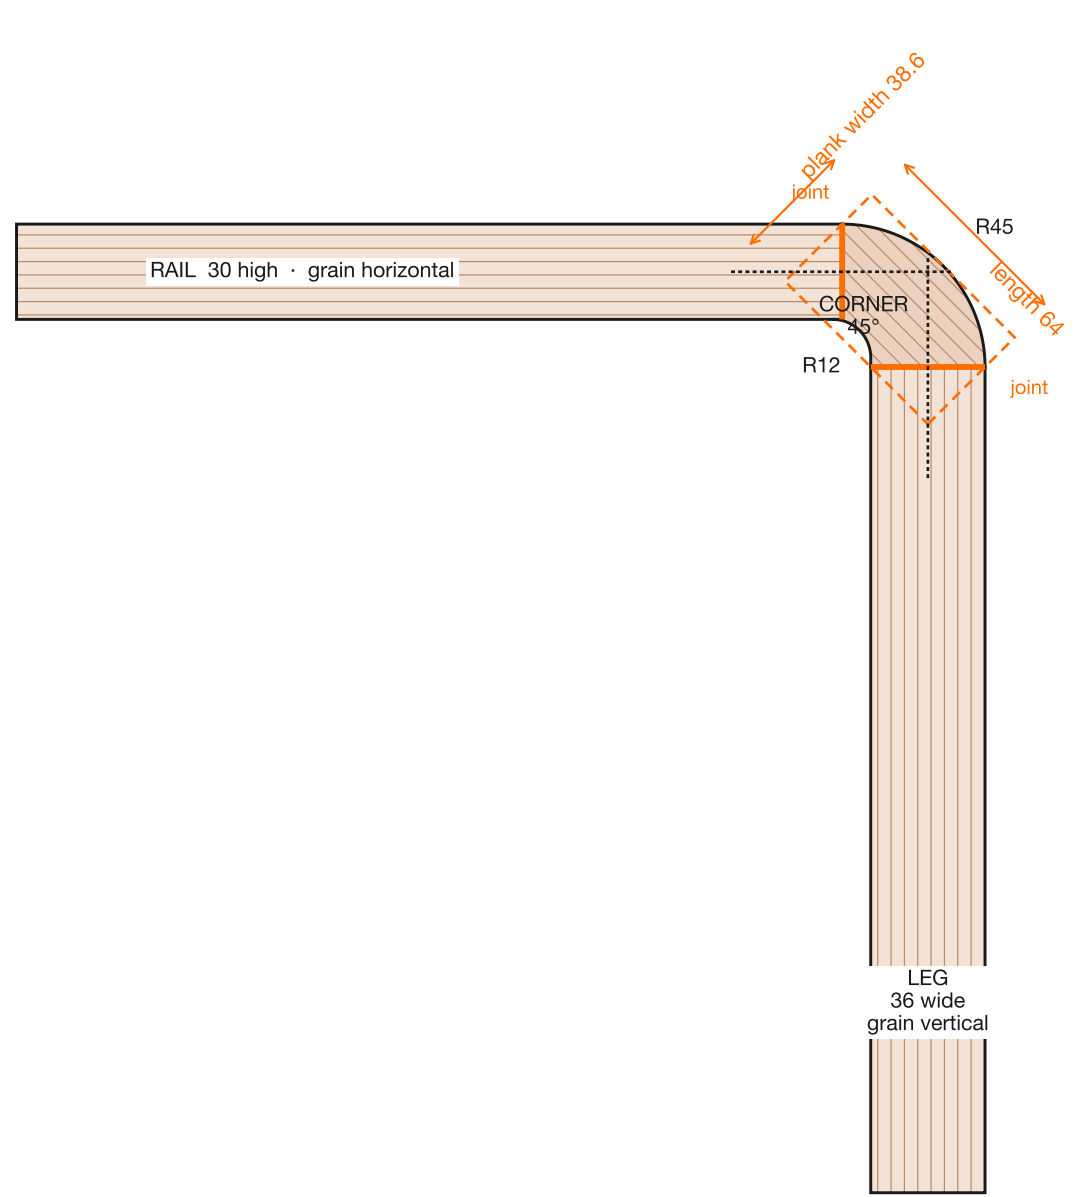

	Slightly rounded	More rounded
Corner plank: width (in the frame plane)	38.6 (rip to 42)	51.2 (rip to 55)
Corner plank: length along the grain	64 (cut to 75)	124 (cut to 136)
Corner plank: thickness	36 (same as the frame)	36 (same as the frame)
Corner pieces needed	6 (4 front frame + 2 back)	6 (4 front frame + 2 back)
Legs (×3), straight	1170	1084
Front rails (×2), straight, 30 high	310	224
Back rails (×2), straight, 30 high	255	212

- How to make one corner
1. Rip a plank to the width above, crosscut it to the length above.
 2. Lay the paper/MDF template on it at 45° to the grain.
 3. Bandsaw 2 mm proud, flush-trim to the template.
 4. Square butt joints where the curve meets leg and rail
- (orange lines): 2× Ø8 × 70 dowels each.
- Result: no short grain anywhere. The worst grain direction on the curve is 45°, never 90°.