



Valet stand — frame


Front elevation · side elevation · plan · tray top 1300 mm · corners R45 outside / R12 inside · all dimensions in mm

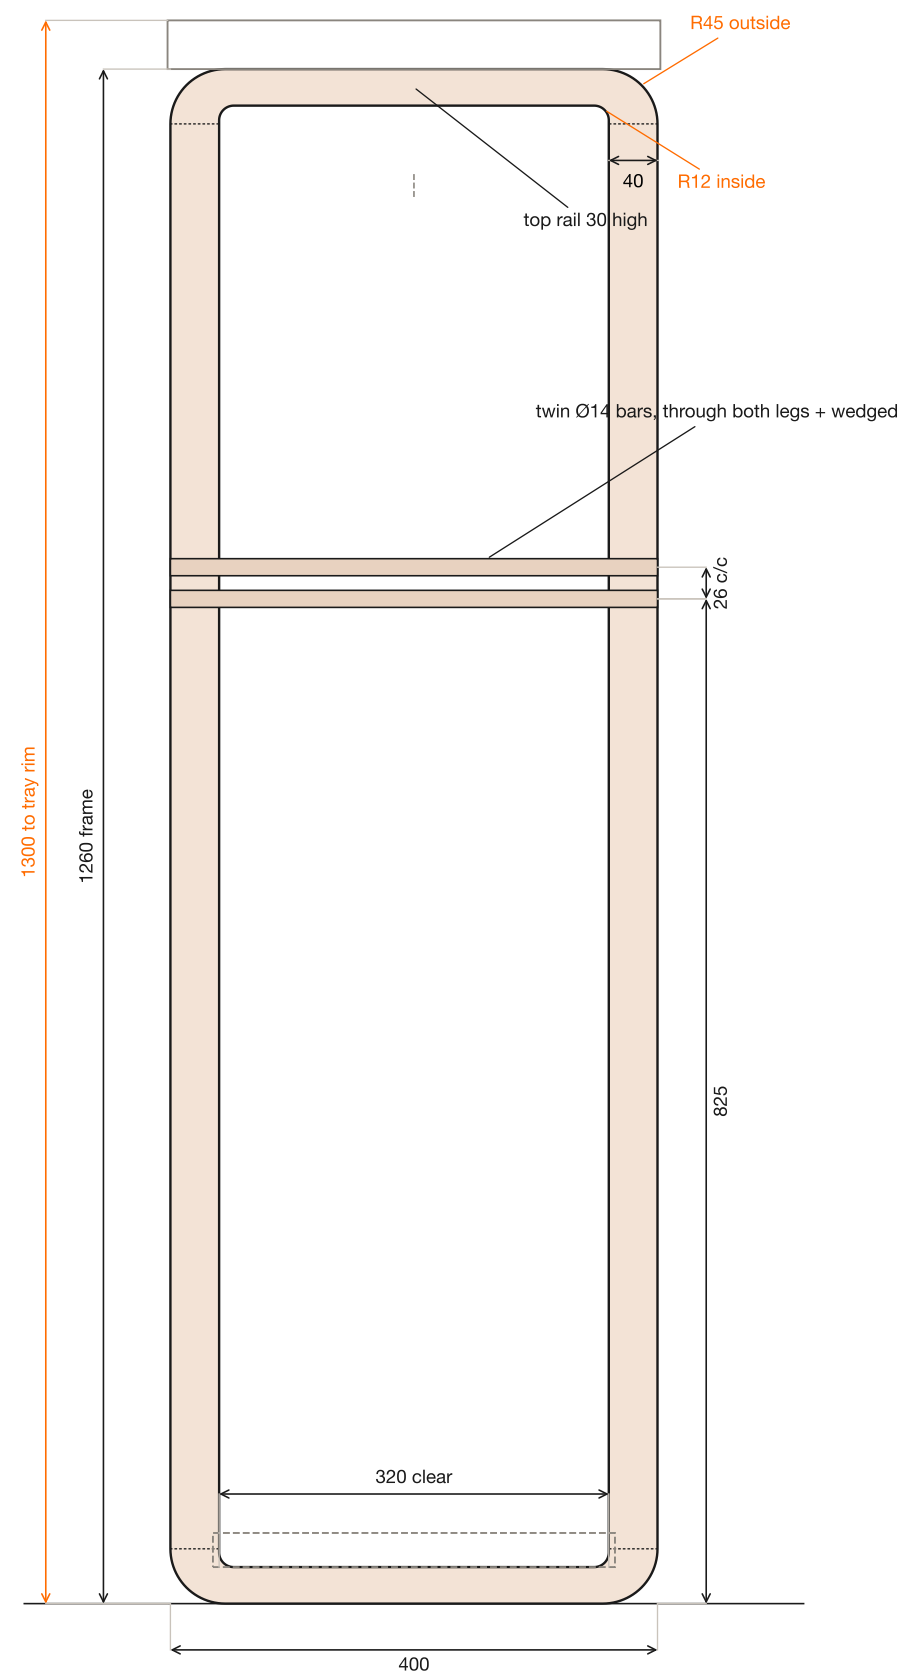

FRONT ELEVATION

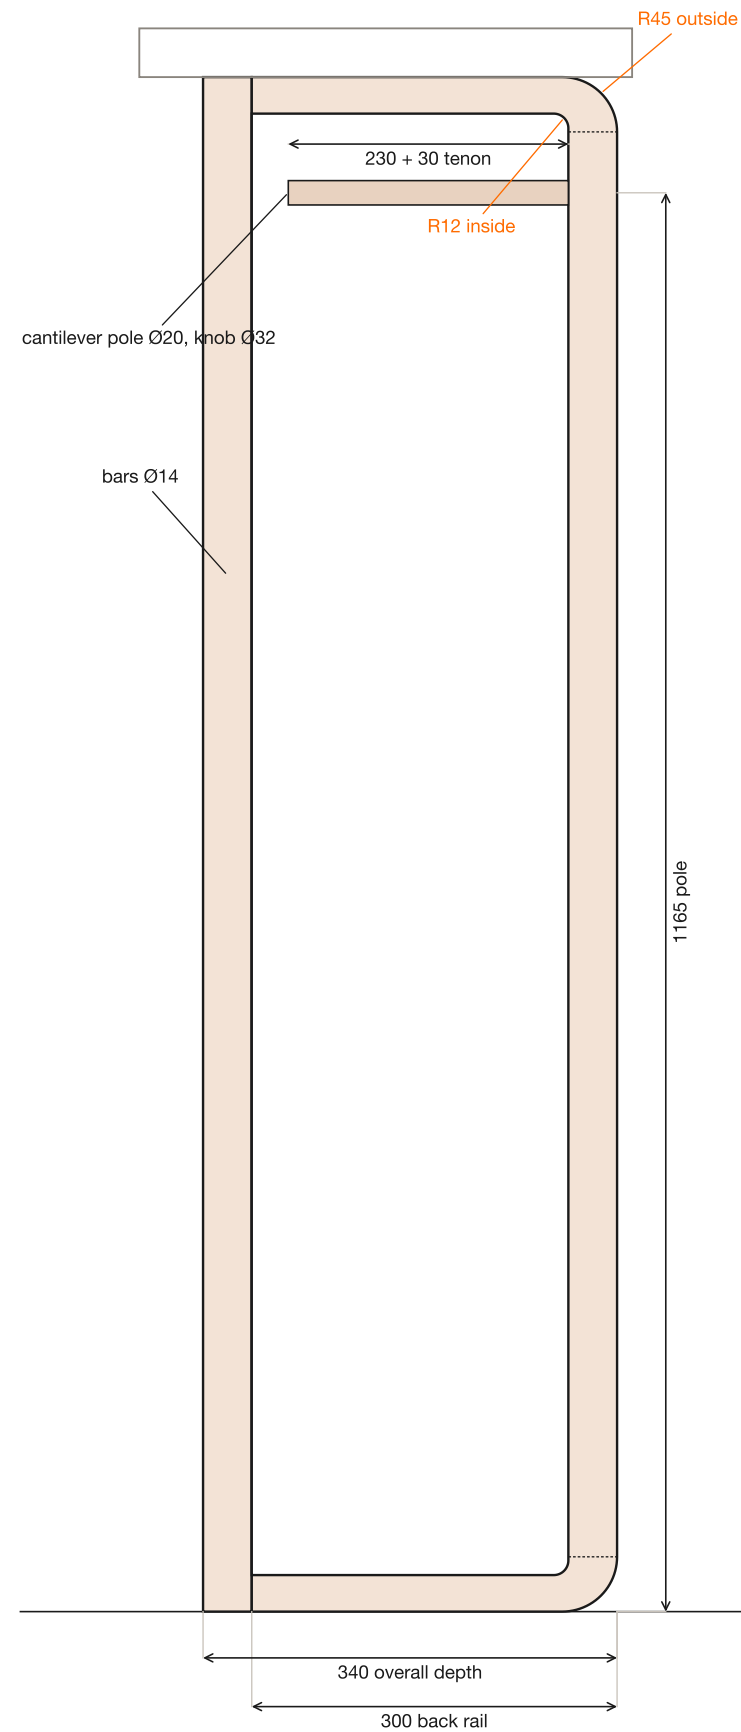

SIDE ELEVATION

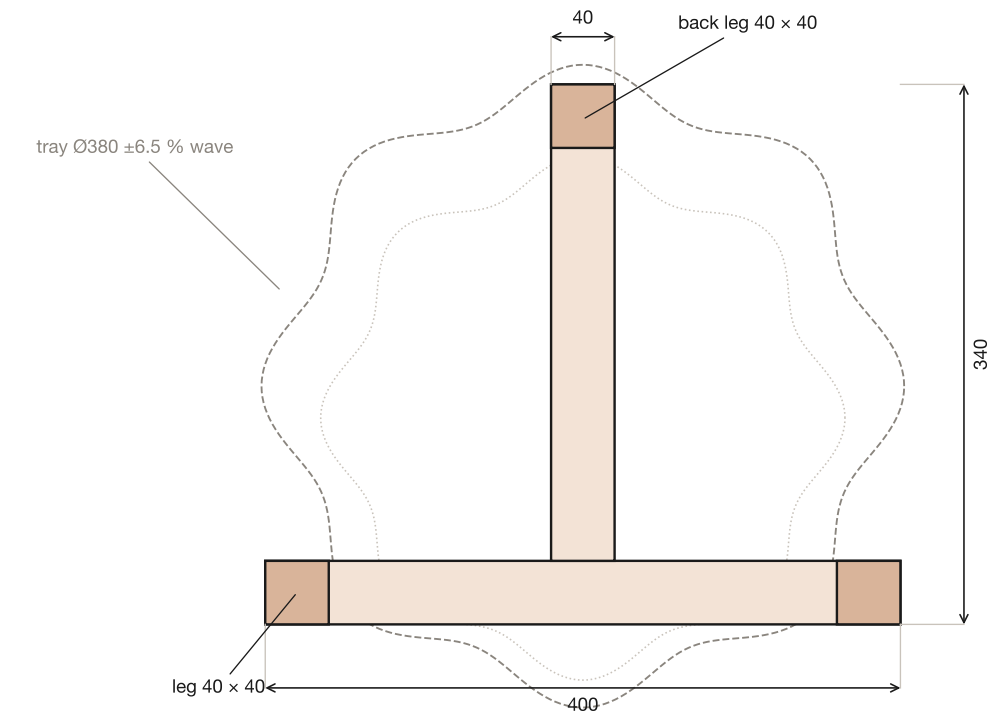

PLAN (tray dashed)


Frame stock: mahogany (sipo), finished 40 mm thick.

- Rounded corners are carried by the rail pieces; legs join them where the curve ends (dashed lines), 2x Ø8 x 70 dowels per joint (35 + 35).
- Rails cut from 45-mm-tall blanks; outer R45 and inner R12 with a template + flush-trim bit (inner: bandsaw + spindle sander).
- Back rails join the back face of the front top / bottom rails with 2x Ø8 dowels side by side.
- Edges eased R2.5 after assembly.
- Renders show the twin bars side by side; in a 40 mm leg build them stacked (as drawn).

Cut list · part details · tray top 1300 mm · corners R45 outside / R12 inside · all dimensions in mm

	PART	QTY	LENGTH	SECTION	WOOD	NOTES
A	Front leg	2	1170	40 × 40	Mahogany	straight between the curved rail pieces; 2× Ø8 dowel holes each end
B	Front top rail	1	400	45 × 40	Mahogany	outer R45 both ends, inner R12; rail 30 high in the middle
C	Front bottom rail	1	400	45 × 40	Mahogany	mirror of B; sits on the floor (glides optional)
D	Back leg	1	1170	40 × 40	Mahogany	as A
E	Back top rail	1	300	45 × 40	Mahogany	R45/R12 at the back end only; front end joins B with 2× Ø8 dowels
F	Back bottom rail	1	300	45 × 40	Mahogany	mirror of E; joins C with 2× Ø8 dowels
G	Trouser bars	2	400	Ø14	Mahogany	through both front legs at 825 / 851 from floor = 780 / 806 from leg bottom
H	Hanger pole	1	260	Ø20	Mahogany	30 mm into D at 1165 from floor = 1120 from leg bottom; knob Ø32 × 24
—	Alt: single bar	1	400	Ø24	Mahogany	instead of G, at 838

B / C — front top & bottom rail (blank 400 × 45 × 40), dowel holes Ø8 into the legs

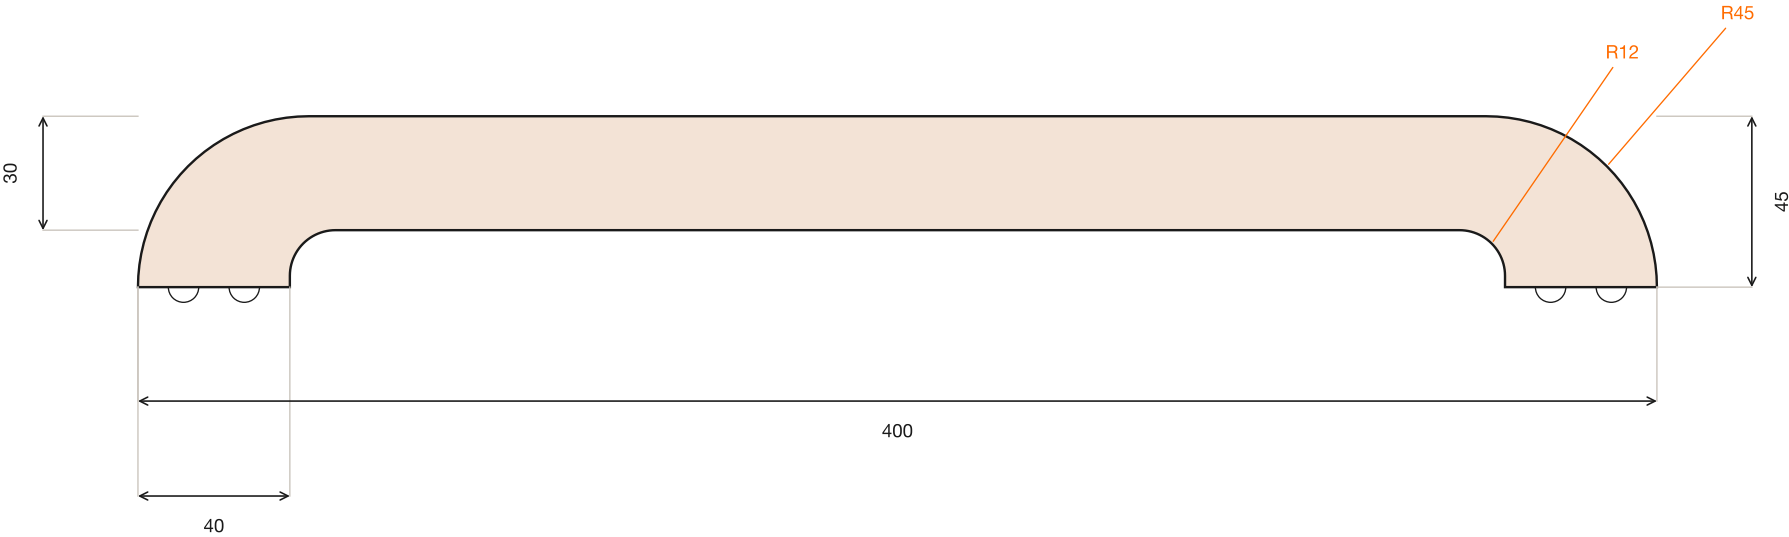

Order of work

1. Mill all mahogany to 40 mm; rip legs to 40 × 40.
2. Cut rail blanks 45 mm tall; make one MDF template with R45/R12 and copy all four rail pieces with a flush-trim bit.
3. Cut legs to 1170; drill 2× Ø8 dowel holes, 35 mm deep, both ends (centres 9 mm either side of the leg centre); 70 mm dowels bridge the short grain at the foot of each curve.
4. Drill the twin Ø14 bar holes through both front legs at 825 and 851 before glue-up.
5. Glue the front frame flat (A + B + C + bars), then the back C (D + E + F), then dowel the back C into B and C.
6. Drill the Ø20 pole tenon hole into D at 1165, 30 deep; ease all edges R2.5; finish.