



Valet stand — frame


Front elevation · side elevation · plan · tray top 1300 mm · corners R88 outside / R55 inside · all dimensions in mm

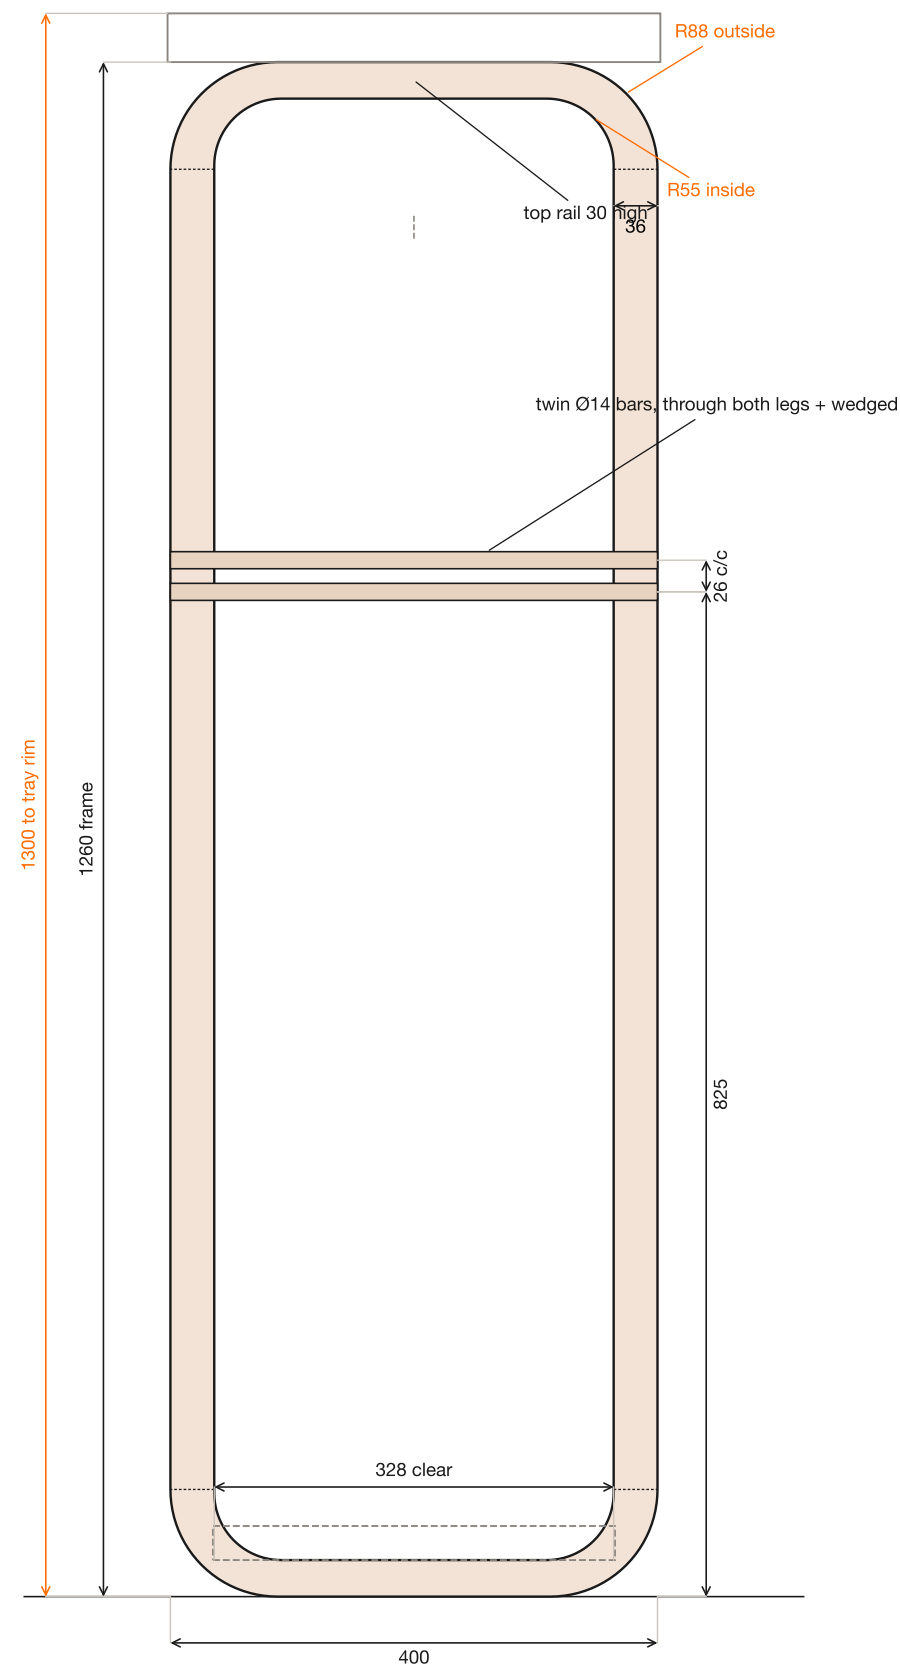

FRONT ELEVATION

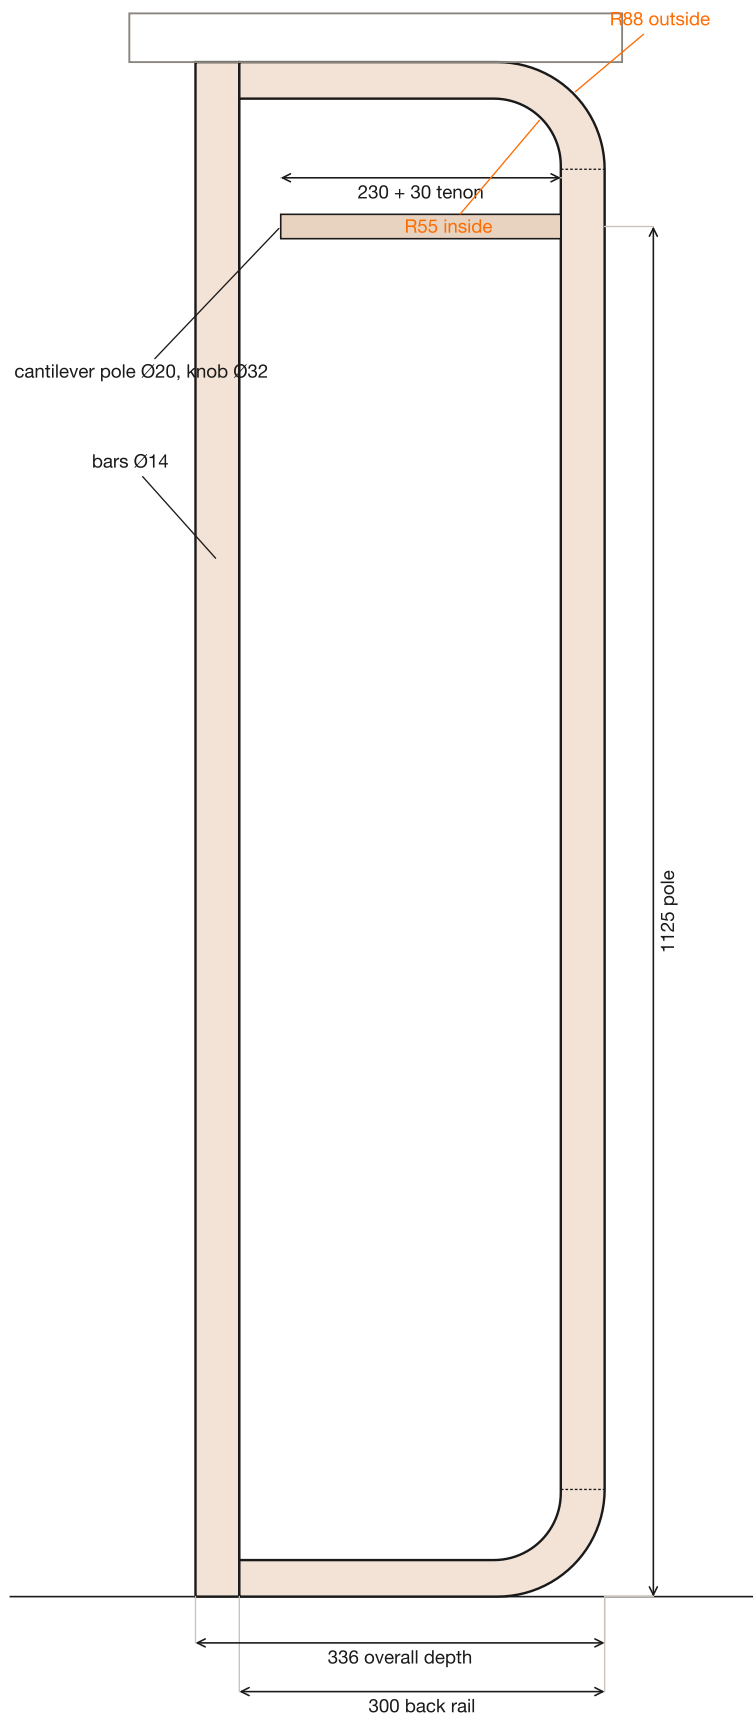

SIDE ELEVATION

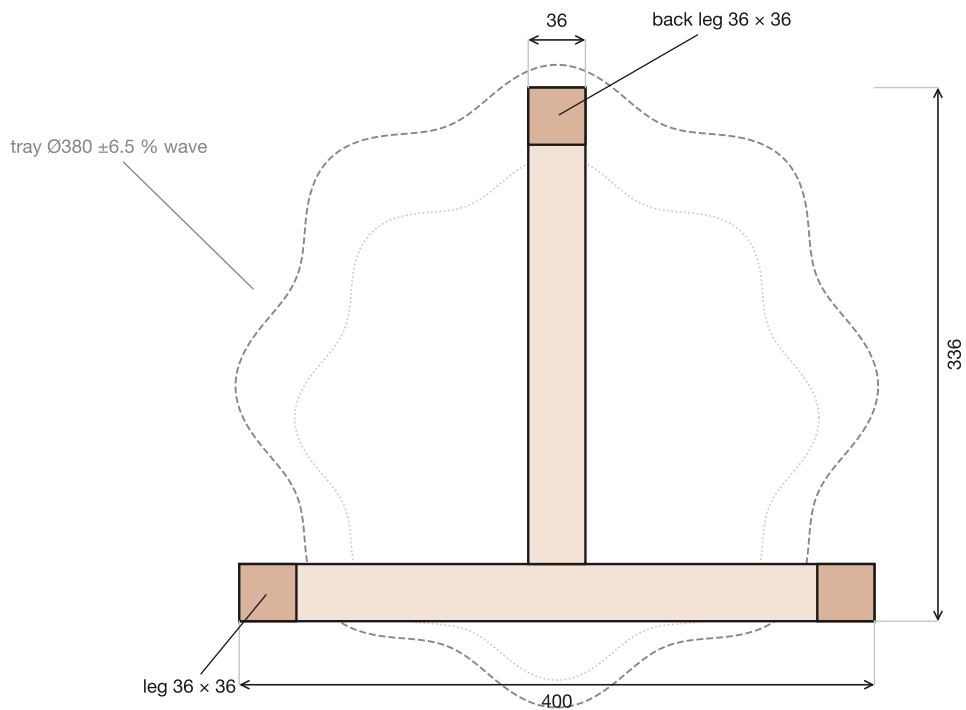

PLAN (tray dashed)

- Frame stock: mahogany (sipo), finished 36 mm thick.
- Rounded corners are carried by the rail pieces; legs join them where the curve ends (dashed lines), 2× Ø8 × 70 dowels per joint (35 + 35).
 - Rails cut from 88-mm-tall blanks; outer R88 and inner R55 with a template + flush-trim bit (inner: bandsaw + spindle sander).
 - Back rails join the back face of the front top / bottom rails with 2× Ø8 dowels side by side.
 - Edges eased R2.5 after assembly.
 - Renders show the twin bars side by side; in a 36 mm leg build them stacked (as drawn).


Valet stand — frame

Sheet 2/2

Cut list · part details · tray top 1300 mm · corners R88 outside / R55 inside · all dimensions in mm

	PART	QTY	LENGTH	SECTION	WOOD	NOTES
A	Front leg	2	1084	36 × 36	Mahogany	straight between the curved rail pieces; 2× Ø8 dowel holes each end
B	Front top rail	1	400	88 × 36	Mahogany	outer R88 both ends, inner R55; rail 30 high in the middle
C	Front bottom rail	1	400	88 × 36	Mahogany	mirror of B; sits on the floor (glides optional)
D	Back leg	1	1084	36 × 36	Mahogany	as A
E	Back top rail	1	300	88 × 36	Mahogany	R88/R55 at the back end only; front end joins B with 2× Ø8 dowels
F	Back bottom rail	1	300	88 × 36	Mahogany	mirror of E; joins C with 2× Ø8 dowels
G	Trouser bars	2	400	Ø14	Mahogany	through both front legs at 825 / 851 from floor = 737 / 763 from leg bottom
H	Hanger pole	1	260	Ø20	Mahogany	30 mm into D at 1125 from floor = 1037 from leg bottom; knob Ø32 × 24
—	Alt: single bar	1	400	Ø24	Mahogany	instead of G, at 838

B / C — front top & bottom rail (blank 400 × 88 × 36), dowel holes Ø8 into the legs

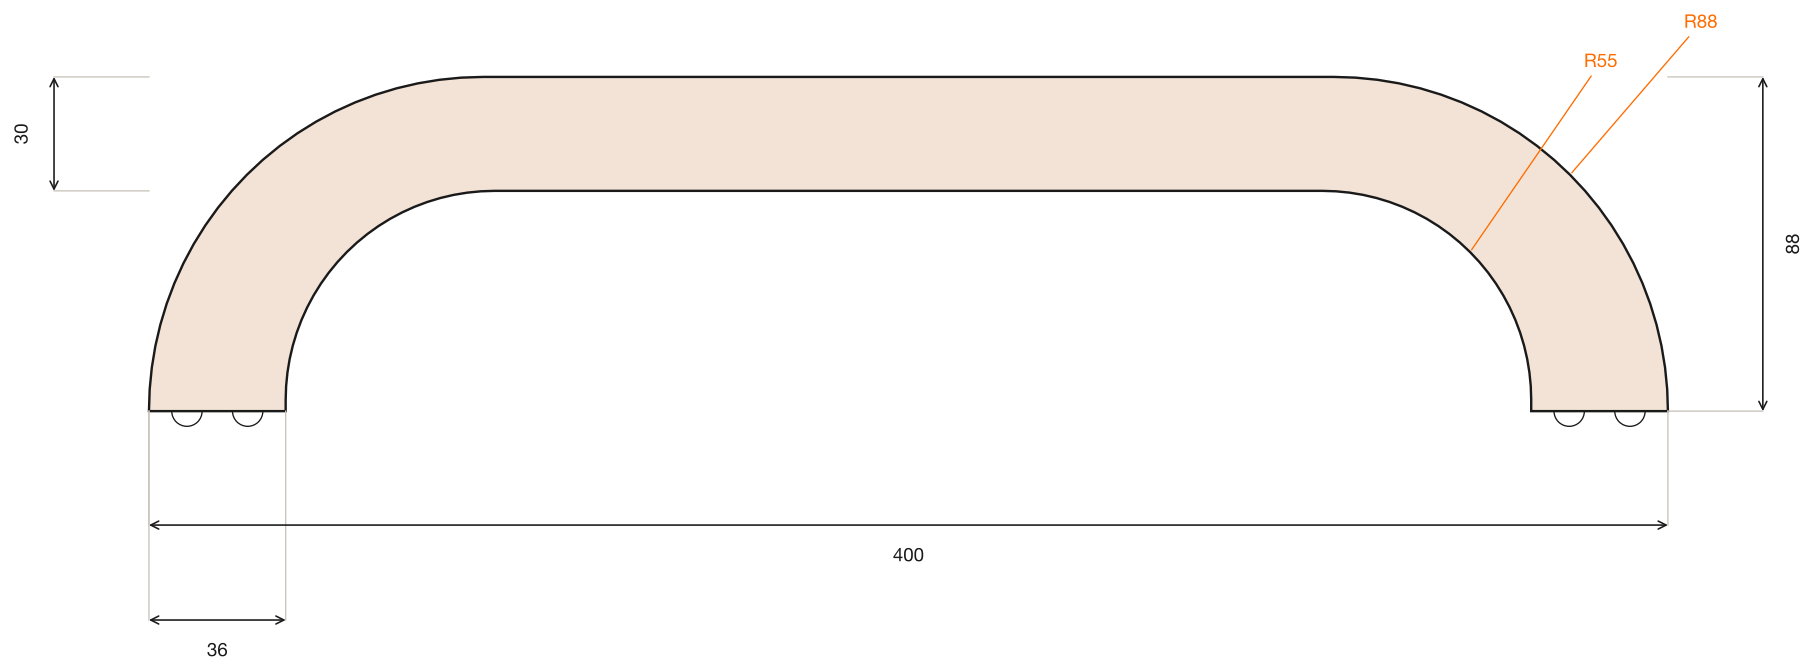

Order of work

1. Mill all mahogany to 36 mm; rip legs to 36 × 36.
2. Cut rail blanks 88 mm tall; make one MDF template with R88/R55 and copy all four rail pieces with a flush-trim bit.
3. Cut legs to 1084; drill 2× Ø8 dowel holes, 35 mm deep, both ends (centres 8 mm either side of the leg centre); 70 mm dowels bridge the short grain at the foot of each curve.
4. Drill the twin Ø14 bar holes through both front legs at 825 and 851 before glue-up.
5. Glue the front frame flat (A + B + C + bars), then the back C (D + E + F), then dowel the back C into B and C.
6. Drill the Ø20 pole tenon hole into D at 1125, 30 deep; ease all edges R2.5; finish.