



Valet stand — frame


Front elevation · side elevation · plan · tray top 1100 mm (recommended for a 155 cm user) · corners R45 outside / R12 inside · all dimensions in mm

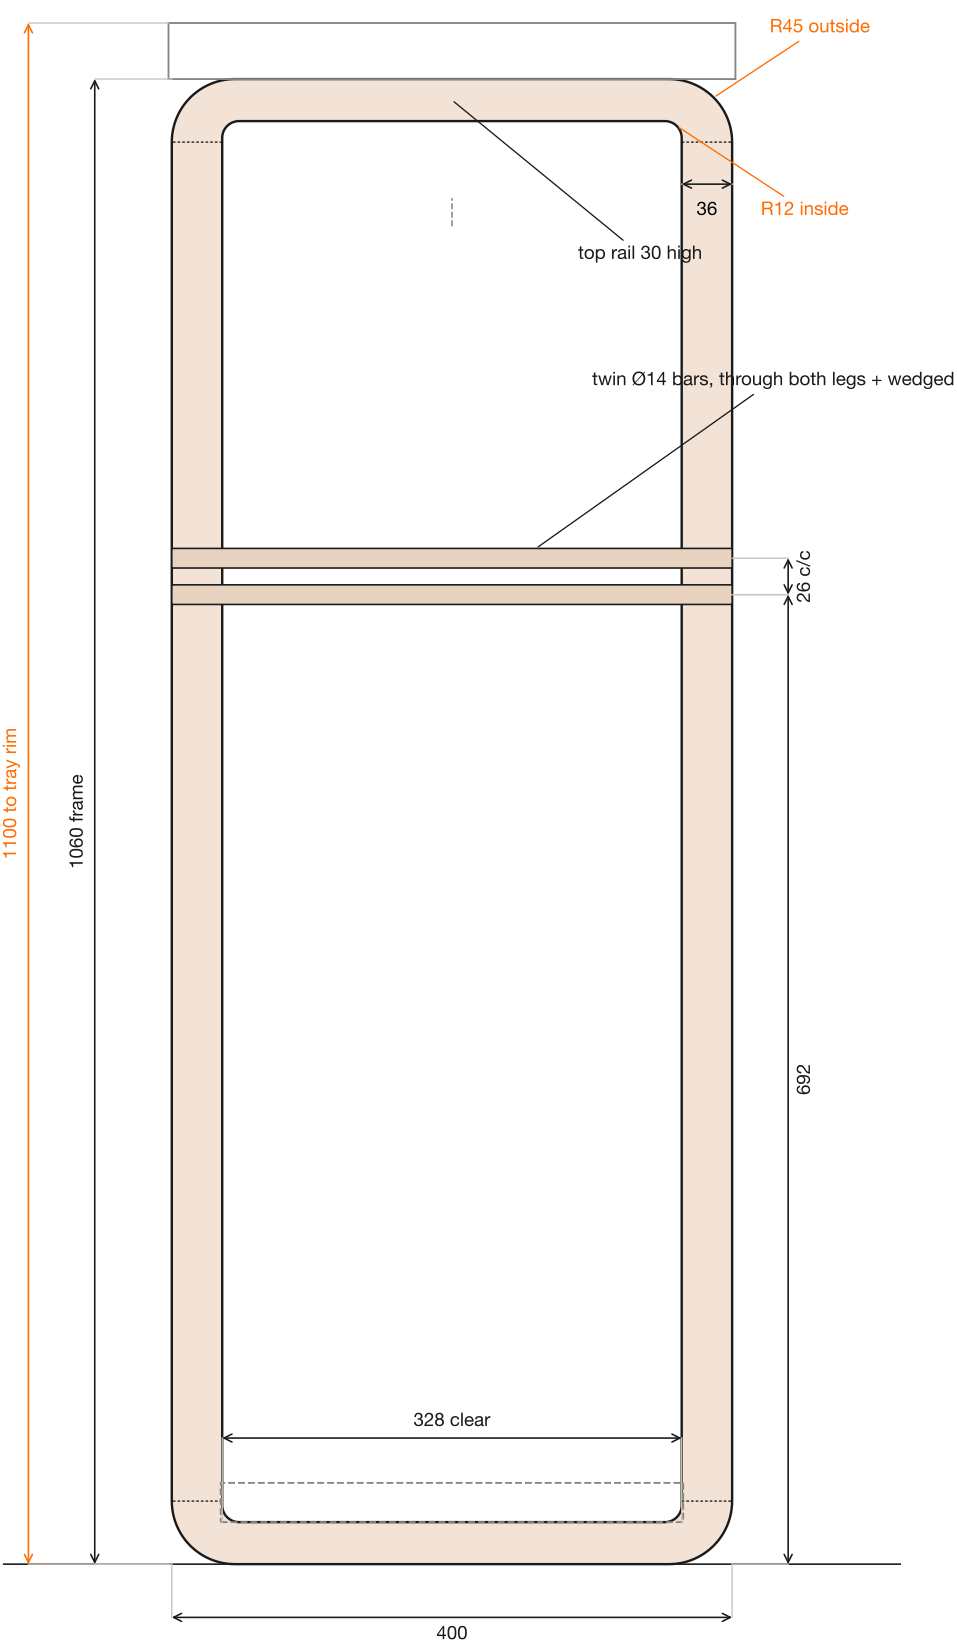

FRONT ELEVATION

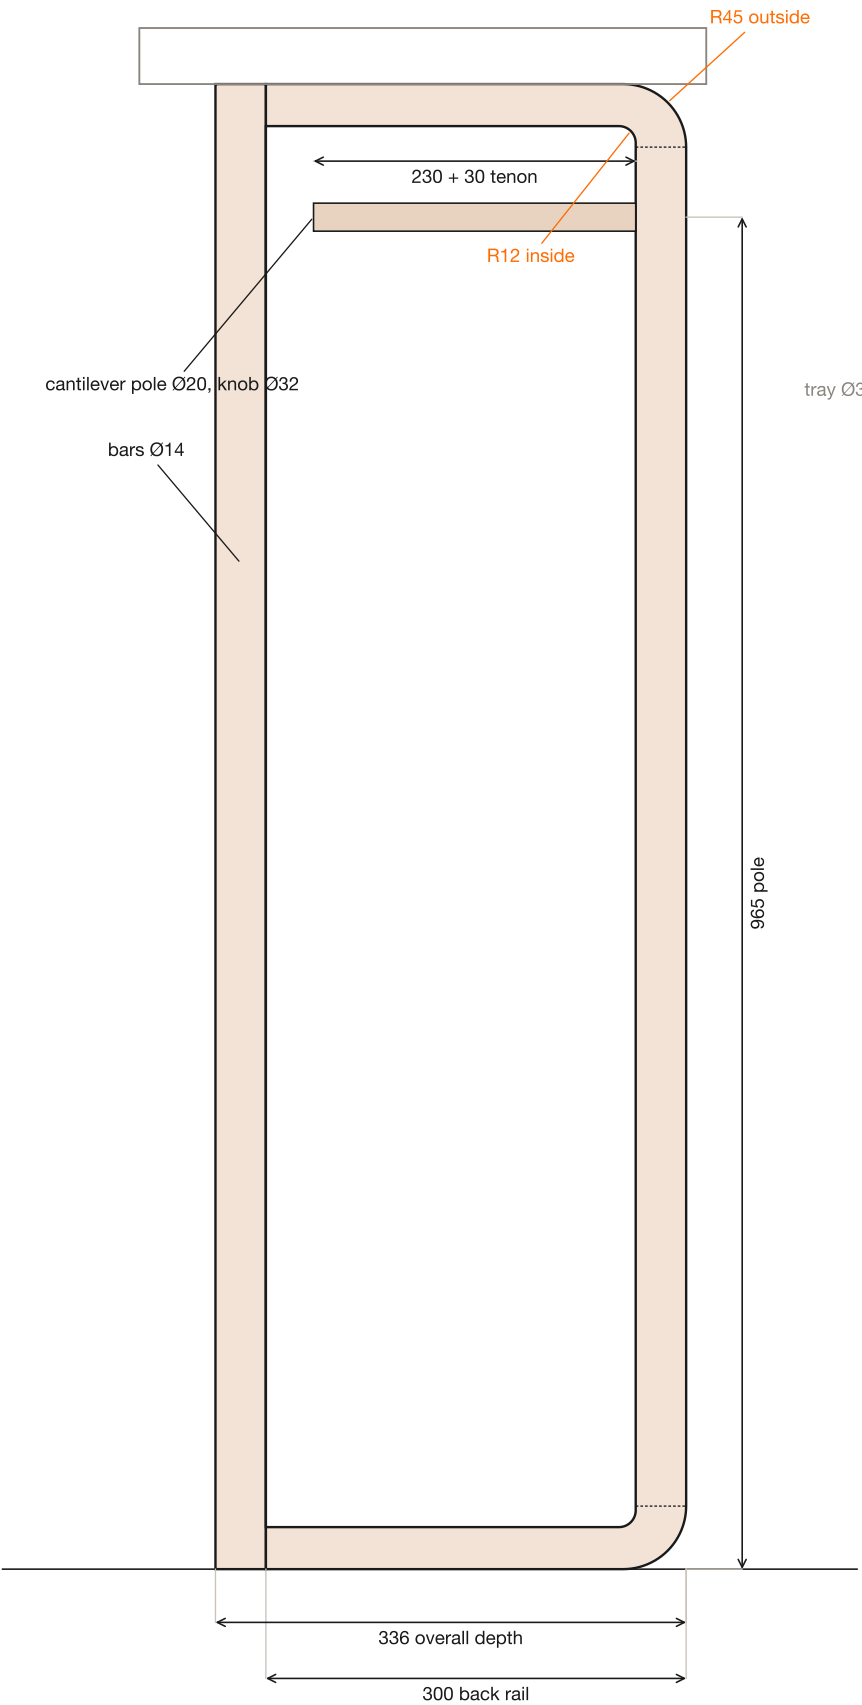

SIDE ELEVATION

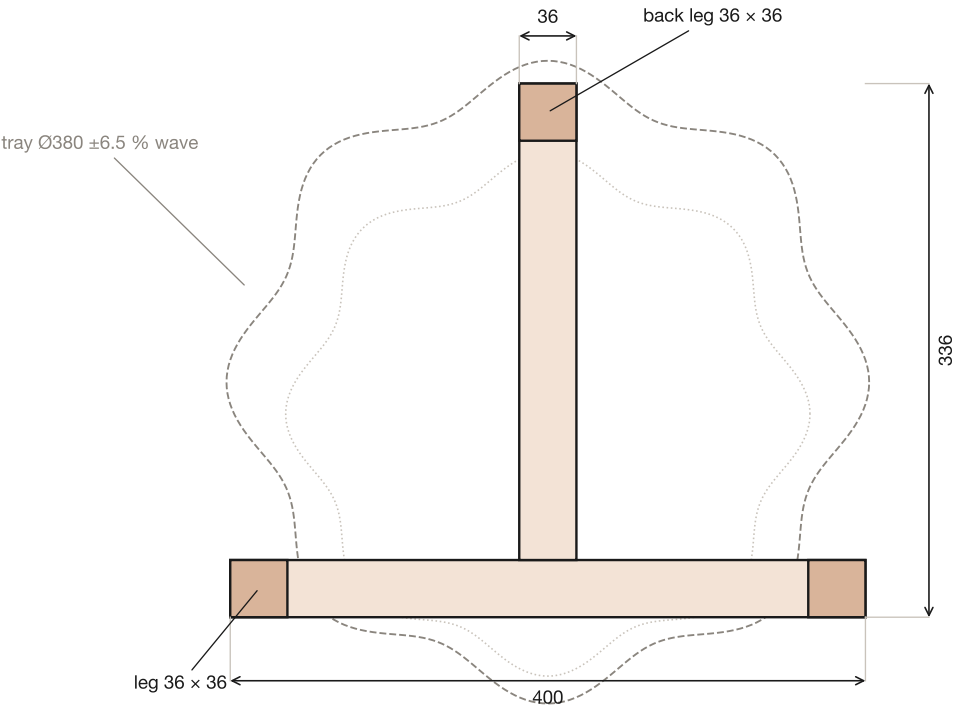


PLAN (tray dashed)

- Frame stock: mahogany (sipo), finished 36 mm thick.
- Rounded corners are carried by the rail pieces; legs join them where the curve ends (dashed lines), 2× Ø8 dowels per joint.
 - Rails cut from 45-mm-tall blanks; outer R45 and inner R12 with a template + flush-trim bit (inner: bandsaw + spindle sander).
 - Back rails tenon into the back face of the front top / bottom rails.
 - Edges eased R2.5 after assembly.
 - Renders show the twin bars side by side; in a 36 mm leg build them stacked (as drawn).

Cut list · part details · tray top 1100 mm (recommended for a 155 cm user) · corners R45 outside / R12 inside · all dimensions in mm

	PART	QTY	LENGTH	SECTION	WOOD	NOTES
A	Front leg	2	970	36 × 36	Mahogany	straight between the curved rail pieces; 2× Ø8 dowel holes each end
B	Front top rail	1	400	45 × 36	Mahogany	outer R45 both ends, inner R12; rail 30 high in the middle
C	Front bottom rail	1	400	45 × 36	Mahogany	mirror of B; sits on the floor (glides optional)
D	Back leg	1	970	36 × 36	Mahogany	as A
E	Back top rail	1	300	45 × 36	Mahogany	R45/R12 at the back end only; front end tenons into B
F	Back bottom rail	1	300	45 × 36	Mahogany	mirror of E; tenons into C
G	Trouser bars	2	400	Ø14	Mahogany	through both legs at 692 / 718; wedged with maple
H	Hanger pole	1	260	Ø20	Mahogany	30 mm blind tenon into D at 965; knob Ø32 × 24 turned
—	Alt: single bar	1	400	Ø24	Mahogany	instead of G, at 705

B / C — front top & bottom rail (blank 400 × 45 × 36), dowel holes Ø8 into the legs

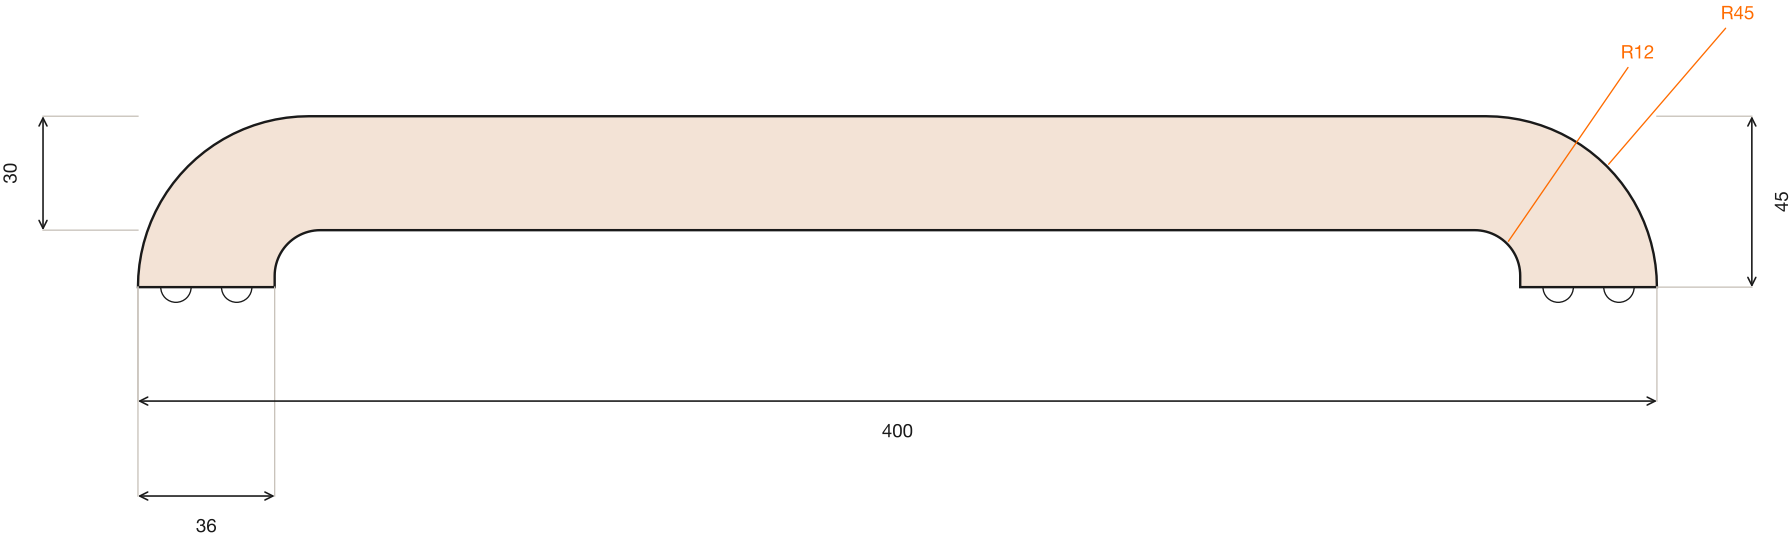

Order of work

1. Mill all mahogany to 36 mm; rip legs to 36 × 36.
2. Cut rail blanks 45 mm tall; make one MDF template with R45/R12 and copy all four rail pieces with a flush-trim bit.
3. Cut legs to 970; drill 2× Ø8 dowel holes, 25 mm deep, both ends (dowel centres 8 mm either side of the leg centre).
4. Drill the twin Ø14 bar holes through both front legs at 692 and 718 before glue-up.
5. Glue the front frame flat (A + B + C + bars), then the back C (D + E + F), then join with tenons into B and C.
6. Drill the Ø20 pole tenon hole into D at 965, 30 deep; ease all edges R2.5; finish.